

ED-T70W-2 software revision history

In this document you will find what is changed and what has been updated between the different releases for ED-T7. You will also find an instruction on how to update the software in ED-T70W-2

1.0-1-10 (build 32c692c)

- ED-T70W-2 could hang when clicking on the top pixels of the screen
- (the reason being the display os caught waiting for a possible swipe down to reach settings menu. Workaround is swipe in any direction to release the lock) Fixed a problem with update that on some displays caused out of memory problem
- This problem is fixed by removing the swipe-down command to reach settings menu, the only way to reach settings menu is now making a 2 second click/touch on the screen

ED-T70W-2 instruction to update application

- ✓ Prepare everything for the application update.
- ✓ Remove the back cover and the cable, see instruction [ed_t70w_2_in20087_en_se_de_fr.pdf](#)
- ✓ Remove the 4 screws (red arrows in the picture below) and remove the inner back plate carefully. Use a small screwdriver to lift the back plate at the edge without damaging the rubber-sealing.

Please note: There are two circuit boards inside, one mounted on the display and the other mounted on the back plate. The connector that connects the two circuit boards is located between the USB and network port (green circle in the picture).




- ✓ In the next step you need to connect the display via USB to your computer to get access to the filesystem of the display.
 - Press and hold the button, green circle
 - Connect a USB cable to the display connector (red circle) and connect the other end of the cable to a USB port on the computer.
 - Wait until the display appears as a drive in the computer's file system.
 - Now release the button.

AB Regin

Tel: +46 31 720 02 00
E-mail: info@regin.se
www.regincontrols.com

Address:
Bangårdsvägen 35
428 36 Kålleröd

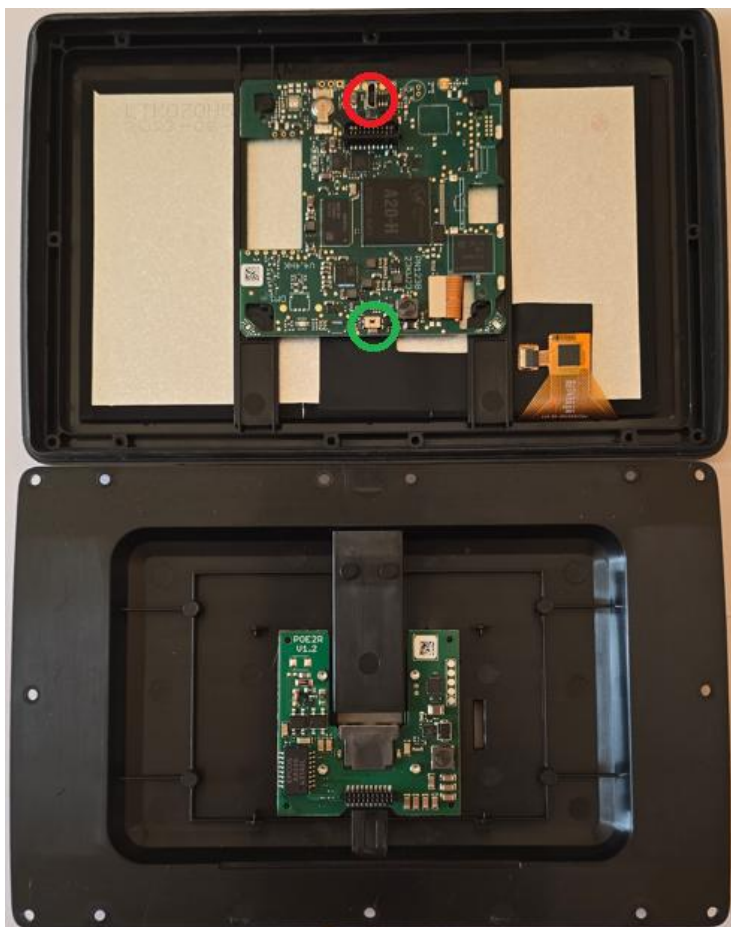

- ✓ Replace the file “ovl-32-controllersselect.img” by the new version.

boot.itb		ITB File	10.606 KB
boot		Screen saver	10 KB
fstab		File	1 KB
ovl-01-rootfs		Disc Image File	116.736 KB
ovl-09-qt-5.12		Disc Image File	82.280 KB
ovl-15-mec-qml-5.12		Disc Image File	4.872 KB
ovl-21-bsp-dm1		Disc Image File	1.772 KB
ovl-22-libModbusMec		Disc Image File	64 KB
ovl-31-meczero		Disc Image File	524 KB
ovl-32-controllersselect	16.09.2025 15:24	Disc Image File	1.444 KB
ovl-35-bspd		Disc Image File	192 KB
uEnv		Text Document	1 KB

- ✓ Disconnect the USB-cable from the display.

AB Regin

Tel: +46 31 720 02 00
E-mail: info@regin.se
www.regincontrols.com

Address:
Bangårdsvägen 35
428 36 Kålleröd

- ✓ Fit the back panel, ensuring that the circuit board is correctly positioned on the display so that the two parts of the connector connect properly.
- ✓ Fit the 4 screws to secure the rear panel correctly.
- ✓ Assemble the cable and the back cover as shown in the instruction.

AB Regin

Tel: +46 31 720 02 00
E-mail: info@regin.se
www.regincontrols.com

Address:

Bangårdsvägen 35
428 36 Kålleröd