


Exempel 108

Funktionsbeskrivning: Panna (2-steg + behov), Varmvatten 1 (ackumulatortank + PI-styrd framl.), oblandad värmekrets 1

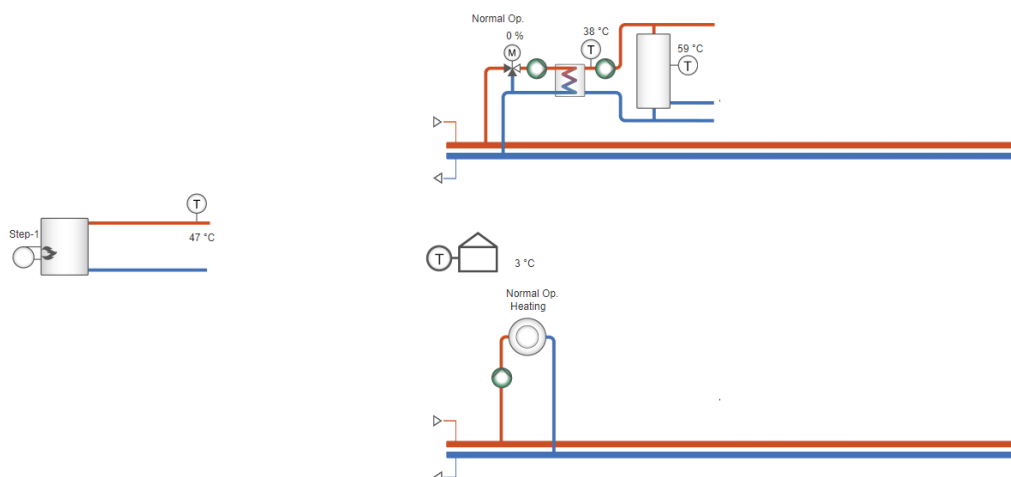

Utetemperatur	AI1
	AI2
	AI3
VV1 tanktemp mitten	AI4
VV1 framledningstemp	UI1
Panna framledningstemp	UI2
	UI3
	UI4
	DI1
	DI2
Värmebehov	AO1
	AO2
	Agnd
	AO3
	M-B
	M-A

AI1	17	N	16
AI2	18	L	15
AI3	19		14
AI4	20		13
UI1	21		12
UI2	22		11
UI3	23		10
UI4	24		9
DI1	25		8
DI2	26		7
AO1	27		6
AO2	28		5
Gnd	29		4
	30		3
	31		2
	32		1

DO7	
DO6	
DO5	
DO4	
DO3	
DO2	
DO1	

N	
L	
C7	
DO7	VV1 tankpump A
DO6	Panna 1 steg 2
C5-6	
DO5	Panna 1 steg 1
DO4	VV1 Ventil stäng
C3-4	
DO3	VV1 Ventil öppna
DO2	VV1 vvx-pump A
C1-2	
DO1	VS1 Pump A

Plintanslutningar

Tillgänglig för: HCV191DW-2, HCV192DW-2, HCV203DWM-2

Application tool-fil: 108_HCVxxxxx_HB2S_HWTS_HSpu