



WE TAKE BUILDING
AUTOMATION PERSONALLY

en

VARIABLE LIST

RCW-M32



THANK YOU FOR CHOOSING REGIN!

Ever since Regin was established in 1947, we have developed and marketed products and systems that create good levels of indoor comfort. Today, we are an important player with one of the market's broadest ranges for building automation.

Our goal is to make real estates in the world more energy efficient. Regin is an international group and our products sells in over 90 countries. Thanks to our global presence with strong local representation, we are well aware of the requirements of the market, as well as of how our products and systems function under the most variable conditions. Every year, Regin makes substantial investments in the development of our systems and HVAC-products.

DISCLAIMER

The information in this manual has been carefully checked and is believed to be correct. Regin makes no warranties about the contents of this manual and users are requested to report errors and discrepancies to Regin, so that corrections may be made in future editions. The information in this document is subject to change without prior notification.

Some product names mentioned in this document are used for identification purposes only and may be the registered trademarks of their respective companies.

© AB Regin. All rights reserved.

Rev. D, 2023-10-12

Table of Contents

1	Introduction	5
1.1	Wireless receiver RCW-M32	5
1.2	Modbus protocol in general	5
1.3	RTU/ASCII modes	5
1.4	Modbus register types	5
2	Display configuration and usage	7
2.1	Wiring	7
2.2	Settings	7
2.2.1	Menu A: Pair and unpair sensors	8
2.2.2	Menu B: Modbus address, as hexadecimal numbers	9
2.2.3	Menu C: Communication speed (baud rate)	9
2.2.4	Menu D: Parity and stop bit	9
2.2.5	Menu E: Selected frequency	9
2.2.6	Menu F: Current software version	9
3	Configuration via Modbus	10
3.1	Introduction	10
3.2	Sensor device ID (register 37101-37132)	10
3.3	Pairing with test button	11
3.3.1	Pairing (register 47001-47032)	11
3.3.2	Pairing using the device ID (register 47201-47232)	11
3.4	Pairing without test button	11
3.5	Unpairing	12
3.5.1	Unpairing (register 47001-47032)	12
3.5.2	Unpairing using the device ID (register 47251-47282)	12
3.6	Device type (register 37001-37032)	12
3.7	Wake up time (register 40101-40132)	12
3.8	Reboot (register 49101)	12
3.9	Alarms (register 10101-10132, 10201-10232, 10301-10332)	13
4	Variable list	14
4.1	Discrete input	14
4.2	Input registers	14
4.3	Holding registers	14

I Introduction

I.1 Wireless receiver RCW-M32

The wireless receiver communicates with up to 32 wireless sensors and detectors. It is a Modbus slave that uses RTU.

The variable list is a compilation of all the variables that can be read and variables that can be changed in the wireless system.



Note! Ensure that the incoming signal is strong enough for full wireless functionality. The signal range can be affected by the surroundings, such as thick walls or metal doors. In some cases it might not be suitable to use wireless communication.

I.2 Modbus protocol in general

The Modbus protocol is a general-purpose protocol for data exchange between for instance control units, SCADA systems, instruments, and electricity meters. It's an asynchronous, serial Master Slave protocol. It's widely used, well documented and simple to understand.

A Modbus master can communicate with up to 247 slave units with the device ID 1-247. A protocol like Modbus consists of several layers (OSI-model). The bottom layer is always the physical layer; the number of wires and signal levels. The next layer describes the communication digits (number of data bits, stop-bits, parity etc.). Next are the layers describing the Modbus-specific functions (number of digits per message, the meaning of different messages, etc.).

I.3 RTU/ASCII modes

The Modbus protocol has two modes: binary (RTU) or character based (ASCII). According to the Modbus standard all devices must have the RTU mode implemented.

The receiver is a Modbus slave that uses RTU. In RTU mode all registers are transferred in binary format with two hexadecimal digits (0x00-0xFF) in each byte.

RTU mode format:

- ✓ 1 start bit
- ✓ 8 data bits
- ✓ Odd, even or no parity bit
- ✓ 1 or 2 stop bits. Normally if no parity is used then 2 stop bits should be used.
- ✓ Check sum: 16 bits CRC

I.4 Modbus register types

1. Coil Status Register (Modbus function = 1, 5 and 15)
2. Discrete Input (Modbus function = 2)
3. Holding Register (Modbus function = 3, 6 and 16)
4. Input Register (Modbus function = 4)


Introduction

Supported Modbus functions:

- ✓ 2 = Read Discrete Input
- ✓ 3 = Read Holding Register
- ✓ 4 = Read Input Register
- ✓ 6 = Write Single Register
- ✓ 16 = Write Multiple Registers

2 Display configuration and usage

2.1 Wiring

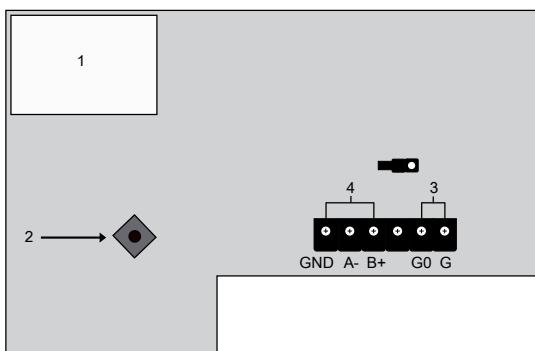

Number	Description
1	Display
2	Joystick with <i>Menu button</i>
3	Supply voltage terminal
4	RS485 terminal

2.2 Settings



Note! A minimum of -90 dB is recommended for the incoming signal for full wireless functionality. The signal strength can be seen in Modbus.

The joystick is used to manoeuvre through the channels, see *Table 2-1*. For each selected channel four different values are shown subsequently in the display:

1. Current channel, e.g. **01**
2. Received signal strength indicator (RSSI), **s.1...9**
s. = signal strength, **1** = weak signal, **9** = strong signal
 If **s.1** to **s.2** is shown, the signal is too weak to have a good connection. Place the sensor in a different place or in a different orientation.
s.- = no sensor is paired on the selected channel
 Note that the signal strength abbreviation **s.** should not be mistaken for number **5**.
3. Value 1 for the sensor or detector (if available), **0...99**. If both value 1 and 2 are available, value 1 always shows the temperature.
4. Value 2 for the sensor or detector (if available), **0...99**. Value 2 can for example show the humidity.



Note! After a power cut of the receiver, the sensor and detector readings will be set to temporary values. The receiver awaits new readings from the sensors before communicating with the controller again.

Table 2-1 Navigating the channels

Description	Manoeuvre	Time
Activate the display	Press the <i>Menu button</i>	1 s
Move to the subsequent channel	Push UP	1 s

Display configuration and usage

Table 2-1 Navigating the channels (continued)

Description	Manoeuvre	Time
Move to the preceding channel	Push DOWN	1 s
Jump 8 channels forward	Push RIGHT	1 s
Leave the menu and inactivate the display	Push LEFT	3 s

Many default settings can be changed via the display. The joystick is used to navigate within the menu as shown in *Table 2-2*. To enter the menu, press the *Menu button* 4 s when the display is inactive. Six levels are available:

1. A: Pair and unpair sensors
2. B: Modbus addresses, as hexadecimal numbers
3. C: Communication speed (baud rate)
4. D: Parity and stop bit
5. E: Selected frequency
6. F: Current software version

Table 2-2 Navigating the menu

Description	Manoeuvre	Time
Enter into the menu	Press the <i>Menu button</i> when the display is inactive	4 s
Move between the different levels in the menu (A-F)	Push UP or DOWN	1 s
Enter into one level	Press the <i>Menu button</i>	1 s
Move between different values within one level	Push UP or DOWN	1 s
Leave the menu and inactivate the display	Push LEFT	3 s

2.2.1 Menu A: Pair and unpair sensors

The receiver can pair up to 32 sensors and detectors. This can be done either manually via the settings menu or via the Modbus communication. To pair and unpair via Modbus communication, see chapter 3.3 and 3.4.

Manual pairing:

1. Enter into the menu as described above and select level A.
2. Press the *Menu button* until channel 01 is displayed.
3. Push UP and navigate to the correct channel.
4. Press the *Menu button* until A+ is displayed.
5. Press the *Menu button* until ** is displayed. A sound is heard.
6. Press the *Test button* on the sensor or detector until you hear a short beep from the receiver.
7. Press the *Menu button* to save the pairing.

To unpair sensors and detectors manually, follow the steps above until A+ is displayed. At that moment push DOWN and R- will be displayed. Confirm by pressing the *Menu button*.



Note! A paired channel first needs to be unpaired before pairing it again.

2.2.2 Menu B: Modbus address, as hexadecimal numbers

Enter into the menu as described in 2.2.1 and select level B. Push UP and navigate to the desired Modbus address for the unit. The address is shown as hexadecimal numbers. Press the *Menu button* to save the selected setting.

2.2.3 Menu C: Communication speed (baud rate)

Enter into the menu as described in 2.2.1 and select level C. Push UP and navigate to the correct setting:

- ✓ 12 = 1200 bps
- ✓ 24 = 2400 bps
- ✓ 96 = 9600 bps
- ✓ 19 = 19200 bps
- ✓ 38 = 38400 bps
- ✓ 57 = 57600 bps

Press the *Menu button* to save the selected setting.

2.2.4 Menu D: Parity and stop bit

Enter into the menu as described in 2.2.1 and select level D. Push UP and navigate to the correct setting:

- ✓ N1 = 1 stop bit, no parity
- ✓ N2 = 2 stop bit, no parity
- ✓ E1 = 1 stop bit, even parity
- ✓ E2 = 2 stop bit, even parity
- ✓ O1 = 1 stop bit, odd parity
- ✓ O2 = 2 stop bit, odd parity

Press the *Menu button* to save the selected setting.

2.2.5 Menu E: Selected frequency

Enter into the menu as described in 2.2.1 and select level E. Push UP and navigate to the correct frequency:

- ✓ F1 = 868.6375 MHz (used in Europe)
- ✓ F2 = 868.2375 MHz (used in China)

2.2.6 Menu F: Current software version

Enter into the menu as described in 2.2.1 and select level F. The current software version is shown, e.g. 11.

3 Configuration via Modbus

3.1 Introduction

The available functions are shown in the variable list, see chapter 4.

3.2 Sensor device ID (register 37101-37132)

Every sensor and detector has a label on which the device ID can be found. In the Modbus register the device ID is displayed and entered in decimal code. On the unit the device ID is displayed in two different ways:

1. On newer models the device ID is shown after the serial number, within brackets. It is shown as decimal code (see *Figure 3-1*).



Figure 3-1 Device ID in decimal code

2. On older models the device ID is imbedded in the serial number, as hexadecimal code. Therefore it can either be recalculated to its decimal value or, if your Modbus tool supports it, be kept as hexadecimal code. The 4-digit hexadecimal ID is located after the first two digits in the serial number (see *Figure 3-2*).



Figure 3-2 Device ID in hexadecimal code

3.3 Pairing with test button

Up to 32 sensors, detectors and/or repeaters can be paired to one receiver. Pair one device at the time. Note that a paired channel first needs to be unpaired before pairing it again.

3.3.1 Pairing (register 47001-47032)



Note! Do NOT use this function with Modbus tools. It can only be used in special controller programs.

1. Set "Holding register" 47001 to 1 to pair a sensor to channel 1.
2. Press the Test button on your sensor. If the pairing was successful and the display is activated, you will hear a short beep from the receiver. The sensor is now paired to channel 1.
3. To pair a sensor to channel 2, set Modbus register 47002 to 1 and so on (up to 47032).

3.3.2 Pairing using the device ID (register 47201-47232)



Note! This alternative does not apply to the repeater RPW

1. Set "Holding register" 47201 to the sensor device ID to pair the sensor on channel 1.
2. Press the *Test button* on your sensor. If the pairing was successful and the display is activated, you will hear a short beep from the receiver. The sensor is now paired to channel 1.
3. To pair a sensor on channel 2, set Modbus register 47202 to the sensor device ID and so on (up to 47232).

3.4 Pairing without test button



Note! This alternative does not apply to the repeater RPW

Using the device ID (register 47101-47132):

1. Set "Holding register" 47101 to the sensor device ID to pair the sensor on channel 1. If the pairing was successful and the display is activated, you will hear a short beep from the receiver. The sensor is now paired to channel 1.
2. To pair a sensor on channel 2, set Modbus register 47102 to the sensor device ID and so on (up to 47132).



Note! A paired channel will be overwritten without warning when a new pairing is made without using the test button.

3.5 Unpairing

3.5.1 Unpairing (register 47001-47032)



Note! Do NOT use this function with Modbus tools. It can only be used in special controller programs.

1. Set "Holding register" 47001 to 3 to unpair the sensor on channel 1.
2. To unpair a unit on channel 2, set Modbus register 47002 to 3 and so on (up to 47032).

3.5.2 Unpairing using the device ID (register 47251-47282)



Note! This alternative does not apply to the repeater RPW

1. Set "Holding register" 47251 to the sensor device ID to unpair the sensor on channel 1.
2. To unpair a sensor on channel 2, set Modbus register 47252 to the sensor device ID and so on (up to 47282).

3.6 Device type (register 37001-37032)

Name	Description	Device type
DCW	Wireless door contact	10
IRW	Wireless IR detector	21
IRCW	Wireless IR detector	23
TG-R5W	Wireless room temperature sensor	100
HTRT5W	Wireless room temperature and humidity sensor	101
TG-R6EW / TG-R6W	Wireless outdoor temperature sensor	120
EPRW	Wireless optical pulse counter	200
RPW	Repeater	9998

3.7 Wake up time (register 40101-40132)

The wake up time for a sensor, i.e. the time interval when the sensor collects information from the surroundings, can be set via Modbus. The factory setting is 2 minutes.



Note! Changing the wake up time will affect the battery life.

3.8 Reboot (register 49101)

The receiver is rebooted when register 49101 is set to 0000. Since it is a preset single register (F06) the procedure depends on the used Modbus master application. Register 49010 (48h RSSI cycle time) is reset at reboot, thus the cycle restarts.

3.9 Alarms (register 10101-10132, 10201-10232, 10301-10332)

Alarms are available for different functionalities according to the variable list, see chapter 4.1. All alarms are reset automatically after the cause has been resolved.

4 Variable list

4.1 Discrete input



Caution! All 32 registers have to be included in the Modbus request when reading, regardless of the amount of configured devices. It is not possible to read only a few devices.

Modbus register	Device	Description	Available modbus function
10001-10032	DCW / IRW	DCW/IRW condition (on/off)	F02
10101-10132	All	Sensor low battery alarm	F02
10201-10232	DCW / IRW / IRCW / RPW	Sensor tamper alarm. Is activated when the sensor is removed or tampered with	F02
10301-10332	All	Sensor supervision alarm. Is activated when the sensor has not been communicating with the receiver during preset time span (49002-49004). Default is 240 min	F02

4.2 Input registers

Modbus register	Device	Description	Unit	Scale	Available modbus function
30001-30032	TG-R6W / TG-R5W / TG-R6EW / HTRT5W	Temperature	°C	100	F04
30101-30132	EPRW	Power	W	-	F04
30201-30264	EPRW	Energy (2 registers/channel)	kWh	100	F04
30301-30332	-	Spare	-	-	F04
30401-30432	HTRT5W	Humidity	% RH	-	F04
37001-37032	All	Device type (see chapter 3.6)	-	-	F04
37101-37132	All	Device ID of paired device given as decimal code (see chapter 3.2)	-	-	F04
37201-37232	All	RSSI signal strength	dB	-	F04
37301-37332	All	RSSI minimum signal strength during a cycle of 48 hours (worst level the last 48 hour cycle)	dB	-	F04

4.3 Holding registers

Modbus register	Device	Description	Unit	Scale	Default	Available modbus function
40001-40032	DCW / IRW / IRCW	Counter for DI. max count = 65535	nbr	-	-	F03 / F06 / F16
40101-40132	TG-R6W / TG-R5W / HTRT5W / TG-R6EW	Wake up time min = 10 s, max = 300 s	s	10	12 (=120 s)	F03 / F06 / F16
40201-40264	EPRW	Energy (2 registers/channel) max = 99999 kWh per channel	kWh	100	-	F03 / F06 / F16
40301-40332	EPRW	Pulse counter (stated on the electrical meter)	Imp/kWh	-	1000	F03 / F06 / F16

Modbus register	Device	Description	Unit	Scale	Default	Available modbus function
47001-47032	All	Pairing and unpairing sensor or device, one at a time. See <i>chapter 3.3</i> and <i>chapter 3.5</i> 1=pair/connect, 3=unpair/disconnect	-	-	-	F06
47101-47132	All	Pairing sensor or device using the device ID, without using the <i>Test button</i> . See <i>chapter 3.4</i>	-	-	-	F03 / F06 / F16
47201-47232	All	Pairing sensor or device using the device ID and the <i>Test button</i> . See <i>chapter 3.3</i>	-	-	-	F03 / F06 / F16
47251-47282	All	Unpairing sensor or device using the device ID, without using the <i>Test button</i> . See <i>chapter 3.5</i>	-	-	-	F06 / F16
47301-47332	TG-R6EW / HTRT5W	Smallest temperature change required for registration ¹ min = 0.2 °C, max = 5 °C	°C	0.1	Room: 2 (= 0.2 °C) Outdoor: 10 (= 1 °C)	F03 / F06 / F16
47401-47432	HTRT5W	Smallest humidity change required for registration ¹ min = 2 % RH, max = 10 % RH	% RH	-	2	F03 / F06 / F16
49001	IRW / IRCW	Time for active on-signal	s	-	5	F03 / F06 / F16
49002	DCW / IRW / IRCW	Time before alarm when sensor is unavailable ¹ min = 7200 s	s	-	14400	F03 / F06 / F16
49003	EPRW	Time before alarm when sensor is unavailable ¹ min = 7200 s	s	-	14400	F03 / F06 / F16
49004	TG-R6W / TG-R5W / HTRT5W / TG-R6EW	Time before alarm when sensor is unavailable ¹ min = 7200 s	s	-	14400	F03 / F06 / F16
49005	RPW	Time before alarm when sensor is unavailable ¹ min = 7200 s	s	-	14400	F03 / F06 / F16
49006	TG-R5W / HTRT5W	Default wake up time. Changes only applies to sensors or devices paired after the change has been implemented. ¹	s	10	12 (= 120 s)	F03 / F06 / F16
49007	EPRW	Default number of impulses per kWh. Changes only applies to sensors or devices paired after the change has been implemented. ¹	imp/kWh	-	1000	F03 / F06 / F16
49010	All	The time left of 48 h. Used for RSSI (37301-37332). Will be reset to default value at the end of the cycle. max = 2880 min	min	-	2880	F03 / F06 / F16
49011	EPRW	Reporting time of Power ¹ Changes only applies to sensors or devices paired after the change has been implemented.	s	5	60 (= 300 s)	F03 / F06 / F16
49012	RCW-M32	Frequency select ² 0 = 868.6375 MHz (Europe), 1 = 868.2375 MHz (China) ³	-	-	0 (= 868.6375 MHz)	F03 / F06 / F16
49013	RCW-M32	Baud Rate ² 0 = 1200 bps, 1 = 2400 bps, 2 = 9600 bps, 3 = 19200 bps, 4 = 38400 bps, 5 = 57600 bps	-	-	2	F03 / F06 / F16

Variable list

Modbus register	Device	Description	Unit	Scale	Default	Available modbus function
49014	RCW-M32	Parity/Stop bits ² ✓ 0 = 1 stop bit, no parity ✓ 1 = 2 stop bit, no parity ✓ 2 = 1 stop bit, even parity ✓ 3 = 2 stop bit, even parity ✓ 4 = 1 stop bit, odd parity ✓ 5 = 2 stop bit, odd parity	-	-	0	F03 / F06 / F16
49015	RCW-M32	Modbus address ²	-	-	1	F03 / F06 / F16
49016	HTRT5W	Smallest indoor temperature change required for registration. Changes only applies to devices paired after the change has been implemented. ¹ min = 0. 2 °C, max = 5 °C	°C	0.1	2 (= 0.2 °C)	F03 / F06 / F16
49017	TG-R6EW	Smallest outdoor temperature change required for registration. Changes only applies to devices paired after the change has been implemented. ¹ min = 0. 2 °C, max = 5 °C	°C	0.1	10 (= 1 °C)	F03 / F06 / F16
49018	HTRT5W	Smallest humidity change required for registration. Changes only applies to devices paired after the change has been implemented. ¹ min = 2 % RH, max = 10 % RH	% RH	-	2	F03 / F06 / F16
49101	RCW-M32	Reboot unit 0000 = reboot	-	-	-	F06
49201-49203	RCW-M32	Delete and reset ⁴ ✓ Reset system parameters (49001-49018, except 49010) to default: <i>register input</i> 49201 21093 49202 26473 49203 28209 ✓ Delete all sensors: <i>register input</i> 49201 21093 49202 26473 49203 28210 ✓ Delete all sensors & reset system parameters (49001-49018, except 49010) to default: <i>register input</i> 49201 21093 49202 26473 49203 28211	-	-	0	F16
49501-49502	RCW-M32	RF MAC Address (2 registers/channel)	-	-	-	F03 / F16

1. Changing the default value will affect the battery life

2. Reboot (49101) is required after changing the default settings

3. Only works with HTRT5W and TG-R6EW

4. As a safety measure, all three registers have to be set



HEAD OFFICE AB Regin, Box 116, SE-428 22 Källered • Visiting address: Bangårdsvägen 35, SE-428 36 Källered
Phone: +46 (0)31 720 02 00 • Fax: +46 (0)31 720 02 50 • info@regincontrols.com • www.regincontrols.com