

WE TAKE BUILDING
AUTOMATION PERSONALLY

en

VARIABLE LIST CORRIGO 5.0





THANK YOU FOR CHOOSING REGIN!

Ever since Regin was established in 1947, we have developed and marketed products and systems that create good levels of indoor comfort. Today, we are an important player with one of the market's broadest ranges for building automation.

Our goal is to make real estates in the world more energy efficient. Regin is an international group and our products sells in over 90 countries. Thanks to our global presence with strong local representation, we are well aware of the requirements of the market, as well as of how our products and systems function under the most variable conditions. Every year, Regin makes substantial investments in the development of our systems and HVAC-products.

DISCLAIMER

The information in this manual has been carefully checked and is believed to be correct. Regin makes no warranties about the contents of this manual and users are requested to report errors and discrepancies to Regin, so that corrections may be made in future editions. The information in this document is subject to change without prior notification.

Some product names mentioned in this document are used for identification purposes only and may be the registered trademarks of their respective companies.

© AB Regin. All rights reserved.

Rev. H, 2024-02-05

| | | |
|-------|---|----|
| 1 | Corrigo with EXOLine, Modbus and BACnet communication | 5 |
| 1.1 | Introduction | 5 |
| 1.2 | Signal types | 5 |
| 1.2.1 | EXOL type | 5 |
| 1.2.2 | Modbus type | 5 |
| 1.3 | BACnet communication | 6 |
| 1.3.1 | BACnet type | 6 |
| 1.3.2 | BACnet settings..... | 6 |
| 1.4 | Controller address (PLA : ELA)..... | 7 |
| 1.5 | IP-configuration | 8 |
| 1.6 | Modbus..... | 8 |
| 1.6.1 | Communication limitations | 8 |
| 1.6.2 | Scale factor Modbus..... | 9 |
| 1.6.3 | Modbus wiring etc. | 9 |
| 1.6.4 | Max. 47 registers | 9 |
| 1.6.5 | Visualised example | 9 |
| 2 | System integration using Modbus..... | 10 |
| 2.1 | Configuration | 10 |
| 2.2 | Transmission mode | 10 |
| 2.3 | Writing values..... | 10 |
| 2.4 | Reading values | 10 |
| 3 | Coil status register | 11 |
| 4 | Input register..... | 12 |
| 5 | Holding register | 33 |
| 6 | Input status register..... | 76 |

I Corrigo with EXOline, Modbus and BACnet communication

I.1 Introduction

The Corrigo series are pre-programmed controllers for ventilation control. There are two versions of Corrigo with different hardware platforms: The 24 V Corrigo Ardo and the 230 V Corrigo Vido.

The controllers can be used either stand-alone or integrated in a SCADA project. In both cases, they are configured via the configuration tool Application tool on a PC or by using the built in web interface.

This document describes all signals that are accessible via EXOline, Modbus and BACnet.

I.2 Signal types

All signals accessible from a SCADA system are described further in this document. Signals with a default value are settings that can be changed via a SCADA system. Signals without a default value are actual values which cannot be changed using a SCADA system.

I.2.1 EXOL type

The EXOL type of the signals:

R = Real (-3.3E38 - 3.3E38)

I = Integer (-32768 - 32767)

X = Index (0 - 255)

L = Logic (0/1)

I.2.2 Modbus type

The Modbus type of the signals:

1 = Coil Status Register (Modbus function = 1, 5 and 15)

2 = Input Status Register (Modbus function = 2)

3 = Holding Register (Modbus function = 3, 6 and 16)

4 = Input Register (Modbus function = 4)

Supported Modbus functions:

1 = Read Coils

2 = Read Discrete Input

3 = Read Holding Register

4 = Read Input Register

5 = Write Single Coil

6 = Write Single Register

15 = Write Multiple Coils

16 = Write Multiple Registers

1.3 BACnet communication

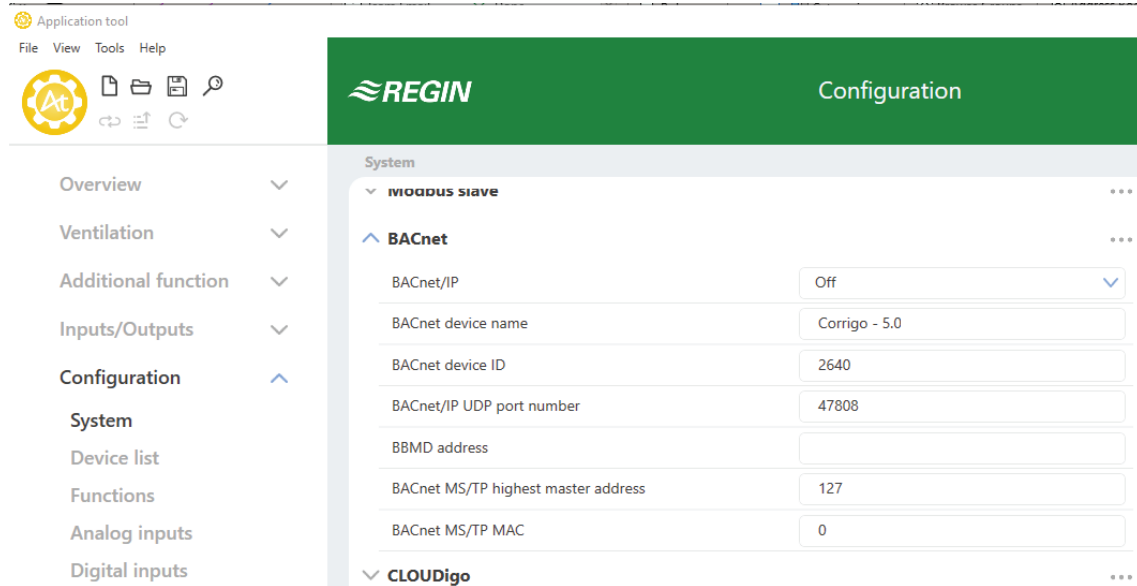


Figure 1-1 BACnet configuration in Application tool

The controller is capable of communication via the BACnet-AAC (Advanced Application Controller) protocol, using either IP or MS/TP data link formats. A B-AAC unit is a device that may be intended for a specific application, but which supports some degree of programmability allows the user to do more – such as generate alarms, define schedules, synchronize clocks, etc.

In order to connect a controller to a BAS (Building Automation System) via BACnet/IP, a controller with a TCP/IP port is required. To connect to a BAS via BACnet MS/TP, a controller with an RS485 communication port is required.

With the default install path entered upon software installation, BACnet objects lists will be located in the following directory:

C:\Program Files\Regin\SLib\Corrigo\Corrigo5_0\BACnet

The lists can also be found in Application tool, in the **Help** menu.

1.3.1 BACnet type

The BACnet type of signals:

- 10XXX = Read and write binary
- 20XXX = Read binary
- 30XXX = Read and write analogue
- 40XXX = Read analogue
- 30XXX = Read and write multistate
- 40XXX = Read multistate

(Where XXX = Modbus address)

BACnet object names are the same as for EXOL type objects, but are shortened by removing the preamble “Cor_” (e.g.: “VentSettings.Cor_OverHeatFastStop” becomes “VentSettings.OverHeatFastStop”, etc.).

1.3.2 BACnet settings

[Application tool ► Configuration ► System ► BACnet]

BACnet/IP = Activation status of BACnet/IP protocol.

BACnet device name = The name of the device.

BACnet device ID = The device ID is divided into two parts, one low and one high. For example: If the high part of the ID would be “1”, then the device ID above would be “00012640”. BACnet device ID low = The lower part of the device identification. BACnet device ID high (x10000) = The higher part of the device identification.

BACnet/IP UDP port number = Port number. This is the dedicated communication port. The port number is divided into two parts, one low and one high. For example: In the picture above (Figure 1-1, the port number is “47808”.

BBMD address = BACnet Broadcast Management Device address. This is used for internet communication between devices running BACnet.

BACnet MS/TP highest master address = The max master address is the MAC address of the highest master device on the BACnet MS/TP network segment. Setting this number above the highest MAC address will decrease network performance.

BACnet MS/TP MAC = The MAC address of the device. This needs to be unique only to the subnet to which the device is attached.

1.4 Controller address (PLA : ELA)

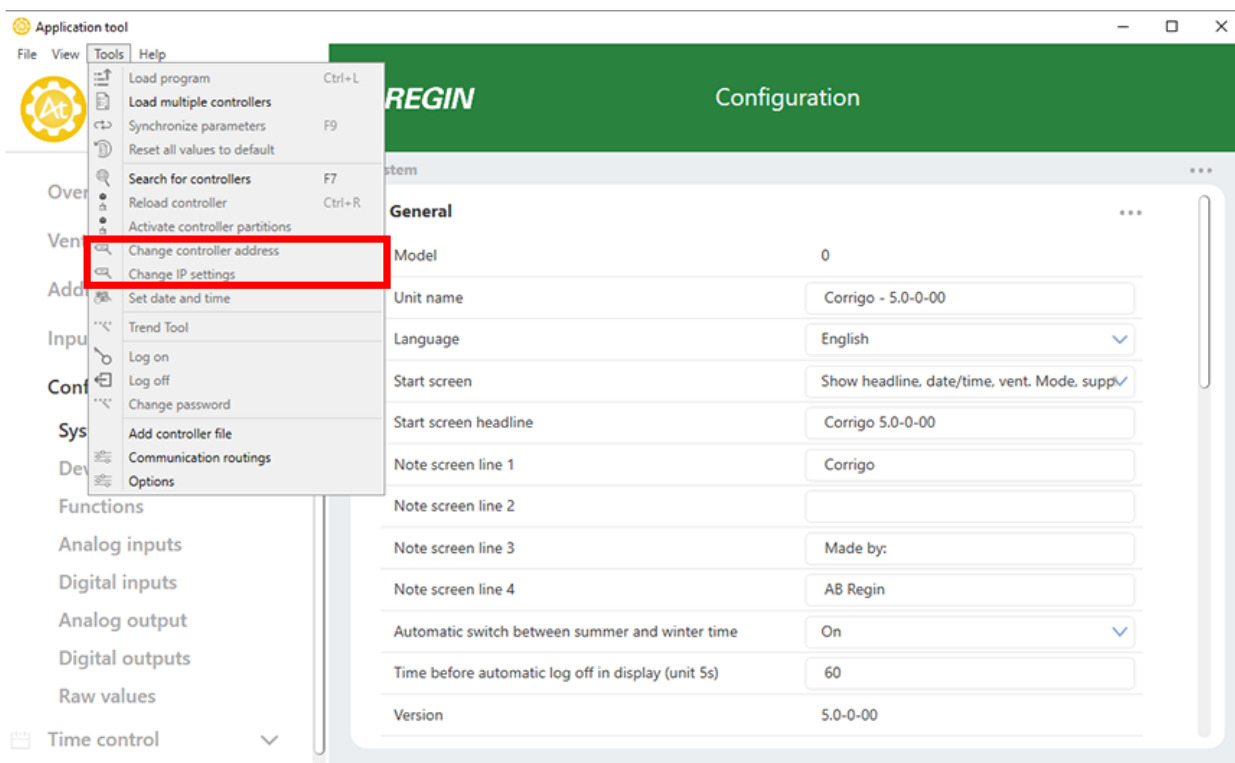


Figure 1-2 Changing the controller address and IP settings

The controller uses PLA:ELA addresses when connecting to Application tool and when multiple controllers are connected in a network. Application tool normally uses the addresses PLA = 254 and ELA = 254, so if an address is changed, the new address must also be entered in Application tool. If several controllers are connected in a network, all the units must have the same PLA address, but each unit must have a unique ELA address.

The address can be changed in the Application tool in the menu Tools ► Change controller address, see *Figure 1-2 Changing the controller address and IP settings* above.

1.5 IP-configuration

IP configuration can be made both in Application tool or in the built-in display.

The *Dynamic Host Configuration Protocol* (DHCP) is a network protocol used on *Internet Protocol* (IP) networks for dynamic distribution of network configuration parameters, such as IP addresses, DNS servers and other services.

The controller can be configured to either obtain an IP address from a DHCP server (dynamic) or the address can be set manually (static).

Three additional functions can be activated on the network interface:

- ✓ BACnet IP communication
- ✓ Connection to the Cloud-server
- ✓ Modbus TCP

If you wish to set a static IP address for the controller, enter the IP address you wish to use along with the subnet mask, gateway address and DNS server address. In Application tool you go to the *Tools* menu and choose *Change IP settings*, see figure *Figure 1-2 Changing the controller address and IP settings* above.

In the display you do as follows below:

```
TCP/IP
```

```
DHCP: Yes
Set static IP
Running IP
-
```

```
IP
192.168.001.234
Subnet mask
255.255.255.000
```

```
Running subnet mask
-
Running gateway
-
```

```
Running DNS1
192.168.001.001
Running DNS2
192.168.001.001
```

1.6 Modbus

1.6.1 Communication limitations

The Modbus master must wait for a minimum of 3.5 character times (4 ms at 9600 bps) between two messages. When the Modbus master communicates with more than one controller on the same communication line (RS485), the Modbus master must wait for a minimum of 14 character times (16 ms at 9600 bps) between the answer and the first question for the next controller.

The controller is limited to 10 fast communications every 30 seconds. Any other communications will have a delayed answer time of approximately 1 second.

1.6.2 Scale factor Modbus

Real signals have scale factor 10, except for the time setting signals and the X-constants for counting air flow (holding register 761, 763, 765, 767, 769, 771) which have scale factor 100, and the CO2 setpoint (holding register 967) and CO2 input (input register 321) which have scale factor 1 for Modbus communication.

Integer, *Index* and *Logic* always have scale factor 1.

1.6.3 Modbus wiring etc.

A protocol like Modbus consists of several layers (OSI-model). The bottom layer is always the physical layer; the number of wires and signal levels. The next layer describes the communication digits (number of data bits, stop-bits, parity etc.). Next are the layers describing the Modbus-specific functions (number of digits per message, the meaning of different messages, etc.).


For Modbus, the bottom layer can be RS485, RS422 or RS232.

1.6.4 Max. 47 registers

A maximum of 47 registers can be read in one message.

1.6.5 Visualised example

The simplified example below visualises the Master/Slave relation. Checksums for message validation are also transmitted in both query and answer.

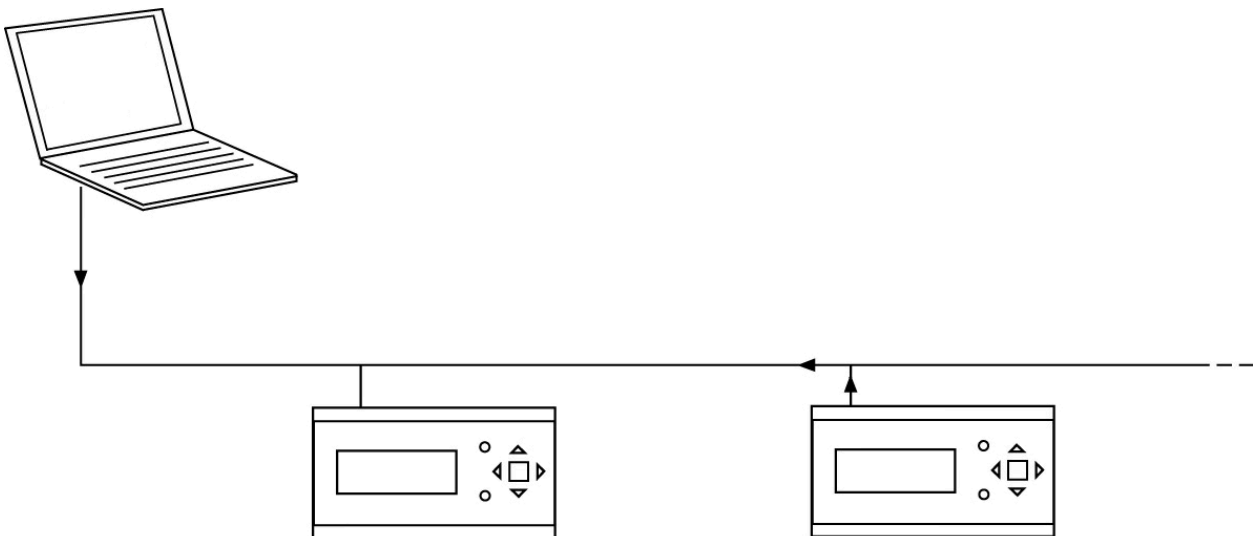

2 System integration using Modbus

2.1 Configuration

The communication parameters for the Modbus line are the most important thing to configure first. As described earlier, these parameters must be identical in both the master unit and slave units, since they define the structure of messages and the transmission speed.

The controller is set to Slave Address 1 as a default. If more units are added, a new Modbus address can be set for each unit using the web server or Application tool.

2.2 Transmission mode

The controller uses the RTU transmission mode; not to be confused with the ASCII mode in the settings. The settings for the transmission mode must be the same in the master unit and the slave units, since Modbus/RTU cannot understand Modbus/ASCII messages. The configuration parameter **Word length** is always 8 for Modbus/RTU.

2.3 Writing values

To override the Corrigo output values, set the output to manual mode using a Modbus signal. Then set the corresponding signal to the wanted level. These signals are listed in *chapter 5 Holding register*. Remember that only values with a default value are adjustable, you will find these in *chapter 3 Coil status register* and *chapter 5 Holding register*.

2.4 Reading values

An effective way to read values is to read multiple variables simultaneously. To, for example, read all analogue outputs, set the Modbus query to the values as follows. The first analogue output variable starts at address 402(`VentActual.A_AnalogOutput(1)`). To read address 402 to 406, set the length to 5. The Modbus answer will then communicate all 5 values in just one message, making the communication more effective.

3 Coil status register

The EXOL type of the signals:

R = Real (-3.3E38 - 3.3E38)

I = Integer (-32768 - 32767)

X = Index (0 - 255)

L = Logic (0/1)

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|-------------------------------------|-----------|----------------|---------------|---|--------------------------------------|
| VentSettings.S_ AlaAcknowAll | L | 1 | 0 | Alarm Acknowledging, Blocking and Unblocking | Command to acknowledge all alarms |
| VentSettings.S_ FilterAlarmReset | L | 2 | 0 | Settings, General | Resets the filter alarm counter |

4 Input register

The EXOL type of the signals:

R = Real (-3.3E38 - 3.3E38)

I = Integer (-32768 - 32767)

X = Index (0 - 255)

L = Logic (0/1)

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|------------------------------------|-----------|----------------|---------------|--------------|-----------------------------------|
| AlaData.Ala_MalfunctionSAF1_Status | X | 1 | | Alarm Status | Malfunction SAF 1 |
| AlaData.Ala_MalfunctionSAF2_Status | X | 2 | | Alarm Status | Malfunction SAF 2 |
| AlaData.Ala_MalfunctionSAF3_Status | X | 3 | | Alarm Status | Malfunction SAF 3 |
| AlaData.Ala_MalfunctionSAF4_Status | X | 4 | | Alarm Status | Malfunction SAF 4 |
| AlaData.Ala_MalfunctionSAF5_Status | X | 5 | | Alarm Status | Malfunction SAF 5 |
| AlaData.Ala_MalfunctionEAF1_Status | X | 6 | | Alarm Status | Malfunction EAF 1 |
| AlaData.Ala_MalfunctionEAF2_Status | X | 7 | | Alarm Status | Malfunction EAF 2 |
| AlaData.Ala_MalfunctionEAF3_Status | X | 8 | | Alarm Status | Malfunction EAF 3 |
| AlaData.Ala_MalfunctionEAF4_Status | X | 9 | | Alarm Status | Malfunction EAF 4 |
| AlaData.Ala_MalfunctionEAF5_Status | X | 10 | | Alarm Status | Malfunction EAF 5 |
| AlaData.Ala_AlarmSAF1_Status | X | 11 | | Alarm Status | Alarm frequency converter SAF 1 |
| AlaData.Ala_AlarmSAF2_Status | X | 12 | | Alarm Status | Alarm frequency converter SAF 2 |
| AlaData.Ala_AlarmSAF3_Status | X | 13 | | Alarm Status | Alarm frequency converter SAF 3 |
| AlaData.Ala_AlarmSAF4_Status | X | 14 | | Alarm Status | Alarm frequency converter SAF 4 |
| AlaData.Ala_AlarmSAF5_Status | X | 15 | | Alarm Status | Alarm frequency converter SAF 5 |
| AlaData.Ala_AlarmEAF1_Status | X | 16 | | Alarm Status | Alarm frequency converter EAF 1 |
| AlaData.Ala_AlarmEAF2_Status | X | 17 | | Alarm Status | Alarm frequency converter EAF 2 |
| AlaData.Ala_AlarmEAF3_Status | X | 18 | | Alarm Status | Alarm frequency converter EAF 3 |
| AlaData.Ala_AlarmEAF4_Status | X | 19 | | Alarm Status | Alarm frequency converter EAF 4 |
| AlaData.Ala_AlarmEAF5_Status | X | 20 | | Alarm Status | Alarm frequency converter EAF 5 |
| AlaData.Ala_WarningSAF1_Status | X | 21 | | Alarm Status | Warning frequency converter SAF 1 |
| AlaData.Ala_WarningSAF2_Status | X | 22 | | Alarm Status | Warning frequency converter SAF 2 |
| AlaData.Ala_WarningSAF3_Status | X | 23 | | Alarm Status | Warning frequency converter SAF 3 |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--|-----------|----------------|---------------|--------------|------------------------------------|
| AlaData.Ala_WarningSAF4_Status | X | 24 | | Alarm Status | Warning frequency converter SAF 4 |
| AlaData.Ala_WarningSAF5_Status | X | 25 | | Alarm Status | Warning frequency converter SAF 5 |
| AlaData.Ala_WarningEAF1_Status | X | 26 | | Alarm Status | Warning frequency converter EAF 1 |
| AlaData.Ala_WarningEAF2_Status | X | 27 | | Alarm Status | Warning frequency converter EAF 2 |
| AlaData.Ala_WarningEAF3_Status | X | 28 | | Alarm Status | Warning frequency converter EAF 3 |
| AlaData.Ala_WarningEAF4_Status | X | 29 | | Alarm Status | Warning frequency converter EAF 4 |
| AlaData.Ala_WarningEAF5_Status | X | 30 | | Alarm Status | Warning frequency converter EAF 5 |
| AlaData.Ala_External-RunSAF_Status | X | 31 | | Alarm Status | External operation SAF |
| AlaData.Ala_ExternalRunEAF_Status | X | 32 | | Alarm Status | External operation EAF |
| AlaData.Ala_ExternalRun-Motor1_Status | X | 33 | | Alarm Status | Motor control 1 external operation |
| AlaData.Ala_ExternalRun-Motor2_Status | X | 34 | | Alarm Status | Motor control 2 external operation |
| AlaData.Ala_MalfunctionPumpHeater_Status | X | 35 | | Alarm Status | Malfunction pump heater |
| AlaData.Ala_Malfunction-PumpCooler_Status | X | 36 | | Alarm Status | Malfunction pump cooler |
| AlaData.Ala_MalfunctionPumpExchanger_Status | X | 37 | | Alarm Status | Malfunction pump exchanger |
| AlaData.Ala_MalfunctionFireDamper_Status | X | 38 | | Alarm Status | Malfunction fire damper |
| AlaData.Ala_MalfunctionDamper_Status | X | 39 | | Alarm Status | Malfunction damper |
| AlaData.Ala_Malfunction-Motor1_Status | X | 40 | | Alarm Status | Malfunction motor control 1 |
| AlaData.Ala_Malfunction-Motor2_Status | X | 41 | | Alarm Status | Malfunction motor control 1 |
| AlaData.Ala_FireDamperExerciseStop_Status | X | 42 | | Alarm Status | Fire damper exercise stop |
| AlaData.Ala_Malfunction-PumpSequence1_Status | X | 43 | | Alarm Status | Malfunction pump seq. A |
| AlaData.Ala_Malfunction-PumpSequence2_Status | X | 44 | | Alarm Status | Malfunction pump seq. B |
| AlaData.Ala_Malfunction-PumpSequence3_Status | X | 45 | | Alarm Status | Malfunction pump seq. C |
| AlaData.Ala_Malfunction-PumpSequence4_Status | X | 46 | | Alarm Status | Malfunction pump seq. D |
| AlaData.Ala_Malfunction-PumpSequence5_Status | X | 47 | | Alarm Status | Malfunction pump seq. E |
| AlaData.Ala_Malfunction-PumpSequence6_Status | X | 48 | | Alarm Status | Malfunction pump seq. F |
| AlaData.Ala_Malfunction-PumpSequence7_Status | X | 49 | | Alarm Status | Malfunction pump seq. G |
| AlaData.Ala_Malfunction-PumpSequence8_Status | X | 50 | | Alarm Status | Malfunction pump seq. H |

Input register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---|-----------|----------------|---------------|--------------|--------------------------------|
| AlaData.Ala_Malfunction-PumpSequence9_Status | X | 51 | | Alarm Status | Malfunction pump seq. I |
| AlaData.Ala_Malfunction-PumpSequence10_Status | X | 52 | | Alarm Status | Malfunction pump seq. J |
| AlaData.Ala_FilterGuard1_Status | X | 53 | | Alarm Status | Filter guard 1 |
| AlaData.Ala_FilterGuard2_Status | X | 54 | | Alarm Status | Filter guard 2 |
| AlaData.Ala_FlowGuard_Status | X | 55 | | Alarm Status | Flow guard |
| AlaData.Ala_ExternalFrostGuard_Status | X | 56 | | Alarm Status | External frost guard |
| AlaData.Ala_DeicingGuard_Status | X | 57 | | Alarm Status | Deicing pressure guard |
| AlaData.Ala_FireAlarm_Status | X | 58 | | Alarm Status | Fire alarm |
| AlaData.Ala_SmokeAlarm_Status | X | 59 | | Alarm Status | Smoke detector alarm |
| AlaData.Ala_ExternalSwitch_Status | X | 60 | | Alarm Status | External switch |
| AlaData.Ala_ExternalAlarm_Status | X | 61 | | Alarm Status | External alarm |
| AlaData.Ala_ServiceStop_Status | X | 62 | | Alarm Status | Service stop |
| AlaData.Ala_ElectricOverheat_Status | X | 63 | | Alarm Status | Electric heating is overheated |
| AlaData.Ala_FrostRisk_Status | X | 64 | | Alarm Status | Frost risk |
| AlaData.Ala_LowEfficiency_Status | X | 65 | | Alarm Status | Low efficiency |
| AlaData.Ala_Analogue-Deicing_Status | X | 66 | | Alarm Status | Analogue deicing |
| AlaData.Ala_RotationguardExchanger_Status | X | 67 | | Alarm Status | Rotation guard exchanger |
| AlaData.Ala_ExtraAlarm1_Status | X | 68 | | Alarm Status | Extra alarm 1 |
| AlaData.Ala_ExtraAlarm2_Status | X | 69 | | Alarm Status | Extra alarm 2 |
| AlaData.Ala_ExtraAlarm3_Status | X | 70 | | Alarm Status | Extra alarm 3 |
| AlaData.Ala_ExtraAlarm4_Status | X | 71 | | Alarm Status | Extra alarm 4 |
| AlaData.Ala_ExtraAlarm5_Status | X | 72 | | Alarm Status | Extra alarm 5 |
| AlaData.Ala_ExtraAlarm6_Status | X | 73 | | Alarm Status | Extra alarm 6 |
| AlaData.Ala_ExtraAlarm7_Status | X | 74 | | Alarm Status | Extra alarm 7 |
| AlaData.Ala_ExtraAlarm8_Status | X | 75 | | Alarm Status | Extra alarm 8 |
| AlaData.Ala_ExtraAlarm9_Status | X | 76 | | Alarm Status | Extra alarm 9 |
| AlaData.Ala_ExtraAlarm10_Status | X | 77 | | Alarm Status | Extra alarm 10 |
| AlaData.Ala_BatteryFail_Status | X | 78 | | Alarm Status | Internal battery error |
| AlaData.Ala_Service_Status | X | 79 | | Alarm Status | Time for service |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--|-----------|----------------|---------------|--------------|--------------------------------|
| AlaData.Ala_RestartBlocked_Status | X | 80 | | Alarm Status | Restart blocked after power on |
| AlaData.Ala_ControlErrorSupplyTemp_Status | X | 81 | | Alarm Status | Supply air temp control error |
| AlaData.Ala_ControlErrorSAF_Status | X | 82 | | Alarm Status | SAF control error |
| AlaData.Ala_ControlErrorEAF_Status | X | 83 | | Alarm Status | EAF control error |
| AlaData.Ala_ControlErrorHumidity_Status | X | 84 | | Alarm Status | Humidity control error |
| AlaData.Ala_ControlErrorExtraController_Status | X | 85 | | Alarm Status | Extra controller control error |
| AlaData.Ala_HighTempSupply_Status | X | 86 | | Alarm Status | High supply air temp |
| AlaData.Ala_LowTempSupply_Status | X | 87 | | Alarm Status | Low supply air temp |
| AlaData.Ala_MaxLimitTempSupply_Status | X | 88 | | Alarm Status | Supply air temp max limit |
| AlaData.Ala_MinLimitTempSupply_Status | X | 89 | | Alarm Status | Supply air temp min limit |
| AlaData.Ala_HighTempRoom_Status | X | 90 | | Alarm Status | High room temp |
| AlaData.Ala_LowTempRoom_Status | X | 91 | | Alarm Status | Low room temp |
| AlaData.Ala_HighTempExtract_Status | X | 92 | | Alarm Status | High extract air temp |
| AlaData.Ala_LowTempExtract_Status | X | 93 | | Alarm Status | Low extract air temp |
| AlaData.Ala_HighTempOutdoor_Status | X | 94 | | Alarm Status | High outdoor air temp |
| AlaData.Ala_LowTempOutdoor_Status | X | 95 | | Alarm Status | Low outdoor air temp |
| AlaData.Ala_LowTempFrostGuard1_Status | X | 96 | | Alarm Status | Low frost guard temp 1 |
| AlaData.Ala_LowTempFrostGuard2_Status | X | 97 | | Alarm Status | Low frost guard temp 2 |
| AlaData.Ala_LowTempFrostGuard3_Status | X | 98 | | Alarm Status | Low frost guard temp 3 |
| AlaData.Ala_HighTempExtraSensor1_Status | X | 99 | | Alarm Status | High temp extra sensor 1 |
| AlaData.Ala_LowTempExtraSensor1_Status | X | 100 | | Alarm Status | Low temp extra sensor 1 |
| AlaData.Ala_HighTempExtraSensor2_Status | X | 101 | | Alarm Status | High temp extra sensor 2 |
| AlaData.Ala_LowTempExtraSensor2_Status | X | 102 | | Alarm Status | Low temp extra sensor 2 |
| AlaData.Ala_HighTempExtraSensor3_Status | X | 103 | | Alarm Status | High temp extra sensor 3 |
| AlaData.Ala_LowTempExtraSensor3_Status | X | 104 | | Alarm Status | Low temp extra sensor 3 |
| AlaData.Ala_HighTempExtraSensor4_Status | X | 105 | | Alarm Status | High temp extra sensor 4 |
| AlaData.Ala_LowTempExtraSensor4_Status | X | 106 | | Alarm Status | Low temp extra sensor 4 |

Input register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---|-----------|----------------|---------------|--------------|---|
| AlaData.Ala_HighTempExtra-Sensor5_Status | X | 107 | | Alarm Status | High temp extra sensor 5 |
| AlaData.Ala_LowTempExtra-Sensor5_Status | X | 108 | | Alarm Status | Low temp extra sensor 5 |
| AlaData.Ala_HighTempSelectedSensor1_Status | X | 109 | | Alarm Status | High temp selected sensor 1 |
| AlaData.Ala_LowTempSelectedSensor1_Status | X | 110 | | Alarm Status | Low temp selected sensor 1 |
| AlaData.Ala_HighTempSelectedSensor2_Status | X | 111 | | Alarm Status | High temp selected sensor 2 |
| AlaData.Ala_LowTempSelectedSensor2_Status | X | 112 | | Alarm Status | Low temp selected sensor 2 |
| AlaData.Ala_ManualControlUnit_Status | X | 113 | | Alarm Status | Manual control air unit |
| AlaData.Ala_ManualControlSupply_Status | X | 114 | | Alarm Status | Manual control supply air |
| AlaData.Ala_ManualControlSAF_Status | X | 115 | | Alarm Status | Manual control SAF |
| AlaData.Ala_ManualControlIEAF_Status | X | 116 | | Alarm Status | Manual control EAF |
| AlaData.Ala_ManualControlHeater_Status | X | 117 | | Alarm Status | Manual control heater |
| AlaData.Ala_ManualControlIEExchanger_Status | X | 118 | | Alarm Status | Manual control exchanger |
| AlaData.Ala_ManualControlCooler_Status | X | 119 | | Alarm Status | Manual control cooler |
| AlaData.Ala_ManualControlDamper_Status | X | 120 | | Alarm Status | Manual control damper |
| AlaData.Ala_ManualControlPumpHeater_Status | X | 121 | | Alarm Status | Manual control heater pump |
| AlaData.Ala_ManualControlPumpExchanger_Status | X | 122 | | Alarm Status | Manual control exchanger pump |
| AlaData.Ala_ManualControlPumpCooler_Status | X | 123 | | Alarm Status | Manual control cooler pump |
| AlaData.Ala_ManualControlDamperRecirculation_Status | X | 124 | | Alarm Status | Manual control recirculation air damper |
| AlaData.Ala_ManualControlDamperOutdoor_Status | X | 125 | | Alarm Status | Manual control fresh air damper |
| AlaData.Ala_ManualControlDamperExhaust_Status | X | 126 | | Alarm Status | Manual control exhaust air damper |
| AlaData.Ala_ManualControlDamperFire_Status | X | 127 | | Alarm Status | Manual control fire damper |
| AlaData.Ala_ManualControlSequence1_Status | X | 128 | | Alarm Status | Manual control seq. A |
| AlaData.Ala_ManualControlSequence2_Status | X | 129 | | Alarm Status | Manual control seq. B |
| AlaData.Ala_ManualControlSequence3_Status | X | 130 | | Alarm Status | Manual control seq. C |
| AlaData.Ala_ManualControlSequence4_Status | X | 131 | | Alarm Status | Manual control seq. D |
| AlaData.Ala_ManualControlSequence5_Status | X | 132 | | Alarm Status | Manual control seq. E |
| AlaData.Ala_ManualControlSequence6_Status | X | 133 | | Alarm Status | Manual control seq. F |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--|-----------|----------------|---------------|--------------|---------------------------------|
| AlaData.Ala_ManualControl-Sequence7_Status | X | 134 | | Alarm Status | Manual control seq. G |
| AlaData.Ala_ManualControl-Sequence8_Status | X | 135 | | Alarm Status | Manual control seq. H |
| AlaData.Ala_ManualControl-Sequence9_Status | X | 136 | | Alarm Status | Manual control seq. I |
| AlaData.Ala_ManualControl-Sequence10_Status | X | 137 | | Alarm Status | Manual control seq. J |
| AlaData.Ala_ManualControl-Output_Status | X | 138 | | Alarm Status | Output in manual control |
| AlaData.Ala_ManualControl-Input_Status | X | 139 | | Alarm Status | Input in manual control |
| AlaData.Ala_ManualControl-ExtraController_Status | X | 140 | | Alarm Status | Manual control extra controller |
| AlaData.Ala_ManualControl-Motor1_Status | X | 141 | | Alarm Status | Manual control motor control 1 |
| AlaData.Ala_ManualControl-Motor2_Status | X | 142 | | Alarm Status | Manual control motor control 2 |
| AlaData.Ala_ManualControl-Pretreatment_Status | X | 143 | | Alarm Status | Manual control pretreatment |
| AlaData.Ala_SensorErrorTempOutdoor_Status | X | 144 | | Alarm Status | Sensor error outdoor air temp |
| AlaData.Ala_SensorErrorTempIntake_Status | X | 145 | | Alarm Status | Sensor error intake air temp |
| AlaData.Ala_SensorError-TempSupply_Status | X | 146 | | Alarm Status | Sensor error supply air temp |
| AlaData.Ala_SensorError-TempExhaust_Status | X | 147 | | Alarm Status | Sensor error exhaust air temp |
| AlaData.Ala_SensorError-TempExtract_Status | X | 148 | | Alarm Status | Sensor error extract air temp |
| AlaData.Ala_SensorError-TempRoom1_Status | X | 149 | | Alarm Status | Sensor error room temp 1 |
| AlaData.Ala_SensorError-TempRoom2_Status | X | 150 | | Alarm Status | Sensor error room temp 2 |
| AlaData.Ala_SensorError-TempRoom3_Status | X | 151 | | Alarm Status | Sensor error room temp 3 |
| AlaData.Ala_SensorError-TempRoom4_Status | X | 152 | | Alarm Status | Sensor error room temp 4 |
| AlaData.Ala_SensorError-TempRoom5_Status | X | 153 | | Alarm Status | Sensor error room temp 5 |
| AlaData.Ala_SensorError-TempRoom6_Status | X | 154 | | Alarm Status | Sensor error room temp 6 |
| AlaData.Ala_SensorError-TempRoom7_Status | X | 155 | | Alarm Status | Sensor error room temp 7 |
| AlaData.Ala_SensorError-TempRoom8_Status | X | 156 | | Alarm Status | Sensor error room temp 8 |
| AlaData.Ala_SensorError-TempRoom9_Status | X | 157 | | Alarm Status | Sensor error room temp 9 |
| AlaData.Ala_SensorError-TempRoom10_Status | X | 158 | | Alarm Status | Sensor error room temp 10 |
| AlaData.Ala_SensorError-TempRoom11_Status | X | 159 | | Alarm Status | Sensor error room temp 11 |
| AlaData.Ala_SensorError-TempRoom12_Status | X | 160 | | Alarm Status | Sensor error room temp 12 |

Input register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---|-----------|----------------|---------------|--------------|---------------------------------------|
| AlaData.Ala_SensorError-TempRoom13_Status | X | 161 | | Alarm Status | Sensor error room temp 13 |
| AlaData.Ala_SensorError-TempRoom14_Status | X | 162 | | Alarm Status | Sensor error room temp 14 |
| AlaData.Ala_SensorError-TempRoom15_Status | X | 163 | | Alarm Status | Sensor error room temp 15 |
| AlaData.Ala_SensorError-TempRoom16_Status | X | 164 | | Alarm Status | Sensor error room temp 16 |
| AlaData.Ala_SensorError-PressureSAF_Status | X | 165 | | Alarm Status | Sensor error SAF pressure |
| AlaData.Ala_SensorError-PressureEAF_Status | X | 166 | | Alarm Status | Sensor error EAF pressure |
| AlaData.Ala_SensorError-FlowSAF_Status | X | 167 | | Alarm Status | Sensor error SAF flow |
| AlaData.Ala_SensorErrorFlowEAF_Status | X | 168 | | Alarm Status | Sensor error EAF flow |
| AlaData.Ala_SensorPressureExchangerSAF_Status | X | 169 | | Alarm Status | Sensor error exchanger pressure SAF |
| AlaData.Ala_SensorPressureExchangerEAF_Status | X | 170 | | Alarm Status | Sensor error exchanger pressure EAF |
| AlaData.Ala_SensorError-TempDeicing_Status | X | 171 | | Alarm Status | Sensor error deicing temp |
| AlaData.Ala_SensorError-TempFrost1_Status | X | 172 | | Alarm Status | Sensor error frost protection 1 |
| AlaData.Ala_SensorError-TempFrost2_Status | X | 173 | | Alarm Status | Sensor error frost protection 2 |
| AlaData.Ala_SensorError-TempFrost3_Status | X | 174 | | Alarm Status | Sensor error frost protection 3 |
| AlaData.Ala_SensorErrorCO2_Status | X | 175 | | Alarm Status | Sensor error CO2 |
| AlaData.Ala_SensorErrorHumidityRoom_Status | X | 176 | | Alarm Status | Sensor error humidity room |
| AlaData.Ala_SensorErrorHumidityDuct_Status | X | 177 | | Alarm Status | Sensor error humidity duct |
| AlaData.Ala_SensorErrorTempExtraController_Status | X | 178 | | Alarm Status | Sensor error extra controller |
| AlaData.Ala_SensorError-ExtCtrlSAF_Status | X | 179 | | Alarm Status | Sensor error external control SAF |
| AlaData.Ala_SensorError-ExtCtrlEAF_Status | X | 180 | | Alarm Status | Sensor error external control EAF |
| AlaData.Ala_SensorErrorHumidityOutdoor_Status | X | 181 | | Alarm Status | Sensor error outdoor humidity |
| AlaData.Ala_SensorErrorTempExtraSensor1_Status | X | 182 | | Alarm Status | Sensor error extra sensor 1 |
| AlaData.Ala_SensorErrorTempExtraSensor2_Status | X | 183 | | Alarm Status | Sensor error extra sensor 2 |
| AlaData.Ala_SensorErrorTempExtraSensor3_Status | X | 184 | | Alarm Status | Sensor error extra sensor 3 |
| AlaData.Ala_SensorErrorTempExtraSensor4_Status | X | 185 | | Alarm Status | Sensor error extra sensor 4 |
| AlaData.Ala_SensorErrorTempExtraSensor5_Status | X | 186 | | Alarm Status | Sensor error extra sensor 5 |
| AlaData.Ala_SensorErrorExt-SupplySetp_Status | X | 187 | | Alarm Status | Sensor error external supply setpoint |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--|-----------|----------------|---------------|------------------|--|
| AlaData.Ala_SensorErrorExt-FlowSetpoint_Status | X | 188 | | Alarm Status | Sensor error external flow setpoint |
| AlaData.Ala_SensorErrorFilterGuard1_Status | X | 189 | | Alarm Status | Sensor error filter guard 1 |
| AlaData.Ala_SensorErrorFilterGuard2_Status | X | 190 | | Alarm Status | Sensor error filter guard 2 |
| AlaData.Ala_SensorErrorTempEfficiency_Status | X | 191 | | Alarm Status | Sensor error efficiency temp |
| AlaData.Ala_CommErrorDevice_Status | X | 192 | | Alarm Status | Fault communication device |
| AlaData.Ala_MalfunctionExtraController_Status | X | 193 | | Alarm Status | Malfunction Extra Controller |
| AlaData.Ala_InternalError_Status | X | 194 | | Alarm Status | Internal error |
| VentActual.A_AnalogInput(1) | R | 250 | | Analogue inputs | The scaled and filtered value of AI1 |
| VentActual.A_AnalogInput(2) | R | 251 | | Analogue inputs | The scaled and filtered value of AI2 |
| VentActual.A_AnalogInput(3) | R | 252 | | Analogue inputs | The scaled and filtered value of AI3 |
| VentActual.A_AnalogInput(4) | R | 253 | | Analogue inputs | The scaled and filtered value of AI4 |
| VentActual.A_AnalogInput(5) | R | 254 | | Universal inputs | The scaled and filtered value of UAI1 |
| VentActual.A_AnalogInput(6) | R | 255 | | Universal inputs | The scaled and filtered value of UAI2 |
| VentActual.A_AnalogInput(7) | R | 256 | | Universal inputs | The scaled and filtered value of UAI3 |
| VentActual.A_AnalogInput(8) | R | 257 | | Universal inputs | The scaled and filtered value of UAI4 |
| VentActual.A_AnalogInputExp1(1) | R | 258 | | Analogue inputs | The scaled and filtered value of AI1 Exp.Unit 1 |
| VentActual.A_AnalogInputExp1(2) | R | 259 | | Analogue inputs | The scaled and filtered value of AI2 Exp.Unit 1 |
| VentActual.A_AnalogInputExp1(3) | R | 260 | | Analogue inputs | The scaled and filtered value of AI3 Exp.Unit 1 |
| VentActual.A_AnalogInputExp1(4) | R | 261 | | Analogue inputs | The scaled and filtered value of AI4 Exp.Unit 1 |
| VentActual.A_AnalogInputExp1(5) | R | 262 | | Universal inputs | The scaled and filtered value of UAI1 Exp.Unit 1 |
| VentActual.A_AnalogInputExp1(6) | R | 263 | | Universal inputs | The scaled and filtered value of UAI2 Exp.Unit 1 |
| VentActual.A_AnalogInputExp1(7) | R | 264 | | Universal inputs | The scaled and filtered value of UAI3 Exp.Unit 1 |
| VentActual.A_AnalogInputExp1(8) | R | 265 | | Universal inputs | The scaled and filtered value of UAI3 Exp.Unit 1 |
| VentActual.A_AnalogInputExp2(1) | R | 266 | | Analogue inputs | The scaled and filtered value of AI1 Exp.Unit 2 |
| VentActual.A_AnalogInputExp2(2) | R | 267 | | Analogue inputs | The scaled and filtered value of AI2 Exp.Unit 2 |
| VentActual.A_AnalogInputExp2(3) | R | 268 | | Analogue inputs | The scaled and filtered value of AI3 Exp.Unit 2 |
| VentActual.A_AnalogInputExp2(4) | R | 269 | | Analogue inputs | The scaled and filtered value of AI4 Exp.Unit 2 |

Input register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------------------|-----------|----------------|---------------|--------------------------------------|--|
| VentActual.A_AnalogInputExp2(5) | R | 270 | | Universal inputs | The scaled and filtered value of UAI1 Exp.Unit 2 |
| VentActual.A_AnalogInputExp2(6) | R | 271 | | Universal inputs | The scaled and filtered value of UAI2 Exp.Unit 2 |
| VentActual.A_AnalogInputExp2(7) | R | 272 | | Universal inputs | The scaled and filtered value of UAI3 Exp.Unit 2 |
| VentActual.A_AnalogInputExp2(8) | R | 273 | | Universal inputs | The scaled and filtered value of UAI3 Exp.Unit 2 |
| VentActual.A_AI_OutDoorTemp | R | 290 | | Actual/Setpoint | Outdoor temperature |
| VentActual.A_AI_IntakeAirTemp | R | 291 | | Actual/Setpoint | Intake air temperature |
| VentActual.A_AI_SupplyAirTemp | R | 292 | | Supply,Extract and Room temperatures | Supply air temperature |
| VentActual.A_AI_ExhaustAirTemp | R | 293 | | Extract air temp/De-icing exchanger | Exhaust air temp |
| VentActual.A_AI_ExtractAirTemp | R | 294 | | Supply,Extract and Room temperatures | Extract air temp |
| VentActual.A_AI_RoomTemp1 (0) | R | 295 | | Supply,Extract and Room temperatures | Room temperature 1 |
| VentActual.A_AI_RoomTemp2 | R | 296 | | Supply,Extract and Room temperatures | Room temperature 2 |
| VentActual.A_AI_RoomTemp3 | R | 297 | | Supply,Extract and Room temperatures | Room temperature 3 |
| VentActual.A_AI_RoomTemp4 | R | 298 | | Supply,Extract and Room temperatures | Room temperature 4 |
| VentActual.A_AI_RoomTemp5 | R | 299 | | Supply,Extract and Room temperatures | Room temperature 5 |
| VentActual.A_AI_RoomTemp6 | R | 300 | | Supply,Extract and Room temperatures | Room temperature 6 |
| VentActual.A_AI_RoomTemp7 | R | 301 | | Supply,Extract and Room temperatures | Room temperature 7 |
| VentActual.A_AI_RoomTemp8 | R | 302 | | Supply,Extract and Room temperatures | Room temperature 8 |
| VentActual.A_AI_RoomTemp9 | R | 303 | | Supply,Extract and Room temperatures | Room temperature 9 |
| VentActual.A_AI_RoomTemp10 | R | 304 | | Supply,Extract and Room temperatures | Room temperature 10 |
| VentActual.A_AI_RoomTemp11 | R | 305 | | Supply,Extract and Room temperatures | Room temperature 11 |
| VentActual.A_AI_RoomTemp12 | R | 306 | | Supply,Extract and Room temperatures | Room temperature 12 |
| VentActual.A_AI_RoomTemp13 | R | 307 | | Supply,Extract and Room temperatures | Room temperature 13 |
| VentActual.A_AI_RoomTemp14 | R | 308 | | Supply,Extract and Room temperatures | Room temperature 14 |
| VentActual.A_AI_RoomTemp15 | R | 309 | | Supply,Extract and Room temperatures | Room temperature 15 |
| VentActual.A_AI_RoomTemp16 | R | 310 | | Supply,Extract and Room temperatures | Room temperature 16 |
| VentActual.A_AI_SAFPressure | R | 311 | | SAF/EAF Pressure and Flow | Supply air fan pressure |
| VentActual.A_AI_EAFPressure | R | 312 | | SAF/EAF Pressure and Flow | Extract air fan pressure |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|-------------------------------------|-----------|----------------|---------------|--------------------------------------|---|
| VentActual.A_AI_SAFFlow | R | 313 | | SAF/EAF Pressure and Flow | Supply air fan flow. Scale factor = 0.1 |
| VentActual.A_AI_EAFFlow | R | 314 | | SAF/EAF Pressure and Flow | Extract air fan flow Scale factor = 0.1 |
| VentActual.A_ExchPressureSAF | R | 315 | | Actual/Setpoint | Exchanger SAF pressure sensor |
| VentActual.A_AI_ExchPressureEAF | R | 316 | | Actual/Setpoint | Exchanger EAF pressure sensor |
| VentActual.A_AI_DeIcingTemp | R | 317 | | Extract air temp/De-icing exchanger | De-icing temp exchanger |
| VentActual.A_AI_Frostprot-Temp1(0) | R | 318 | | Frost protection | Frost protection temp 1 |
| VentActual.A_AI_FrostprotTemp2 | R | 319 | | Frost protection | Frost protection temp 2 |
| VentActual.A_AI_FrostprotTemp3 | R | 320 | | Frost protection | Frost protection temp 3 |
| VentActual.A_AI_CO2 | R | 321 | | CO2 | CO2 (ppm) |
| VentActual.A_AI_HumidityRoom | R | 322 | | Humidity | Humidity room |
| VentActual.A_AI_HumidityDuct | R | 323 | | Humidity | Humidity duct |
| VentActual.A_AI_HumidityOutDoor | R | 324 | | Humidity | Humidity outdoor |
| VentActual.A_AI_ExtraControllerTemp | R | 325 | | Extra controller | Extra controller temp |
| VentActual.A_AI_ExtSAFControl | R | 326 | | SAF/EAF Pressure and Flow | External SAF signal control |
| VentActual.A_AI_ExtEAFControl | R | 327 | | SAF/EAF Pressure and Flow | External EAF signal control |
| VentActual.A_AI_Extra-Sensor1(0) | R | 328 | | Additional sensor/External setpoint | Extra sensor 1. Scale factor = 0.1 |
| VentActual.A_AI_ExtraSensor2 | R | 329 | | Actual/Setpoint | Extra sensor 2. Scale factor = 0.1 |
| VentActual.A_AI_ExtraSensor3 | R | 330 | | Actual/Setpoint | Extra sensor 3. Scale factor = 0.1 |
| VentActual.A_AI_ExtraSensor4 | R | 331 | | Actual/Setpoint | Extra sensor 4. Scale factor = 0.1 |
| VentActual.A_AI_ExtraSensor5 | R | 332 | | Actual/Setpoint | Extra sensor 5. Scale factor = 0.1 |
| VentActual.A_AI_ExternalSupplySetP | R | 333 | | Actual/Setpoint | External Setpoint |
| VentActual.A_AI_ExternalFlowSetP | R | 334 | | SAF/EAF Pressure and Flow | External Setpoint SAF airflow |
| VentActual.A_AI_FilterGuard1(0) | R | 335 | | Actual/Setpoint | Analogue filter 1 value |
| VentActual.A_AI_FilterGuard2 | R | 336 | | Actual/Setpoint | Analogue filter 2 value |
| VentActual.A_AI_EfficiencyTemp | R | 337 | | Actual/Setpoint | Temperature efficiency sensor |
| VentActual.A_RoomTemp | R | 359 | | Supply,Extract and Room temperatures | Room temperature 1-16 |
| VentActual.A_SAFAirFlow | R | 360 | | Actual/Setpoint | Counted air flow m3/h supply air |
| VentActual.A_EAFAirFlow | R | 361 | | Actual/Setpoint | Counted air flow m3/h extract air |

Input register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------------------|-----------|----------------|---------------|------------------|---|
| VentActual.A_AI_ExchAirFlowSAF | R | 362 | | Actual/Setpoint | Counted air flow m3/h over Exchanger, SAF Scale factor = 0.1 |
| VentActual.A_AI_ExchAirFlowEAF | R | 363 | | Actual/Setpoint | Counted air flow m3/h over Exchanger, EAF Scale factor = 0.1 |
| VentActual.A_AO_SequenceY1 | R | 364 | | Analogue outputs | Sequence A output (%) |
| VentActual.A_AO_SequenceY2 | R | 365 | | Analogue outputs | Sequence B output (%) |
| VentActual.A_AO_SequenceY3 | R | 366 | | Analogue outputs | Sequence C output (%) |
| VentActual.A_AO_SequenceY4 | R | 367 | | Analogue outputs | Sequence D output (%) |
| VentActual.A_AO_SequenceY5 | R | 368 | | Analogue outputs | Sequence E output (%) |
| VentActual.A_AO_SequenceY6 | R | 369 | | Analogue outputs | Sequence F output (%) |
| VentActual.A_AO_SequenceY7 | R | 370 | | Analogue outputs | Sequence G output (%) |
| VentActual.A_AO_SequenceY8 | R | 371 | | Analogue outputs | Sequence H output (%) |
| VentActual.A_AO_SequenceY9 | R | 372 | | Analogue outputs | Sequence I output (%) |
| VentActual.A_AO_SequenceY10 | R | 373 | | Analogue outputs | Sequence J output (%) |
| VentActual.A_AO_ChangeOver1 | R | 374 | | Analogue outputs | Control signal Heating or Cooling controlled by changeover |
| VentActual.A_AO_ChangeOver2 | R | 375 | | Analogue outputs | Control signal Heating or Cooling controlled by changeover |
| VentActual.A_AO_SAF(0) | R | 376 | | Analogue outputs | Supply air fan control |
| VentActual.A_AO_EAF | R | 377 | | Analogue outputs | Extract air fan control |
| VentActual.A_AO_Humidity | R | 378 | | Analogue outputs | Control valve Humidity |
| VentActual.A_AO_StepController1 | R | 379 | | Analogue outputs | Step Controller 1 |
| VentActual.A_AO_StepController2 | R | 380 | | Analogue outputs | Step Controller 2 |
| VentActual.A_AO_ExtraController | R | 381 | | Analogue outputs | Extra controller |
| VentActual.A_AO_AISignalOutput | R | 382 | | Analogue outputs | AI Signal output |
| VentActual.A_AnalogOutput (1) | R | 403 | | Analogue outputs | The value on analog output 1 |
| VentActual.A_AnalogOutput (2) | R | 404 | | Analogue outputs | The value on analog output 2 |
| VentActual.A_AnalogOutput (3) | R | 405 | | Analogue outputs | The value on analog output 3 |
| VentActual.A_AnalogOutput (4) | R | 406 | | Analogue outputs | The value on analog output 4 |
| VentActual.A_AnalogOutput (5) | R | 407 | | Analogue outputs | The value on analog output 5 |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|----------------------------------|-----------|----------------|---------------|------------------|---|
| VentActual.A_AnalogOutputExp1(1) | R | 408 | | Analogue outputs | Value of AO1 Exp. Unit 1 |
| VentActual.A_AnalogOutputExp1(2) | R | 409 | | Analogue outputs | Value of AO2 Exp. Unit 1 |
| VentActual.A_AnalogOutputExp1(3) | R | 410 | | Analogue outputs | Value of AO3 Exp. Unit 1 |
| VentActual.A_AnalogOutputExp1(4) | R | 411 | | Analogue outputs | Value of AO4 Exp. Unit 1 |
| VentActual.A_AnalogOutputExp1(5) | R | 412 | | Analogue outputs | Value of AO5 Exp. Unit 1 |
| VentActual.A_AnalogOutputExp2(1) | R | 413 | | Analogue outputs | Value of AO1 Exp. Unit 2 |
| VentActual.A_AnalogOutputExp2(2) | R | 414 | | Analogue outputs | Value of AO2 Exp. Unit 2 |
| VentActual.A_AnalogOutputExp2(3) | R | 415 | | Analogue outputs | Value of AO3 Exp. Unit 2 |
| VentActual.A_AnalogOutputExp2(4) | R | 416 | | Analogue outputs | Value of AO4 Exp. Unit 2 |
| VentActual.A_AnalogOutputExp2(5) | R | 417 | | Analogue outputs | Value of AO5 Exp. Unit 2 |
| VentActual.A_Efficiency | R | 428 | | Actual/Setpoint | Efficiency in % for exchanger |
| VentActual.A_UnitMode | X | 429 | | Actual/Setpoint | 0=Stop 1=Starting up 2=Low speed run 3=Normal speed run 4=High speed run 5=Heating support run 6=Cooling support run 7=CO2 Run 8=Free cool run 9=Fan stop run 10=Fire run 11=Smoke run 12=Recirculation run 13=Delcing run |
| VentActual.A_UnitModeControl | X | 430 | | Actual/Setpoint | Indicates what is triggering the current run mode 1=Time schedule 2=Manual run 3=Digital Input 4=Alarm 5=External control 6=Service stop |
| VentActual.A_ActiveSeqType | X | 431 | | Actual/Setpoint | Active seq. type (0 = heating, 1= cooling) |
| VentActual.A_ActiveHeatSeqStep | X | 432 | | Actual/Setpoint | Current heat sequence step that's active |
| VentActual.A_ActiveCoolSeqStep | X | 433 | | Actual/Setpoint | Current cool sequence step that's active |
| VentActual.A_ActiveYSeq | X | 434 | | Actual/Setpoint | Current Y sequence that's active and controlling |
| VentActual.A_SAFRunTime | R | 435 | | Actual/Setpoint | Running time (hour) supply air fan |
| VentActual.A_EAFRunTime | R | 436 | | Actual/Setpoint | Running time (hour) extract air fan |

Input register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|----------------------------------|-----------|----------------|---------------|--------------------------------------|---|
| VentActual.A_DelcingTime | X | 437 | | Extract air temp/De-icing exchanger | Number of minutes for ongoing de-icing |
| VentActual.A_NeedRunTime | I | 438 | | Supply,Extract and Room temperatures | Number of minutes in ongoing support heating/cooling |
| VentActual.A_CO2RunTime | I | 439 | | CO2 | Number of minutes support run time CO2 |
| VentActual.A_Y1Sequence | R | 440 | | Analogue outputs | Control signal Y1 |
| VentActual.A_Y2Sequence | R | 441 | | Analogue outputs | Control signal Y2 |
| VentActual.A_Y3Sequence | R | 442 | | Analogue outputs | Control signal Y3 |
| VentActual.A_Y4Sequence | R | 443 | | Analogue outputs | Control signal Y4 |
| VentActual.A_Y5Sequence | R | 444 | | Analogue outputs | Control signal Y5 |
| VentActual.A_Y6Sequence | R | 445 | | Analogue outputs | Control signal Y6 |
| VentActual.A_Y7Sequence | R | 446 | | Analogue outputs | Control signal Y7 |
| VentActual.A_Y8Sequence | R | 447 | | Analogue outputs | Control signal Y8 |
| VentActual.A_Y9Sequence | R | 448 | | Analogue outputs | Control signal Y9 |
| VentActual.A_Y10Sequence | R | 449 | | Analogue outputs | Control signal Y10 |
| VentActual.A_SAF | R | 450 | | SAF/EAF Pressure and Flow | Control signal supply air fan |
| VentActual.A_EAF | R | 451 | | SAF/EAF Pressure and Flow | Control signal extract air fan |
| VentActual.A_SAFSpeed | X | 452 | | SAF/EAF Pressure and Flow | SAF speed in auto and manual mode 0= Off 1= Low speed 2= normal speed 3= high speed 4= Special |
| VentActual.A_EAFSpeed | X | 453 | | SAF/EAF Pressure and Flow | EAF speed in auto and manual mode |
| VentActual.A_CompLow-SpeedSAF(0) | R | 454 | | SAF/EAF Pressure and Flow | Total compensation low speed SAF |
| VentActual.A_CompNormalSpeedSAF | R | 455 | | SAF/EAF Pressure and Flow | Total compensation normal speed SAF |
| VentActual.A_CompHighSpeedSAF | R | 456 | | SAF/EAF Pressure and Flow | Total compensation high speed SAF |
| VentActual.A_CompLowSpeedEAF(0) | R | 457 | | SAF/EAF Pressure and Flow | Total compensation low speed EAF |
| VentActual.A_CompNormalSpeedEAF | R | 458 | | SAF/EAF Pressure and Flow | Total compensation normal speed EAF |
| VentActual.A_CompHighSpeedEAF | R | 459 | | SAF/EAF Pressure and Flow | Total compensation high speed EAF |
| VentActual.A_AlarmACount(0) | X | 460 | | Alarm | Number of A alarms |
| VentActual.A_AlarmBCount | X | 461 | | Alarm | Number of B alarms |
| VentActual.A_AlarmCCount | X | 462 | | Alarm | Number of C alarms |
| VentActual.A_SumAlarm1-Count(0) | X | 463 | | Alarm | Number of SumAlarm1 alarms |
| VentActual.A_SumAlarm2Count | X | 464 | | Alarm | Number of SumAlarm2 alarms |
| VentActual.A_SupplyPID_SetP | R | 465 | | Supply,Extract and Room temperatures | Calculated setpoint supply air temperature when outdoor compensated control function |
| VentActual.A_SAFPID_SetP | R | 466 | | SAF/EAF Pressure and Flow | Actual setpoint SAF |
| VentActual.A_EAFPID_SetP | R | 467 | | SAF/EAF Pressure and Flow | Actual setpoint EAF |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------------------------|-----------|----------------|---------------|-------------------------------------|------------------------------------|
| VentActual.A_FrostPID1_Output(0) | R | 468 | | Frost protection | Frost protection controller output |
| VentActual.A_FrostPID2_Output | R | 469 | | Frost protection | Frost protection controller output |
| VentActual.A_FrostPID3_Output | R | 470 | | Frost protection | Frost protection controller output |
| VentActual.A_CO2PID_Output | R | 471 | | CO2 | CO2 controller output |
| VentActual.A_DelcePID_Output | R | 472 | | Extract air temp/De-icing exchanger | De-icing controller output |
| VentActual.A_HumidityPID_Output | R | 473 | | Humidity | Humidity controller output |
| VentActual.A_SFP | R | 474 | | SFP (Specific Fan Power) | Actual SFP |
| VentActual.A_SFPDay | R | 475 | | SFP (Specific Fan Power) | Day average SFP |
| VentActual.A_SFPMonth | R | 476 | | SFP (Specific Fan Power) | Month average (30 day average) SFP |
| VentComActual.CA_Motor-SpeedHzSAF(1) | R | 477 | | SAF/EAF Frequency converter | SAF Motor speed Hz |
| VentComActual.CA_Motor-SpeedHzSAF(2) | R | 478 | | SAF/EAF Frequency converter | SAF Motor speed Hz |
| VentComActual.CA_Motor-SpeedHzSAF(3) | R | 479 | | SAF/EAF Frequency converter | SAF Motor speed Hz |
| VentComActual.CA_Motor-SpeedHzSAF(4) | R | 480 | | SAF/EAF Frequency converter | SAF Motor speed Hz |
| VentComActual.CA_Motor-SpeedHzSAF(5) | R | 481 | | SAF/EAF Frequency converter | SAF Motor speed Hz |
| VentComActual.CA_Motor-SpeedHzEAF(1) | R | 482 | | SAF/EAF Frequency converter | EAF Motor speed Hz |
| VentComActual.CA_Motor-SpeedHzEAF(2) | R | 483 | | SAF/EAF Frequency converter | EAF Motor speed Hz |
| VentComActual.CA_Motor-SpeedHzEAF(3) | R | 484 | | SAF/EAF Frequency converter | EAF Motor speed Hz |
| VentComActual.CA_Motor-SpeedHzEAF(4) | R | 485 | | SAF/EAF Frequency converter | EAF Motor speed Hz |
| VentComActual.CA_Motor-SpeedHzEAF(5) | R | 486 | | SAF/EAF Frequency converter | EAF Motor speed Hz |
| VentComActual.CA_Motor-SpeedRpmSAF(1) | R | 487 | | SAF/EAF Frequency converter | SAF Motor speed RPM |
| VentComActual.CA_Motor-SpeedRpmSAF(2) | R | 488 | | SAF/EAF Frequency converter | SAF Motor speed RPM |
| VentComActual.CA_Motor-SpeedRpmSAF(3) | R | 489 | | SAF/EAF Frequency converter | SAF Motor speed RPM |
| VentComActual.CA_Motor-SpeedRpmSAF(4) | R | 490 | | SAF/EAF Frequency converter | SAF Motor speed RPM |
| VentComActual.CA_Motor-SpeedRpmSAF(5) | R | 491 | | SAF/EAF Frequency converter | SAF Motor speed RPM |
| VentComActual.CA_Motor-SpeedRpmEAF(1) | R | 492 | | SAF/EAF Frequency converter | EAF Motor speed RPM |
| VentComActual.CA_Motor-SpeedRpmEAF(2) | R | 493 | | SAF/EAF Frequency converter | EAF Motor speed RPM |
| VentComActual.CA_Motor-SpeedRpmEAF(3) | R | 494 | | SAF/EAF Frequency converter | EAF Motor speed RPM |
| VentComActual.CA_Motor-SpeedRpmEAF(4) | R | 495 | | SAF/EAF Frequency converter | EAF Motor speed RPM |

Input register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------------------------|-----------|----------------|---------------|-----------------------------|-------------------------------|
| VentComActual.CA_Motor-SpeedRpmEAF(5) | R | 496 | | SAF/EAF Frequency converter | EAF Motor speed RPM |
| VentComActual.CA_Motor-CurrentSAF(1) | R | 497 | | SAF/EAF Frequency converter | SAF Motor current |
| VentComActual.CA_Motor-CurrentSAF(2) | R | 498 | | SAF/EAF Frequency converter | SAF Motor current |
| VentComActual.CA_Motor-CurrentSAF(3) | R | 499 | | SAF/EAF Frequency converter | SAF Motor current |
| VentComActual.CA_Motor-CurrentSAF(4) | R | 500 | | SAF/EAF Frequency converter | SAF Motor current |
| VentComActual.CA_Motor-CurrentSAF(5) | R | 501 | | SAF/EAF Frequency converter | SAF Motor current |
| VentComActual.CA_Motor-CurrentEAF(1) | R | 502 | | SAF/EAF Frequency converter | EAF Motor current |
| VentComActual.CA_Motor-CurrentEAF(2) | R | 503 | | SAF/EAF Frequency converter | EAF Motor current |
| VentComActual.CA_Motor-CurrentEAF(3) | R | 504 | | SAF/EAF Frequency converter | EAF Motor current |
| VentComActual.CA_Motor-CurrentEAF(4) | R | 505 | | SAF/EAF Frequency converter | EAF Motor current |
| VentComActual.CA_Motor-CurrentEAF(5) | R | 506 | | SAF/EAF Frequency converter | EAF Motor current |
| VentComActual.CA_MotorPowerSAF(1) | R | 507 | | SAF/EAF Frequency converter | SAF Motor power |
| VentComActual.CA_MotorPowerSAF(2) | R | 508 | | SAF/EAF Frequency converter | SAF Motor power |
| VentComActual.CA_MotorPowerSAF(3) | R | 509 | | SAF/EAF Frequency converter | SAF Motor power |
| VentComActual.CA_MotorPowerSAF(4) | R | 510 | | SAF/EAF Frequency converter | SAF Motor power |
| VentComActual.CA_MotorPowerSAF(5) | R | 511 | | SAF/EAF Frequency converter | SAF Motor power |
| VentComActual.CA_MotorPowerEAF(1) | R | 512 | | SAF/EAF Frequency converter | EAF Motor power |
| VentComActual.CA_MotorPowerEAF(2) | R | 513 | | SAF/EAF Frequency converter | EAF Motor power |
| VentComActual.CA_MotorPowerEAF(3) | R | 514 | | SAF/EAF Frequency converter | EAF Motor power |
| VentComActual.CA_MotorPowerEAF(4) | R | 515 | | SAF/EAF Frequency converter | EAF Motor power |
| VentComActual.CA_MotorPowerEAF(5) | R | 516 | | SAF/EAF Frequency converter | EAF Motor power |
| VentComActual.CA_Active-FaultSAF(1) | I | 517 | | SAF/EAF Frequency converter | SAF Active fault (bit masked) |
| VentComActual.CA_Active-FaultSAF(2) | I | 518 | | SAF/EAF Frequency converter | SAF Active fault (bit masked) |
| VentComActual.CA_Active-FaultSAF(3) | I | 519 | | SAF/EAF Frequency converter | SAF Active fault (bit masked) |
| VentComActual.CA_Active-FaultSAF(4) | I | 520 | | SAF/EAF Frequency converter | SAF Active fault (bit masked) |
| VentComActual.CA_Active-FaultSAF(5) | I | 521 | | SAF/EAF Frequency converter | SAF Active fault (bit masked) |
| VentComActual.CA_Active-FaultEAF(1) | I | 522 | | SAF/EAF Frequency converter | EAF Active fault (bit masked) |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|-------------------------------------|-----------|----------------|---------------|-----------------------------|---------------------------------|
| VentComActual.CA_Active-FaultEAF(2) | I | 523 | | SAF/EAF Frequency converter | EAF Active fault (bit masked) |
| VentComActual.CA_Active-FaultEAF(3) | I | 524 | | SAF/EAF Frequency converter | EAF Active fault (bit masked) |
| VentComActual.CA_Active-FaultEAF(4) | I | 525 | | SAF/EAF Frequency converter | EAF Active fault (bit masked) |
| VentComActual.CA_Active-FaultEAF(5) | I | 526 | | SAF/EAF Frequency converter | EAF Active fault (bit masked) |
| VentComActual.CA_Actual-SpeedSAF(1) | R | 527 | | SAF/EAF Frequency converter | SAF Actual speed |
| VentComActual.CA_Actual-SpeedSAF(2) | R | 528 | | SAF/EAF Frequency converter | SAF Actual speed |
| VentComActual.CA_Actual-SpeedSAF(3) | R | 529 | | SAF/EAF Frequency converter | SAF Actual speed |
| VentComActual.CA_Actual-SpeedSAF(4) | R | 530 | | SAF/EAF Frequency converter | SAF Actual speed |
| VentComActual.CA_Actual-SpeedSAF(5) | R | 531 | | SAF/EAF Frequency converter | SAF Actual speed |
| VentComActual.CA_Actual-SpeedEAF(1) | R | 532 | | SAF/EAF Frequency converter | EAF Actual speed |
| VentComActual.CA_Actual-SpeedEAF(2) | R | 533 | | SAF/EAF Frequency converter | EAF Actual speed |
| VentComActual.CA_Actual-SpeedEAF(3) | R | 534 | | SAF/EAF Frequency converter | EAF Actual speed |
| VentComActual.CA_Actual-SpeedEAF(4) | R | 535 | | SAF/EAF Frequency converter | EAF Actual speed |
| VentComActual.CA_Actual-SpeedEAF(5) | R | 536 | | SAF/EAF Frequency converter | EAF Actual speed |
| VentComActual.CA_Accum-PowerSAF(1) | R | 537 | | SAF/EAF Frequency converter | SAF Accumulated power |
| VentComActual.CA_Accum-PowerSAF(2) | R | 538 | | SAF/EAF Frequency converter | SAF Accumulated power |
| VentComActual.CA_Accum-PowerSAF(3) | R | 539 | | SAF/EAF Frequency converter | SAF Accumulated power |
| VentComActual.CA_Accum-PowerSAF(4) | R | 540 | | SAF/EAF Frequency converter | SAF Accumulated power |
| VentComActual.CA_Accum-PowerSAF(5) | R | 541 | | SAF/EAF Frequency converter | SAF Accumulated power |
| VentComActual.CA_Accum-PowerEAF(1) | R | 542 | | SAF/EAF Frequency converter | EAF Accumulated power |
| VentComActual.CA_Accum-PowerEAF(2) | R | 543 | | SAF/EAF Frequency converter | EAF Accumulated power |
| VentComActual.CA_Accum-PowerEAF(3) | R | 544 | | SAF/EAF Frequency converter | EAF Accumulated power |
| VentComActual.CA_Accum-PowerEAF(4) | R | 545 | | SAF/EAF Frequency converter | EAF Accumulated power |
| VentComActual.CA_Accum-PowerEAF(5) | R | 546 | | SAF/EAF Frequency converter | EAF Accumulated power |
| VentComActual.CA_VVXFault | I | 547 | | VVX | VVX Fault contents (bit masked) |
| VentComActual.CA_Damper-ActPos(1) | R | 548 | | Damper | Damper actual position |
| VentComActual.CA_Damper-ActPos(2) | R | 549 | | Damper | Damper actual position |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|-----------------------------------|-----------|----------------|---------------|--------------------|--|
| VentComActual.CA_Damper-ActPos(3) | R | 550 | | Damper | Damper actual position |
| VentComActual.CA_Damper-ActPos(4) | R | 551 | | Damper | Damper actual position |
| VentComActual.CA_Damper-ActPos(5) | R | 552 | | Damper | Damper actual position |
| VentComActual.CA_Damper-Fault(1) | I | 553 | | Damper | Damper fault contents (bit masked) |
| VentComActual.CA_Damper-Fault(2) | I | 554 | | Damper | Damper fault contents (bit masked) |
| VentComActual.CA_Damper-Fault(3) | I | 555 | | Damper | Damper fault contents (bit masked) |
| VentComActual.CA_Damper-Fault(4) | I | 556 | | Damper | Damper fault contents (bit masked) |
| VentComActual.CA_Damper-Fault(5) | I | 557 | | Damper | Damper fault contents (bit masked) |
| VentActual.A_EnergyFanDay (0) | R | 558 | | Energy consumption | Sum of today and last 7 days total energy (kWh). Index 0 = today, 1=yesterday, 2=.... Scale factor = 0.1 |
| VentActual.A_EnergyFanDay (1) | R | 560 | | Energy consumption | Sum of today and last 7 days total energy (kWh). Index 0 = today, 1=yesterday, 2=.... |
| VentActual.A_EnergyFanDay (2) | R | 562 | | Energy consumption | Sum of today and last 7 days total energy (kWh). Index 0 = today, 1=yesterday, 2=.... Scale factor = 0.1 |
| VentActual.A_EnergyFanDay (3) | R | 564 | | Energy consumption | Sum of today and last 7 days total energy (kWh). Index 0 = today, 1=yesterday, 2=.... Scale factor = 0.1 |
| VentActual.A_EnergyFanDay (4) | R | 566 | | Energy consumption | Sum of today and last 7 days total energy (kWh). Index 0 = today, 1=yesterday, 2=.... Scale factor = 0.1 |
| VentActual.A_EnergyFanDay (5) | R | 568 | | Energy consumption | Sum of today and last 7 days total energy (kWh). Index 0 = today, 1=yesterday, 2=.... Scale factor = 0.1 |
| VentActual.A_EnergyFanDay (6) | R | 570 | | Energy consumption | Sum of today and last 7 days total energy (kWh). Index 0 = today, 1=yesterday, 2=.... Scale factor = 0.1 |
| VentActual.A_EnergyFanDay (7) | R | 572 | | Energy consumption | Sum of today and last 7 days total energy (kWh). Index 0 = today, 1=yesterday, 2=.... Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(1) | R | 574 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(2) | R | 576 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|----------------------------------|-----------|----------------|---------------|--------------------|--|
| VentActual.A_EnergyFan-Month(3) | R | 578 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(4) | R | 580 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(5) | R | 582 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(6) | R | 584 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(7) | R | 586 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(8) | R | 588 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(9) | R | 590 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(10) | R | 592 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(11) | R | 594 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(12) | R | 596 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(13) | R | 598 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |

Input register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|----------------------------------|-----------|----------------|---------------|--------------------|--|
| VentActual.A_EnergyFan-Month(14) | R | 600 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(15) | R | 602 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(16) | R | 604 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(17) | R | 606 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(18) | R | 608 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(19) | R | 610 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(20) | R | 612 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(21) | R | 614 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(22) | R | 616 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(23) | R | 618 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(24) | R | 620 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|----------------------------------|-----------|----------------|---------------|--------------------|--|
| VentActual.A_EnergyFan-Month(25) | R | 622 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(26) | R | 624 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(27) | R | 626 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(28) | R | 628 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(29) | R | 630 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(30) | R | 632 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(31) | R | 634 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(32) | R | 636 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(33) | R | 638 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(34) | R | 640 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFan-Month(35) | R | 642 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |

Input register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|------------------------------------|-----------|----------------|---------------|---------------------------|--|
| VentActual.A_EnergyFan-Month(36) | R | 644 | | Energy consumption | Sum of month total energy used (kWh). Index 1-12 = month this year. Index 13-24 = month last year. Index 25-36 = month 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFanYear (0) | R | 646 | | Energy consumption | Sum of year total energy used (MWh). Index 0 = this year. Index 1 = previous year. Index 2 = 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFanYear (1) | R | 648 | | Energy consumption | Sum of year total energy used (MWh). Index 0 = this year. Index 1 = previous year. Index 2 = 2 years ago.. Scale factor = 0.1 |
| VentActual.A_EnergyFanYear (2) | R | 650 | | Energy consumption | Sum of year total energy used (MWh). Index 0 = this year. Index 1 = previous year. Index 2 = 2 years ago. Scale factor = 0.1 |
| VentActual.A_EnergyFanPwr | R | 652 | | Energy consumption | Current fans total power (kW). Scale factor = 0.1 |
| VentActual.A_CompLow-SpeedSAF(0) | R | 654 | | SAF/EAF Pressure and Flow | Total compensation low speed SAF. Scale factor = 0.1 |
| VentActual.A_CompLowNormalSpeedSAF | R | 655 | | SAF/EAF Pressure and Flow | Total compensation normal speed SAF. Scale factor = 0.1 |
| VentActual.A_CompLowHighSpeedSAF | R | 656 | | SAF/EAF Pressure and Flow | Total compensation high speed SAF. Scale factor = 0.1 |
| VentActual.A_CompLowSpeedEAF(0) | R | 657 | | SAF/EAF Pressure and Flow | Total compensation low speed EAF. Scale factor = 0.1 |
| VentActual.A_CompNormalSpeedEAF | R | 658 | | SAF/EAF Pressure and Flow | Total compensation normal speed EAF. Scale factor = 0.1 |
| VentActual.A_CompHighSpeedEAF | R | 659 | | SAF/EAF Pressure and Flow | Total compensation high speed EAF. Scale factor = 0.1 |
| VentActual.A_SAFPID_SetP | R | 660 | | SAF/EAF Pressure and Flow | Actual setpoint SAF. Scale factor = 0.1 |
| VentActual.A_EAFPID_SetP | R | 661 | | SAF/EAF Pressure and Flow | Actual setpoint EAF. Scale factor = 0.1 |

5 Holding register

The EXOL type of the signals:

R = Real (-3.3E38 - 3.3E38)

RB = Real stored in a bitpac

I = Integer (-32768 - 32767)

X = Index (0 - 255)

L = Logic (0/1)

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--------------------|-----------|----------------|---------------|-----------------|--|
| TimeDp.Posts(0).T1 | RB | 1 | 0 | Timer Low Speed | Start time period 1 Monday low speed (HH.MM) |
| TimeDp.Posts(0).T2 | RB | 2 | 0 | Timer Low Speed | Stop time period 1 Monday low speed |
| TimeDp.Posts(0).T3 | RB | 3 | 0 | Timer Low Speed | Start time period 2 Monday low speed |
| TimeDp.Posts(0).T4 | RB | 4 | 0 | Timer Low Speed | Stop time period 2 Monday low speed |
| TimeDp.Posts(0).T5 | RB | 5 | 0 | Timer Low Speed | Start time period 3 Monday low speed |
| TimeDp.Posts(0).T6 | RB | 6 | 0 | Timer Low Speed | Stop time period 3 Monday low speed |
| TimeDp.Posts(0).T7 | RB | 7 | 0 | Timer Low Speed | Start time period 4 Monday low speed |
| TimeDp.Posts(0).T8 | RB | 8 | 0 | Timer Low Speed | Stop time period 4 Monday low speed |
| TimeDp.Posts(1).T1 | RB | 9 | 0 | Timer Low Speed | Start time period 1 Tuesday low speed |
| TimeDp.Posts(1).T2 | RB | 10 | 0 | Timer Low Speed | Stop time period 1 Tuesday low speed |
| TimeDp.Posts(1).T3 | RB | 11 | 0 | Timer Low Speed | Start time period 2 Tuesday low speed |
| TimeDp.Posts(1).T4 | RB | 12 | 0 | Timer Low Speed | Stop time period 2 Tuesday low speed |
| TimeDp.Posts(1).T5 | RB | 13 | 0 | Timer Low Speed | Start time period 3 Tuesday low speed |
| TimeDp.Posts(1).T6 | RB | 14 | 0 | Timer Low Speed | Stop time period 3 Tuesday low speed |
| TimeDp.Posts(1).T7 | RB | 15 | 0 | Timer Low Speed | Start time period 4 Tuesday low speed |
| TimeDp.Posts(1).T8 | RB | 16 | 0 | Timer Low Speed | Stop time period 4 Tuesday low speed |
| TimeDp.Posts(2).T1 | RB | 17 | 0 | Timer Low Speed | Start time period 1 Wedn. low speed |
| TimeDp.Posts(2).T2 | RB | 18 | 0 | Timer Low Speed | Stop time period 1 Wedn. low speed |
| TimeDp.Posts(2).T3 | RB | 19 | 0 | Timer Low Speed | Start time period 2 Wedn. low speed |
| TimeDp.Posts(2).T4 | RB | 20 | 0 | Timer Low Speed | Stop time period 2 Wedn. low speed |
| TimeDp.Posts(2).T5 | RB | 21 | 0 | Timer Low Speed | Start time period 3 Wedn. low speed |
| TimeDp.Posts(2).T6 | RB | 22 | 0 | Timer Low Speed | Stop time period 3 Wedn. low speed |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--------------------|-----------|----------------|---------------|-----------------|--|
| TimeDp.Posts(2).T7 | RB | 23 | 0 | Timer Low Speed | Start time period 4 Wedn. low speed |
| TimeDp.Posts(2).T8 | RB | 24 | 0 | Timer Low Speed | Stop time period 4 Wedn. low speed |
| TimeDp.Posts(3).T1 | RB | 25 | 0 | Timer Low Speed | Start time period 1 Thursday low speed |
| TimeDp.Posts(3).T2 | RB | 26 | 0 | Timer Low Speed | Stop time period 1 Thursday low speed |
| TimeDp.Posts(3).T3 | RB | 27 | 0 | Timer Low Speed | Start time period 2 Thursday low speed |
| TimeDp.Posts(3).T4 | RB | 28 | 0 | Timer Low Speed | Stop time period 2 Thursday low speed |
| TimeDp.Posts(3).T5 | RB | 29 | 0 | Timer Low Speed | Start time period 3 Thursday low speed |
| TimeDp.Posts(3).T6 | RB | 30 | 0 | Timer Low Speed | Stop time period 3 Thursday low speed |
| TimeDp.Posts(3).T7 | RB | 31 | 0 | Timer Low Speed | Start time period 4 Thursday low speed |
| TimeDp.Posts(3).T8 | RB | 32 | 0 | Timer Low Speed | Stop time period 4 Thursday low speed |
| TimeDp.Posts(4).T1 | RB | 33 | 0 | Timer Low Speed | Start time period 1 Friday low speed |
| TimeDp.Posts(4).T2 | RB | 34 | 0 | Timer Low Speed | Stop time period 1 Friday low speed |
| TimeDp.Posts(4).T3 | RB | 35 | 0 | Timer Low Speed | Start time period 2 Friday low speed |
| TimeDp.Posts(4).T4 | RB | 36 | 0 | Timer Low Speed | Stop time period 2 Friday low speed |
| TimeDp.Posts(4).T5 | RB | 37 | 0 | Timer Low Speed | Start time period 3 Friday low speed |
| TimeDp.Posts(4).T6 | RB | 38 | 0 | Timer Low Speed | Stop time period 3 Friday low speed |
| TimeDp.Posts(4).T7 | RB | 39 | 0 | Timer Low Speed | Start time period 4 Friday low speed |
| TimeDp.Posts(4).T8 | RB | 40 | 0 | Timer Low Speed | Stop time period 4 Friday low speed |
| TimeDp.Posts(5).T1 | RB | 41 | 0 | Timer Low Speed | Start time period 1 Saturday low speed |
| TimeDp.Posts(5).T2 | RB | 42 | 0 | Timer Low Speed | Stop time period 1 Saturday low speed |
| TimeDp.Posts(5).T3 | RB | 43 | 0 | Timer Low Speed | Start time period 2 Saturday low speed |
| TimeDp.Posts(5).T4 | RB | 44 | 0 | Timer Low Speed | Stop time period 2 Saturday low speed |
| TimeDp.Posts(5).T5 | RB | 45 | 0 | Timer Low Speed | Start time period 3 Saturday low speed |
| TimeDp.Posts(5).T6 | RB | 46 | 0 | Timer Low Speed | Stop time period 3 Saturday low speed |
| TimeDp.Posts(5).T7 | RB | 47 | 0 | Timer Low Speed | Start time period 4 Saturday low speed |
| TimeDp.Posts(5).T8 | RB | 48 | 0 | Timer Low Speed | Stop time period 4 Saturday low speed |
| TimeDp.Posts(6).T1 | RB | 49 | 0 | Timer Low Speed | Start time period 1 Sunday low speed |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--------------------|-----------|----------------|---------------|--------------------|---|
| TimeDp.Posts(6).T2 | RB | 50 | 0 | Timer Low Speed | Stop time period 1 Sunday low speed |
| TimeDp.Posts(6).T3 | RB | 51 | 0 | Timer Low Speed | Start time period 2 Sunday low speed |
| TimeDp.Posts(6).T4 | RB | 52 | 0 | Timer Low Speed | Stop time period 2 Sunday low speed |
| TimeDp.Posts(6).T5 | RB | 53 | 0 | Timer Low Speed | Start time period 3 Sunday low speed |
| TimeDp.Posts(6).T6 | RB | 54 | 0 | Timer Low Speed | Stop time period 3 Sunday low speed |
| TimeDp.Posts(6).T7 | RB | 55 | 0 | Timer Low Speed | Start time period 4 Sunday low speed |
| TimeDp.Posts(6).T8 | RB | 56 | 0 | Timer Low Speed | Stop time period 4 Sunday low speed |
| TimeDp.Posts(7).T1 | RB | 57 | 0 | Timer Low Speed | Start time period 1 Holiday low speed |
| TimeDp.Posts(7).T2 | RB | 58 | 0 | Timer Low Speed | Stop time period 1 Holiday low speed |
| TimeDp.Posts(7).T3 | RB | 59 | 0 | Timer Low Speed | Start time period 2 Holiday low speed |
| TimeDp.Posts(7).T4 | RB | 60 | 0 | Timer Low Speed | Stop time period 2 Holiday low speed |
| TimeDp.Posts(7).T5 | RB | 61 | 0 | Timer Low Speed | Start time period 3 Holiday low speed |
| TimeDp.Posts(7).T6 | RB | 62 | 0 | Timer Low Speed | Stop time period 3 Holiday low speed |
| TimeDp.Posts(7).T7 | RB | 63 | 0 | Timer Low Speed | Start time period 4 Holiday low speed |
| TimeDp.Posts(7).T8 | RB | 64 | 0 | Timer Low Speed | Stop time period 4 Holiday low speed |
| TimeDp.Posts(8).T1 | RB | 65 | 0 | Timer Normal Speed | Start time period 1 Monday normal speed (HH.MM) |
| TimeDp.Posts(8).T2 | RB | 66 | 24 | Timer Normal Speed | Stop time period 1 Monday normal speed |
| TimeDp.Posts(8).T3 | RB | 67 | 0 | Timer Normal Speed | Start time period 2 Monday normal speed |
| TimeDp.Posts(8).T4 | RB | 68 | 0 | Timer Normal Speed | Stop time period 2 Monday normal speed |
| TimeDp.Posts(8).T5 | RB | 69 | 0 | Timer Normal Speed | Start time period 3 Monday normal speed |
| TimeDp.Posts(8).T6 | RB | 70 | 0 | Timer Normal Speed | Stop time period 3 Monday normal speed |
| TimeDp.Posts(8).T7 | RB | 71 | 0 | Timer Normal Speed | Start time period 4 Monday normal speed |
| TimeDp.Posts(8).T8 | RB | 72 | 0 | Timer Normal Speed | Stop time period 4 Monday normal speed |
| TimeDp.Posts(9).T1 | RB | 73 | 0 | Timer Normal Speed | Start time period 1 Tuesday normal speed |
| TimeDp.Posts(9).T2 | RB | 74 | 24 | Timer Normal Speed | Stop time period 1 Tuesday normal speed |
| TimeDp.Posts(9).T3 | RB | 75 | 0 | Timer Normal Speed | Start time period 2 Tuesday normal speed |
| TimeDp.Posts(9).T4 | RB | 76 | 0 | Timer Normal Speed | Stop time period 2 Tuesday normal speed |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------|-----------|----------------|---------------|--------------------|---|
| TimeDp.Posts(9).T5 | RB | 77 | 0 | Timer Normal Speed | Start time period 3 Tuesday normal speed |
| TimeDp.Posts(9).T6 | RB | 78 | 0 | Timer Normal Speed | Stop time period 3 Tuesday normal speed |
| TimeDp.Posts(9).T7 | RB | 79 | 0 | Timer Normal Speed | Start time period 4 Tuesday normal speed |
| TimeDp.Posts(9).T8 | RB | 80 | 0 | Timer Normal Speed | Stop time period 4 Tuesday normal speed |
| TimeDp.Posts(10).T1 | RB | 81 | 0 | Timer Normal Speed | Start time period 1 Wedn. normal speed |
| TimeDp.Posts(10).T2 | RB | 82 | 24 | Timer Normal Speed | Stop time period 1 Wedn. normal speed |
| TimeDp.Posts(10).T3 | RB | 83 | 0 | Timer Normal Speed | Start time period 2 Wedn. normal speed |
| TimeDp.Posts(10).T4 | RB | 84 | 0 | Timer Normal Speed | Stop time period 2 Wedn. normal speed |
| TimeDp.Posts(10).T5 | RB | 85 | 0 | Timer Normal Speed | Start time period 3 Wedn. normal speed |
| TimeDp.Posts(10).T6 | RB | 86 | 0 | Timer Normal Speed | Stop time period 3 Wedn. normal speed |
| TimeDp.Posts(10).T7 | RB | 87 | 0 | Timer Normal Speed | Start time period 4 Wedn. normal speed |
| TimeDp.Posts(10).T8 | RB | 88 | 0 | Timer Normal Speed | Stop time period 4 Wedn. normal speed |
| TimeDp.Posts(11).T1 | RB | 89 | 0 | Timer Normal Speed | Start time period 1 Thursday normalspeed |
| TimeDp.Posts(11).T2 | RB | 90 | 24 | Timer Normal Speed | Stop time period 1 Thursday normal speed |
| TimeDp.Posts(11).T3 | RB | 91 | 0 | Timer Normal Speed | Start time period 2 Thursday normal speed |
| TimeDp.Posts(11).T4 | RB | 92 | 0 | Timer Normal Speed | Stop time period 2 Thursday normal speed |
| TimeDp.Posts(11).T5 | RB | 93 | 0 | Timer Normal Speed | Start time period 3 Thursday normalspeed |
| TimeDp.Posts(11).T6 | RB | 94 | 0 | Timer Normal Speed | Stop time period 3 Thursday normal speed |
| TimeDp.Posts(11).T7 | RB | 95 | 0 | Timer Normal Speed | Start time period 4 Thursday normal speed |
| TimeDp.Posts(11).T8 | RB | 96 | 0 | Timer Normal Speed | Stop time period 4 Thursday normal speed |
| TimeDp.Posts(12).T1 | RB | 97 | 0 | Timer Normal Speed | Start time period 1 Friday normal speed |
| TimeDp.Posts(12).T2 | RB | 98 | 24 | Timer Normal Speed | Stop time period 1 Friday normal speed |
| TimeDp.Posts(12).T3 | RB | 99 | 0 | Timer Normal Speed | Start time period 2 Friday normal speed |
| TimeDp.Posts(12).T4 | RB | 100 | 0 | Timer Normal Speed | Stop time period 2 Friday normal speed |
| TimeDp.Posts(12).T5 | RB | 101 | 0 | Timer Normal Speed | Start time period 3 Friday normal speed |
| TimeDp.Posts(12).T6 | RB | 102 | 0 | Timer Normal Speed | Stop time period 3 Friday normal speed |
| TimeDp.Posts(12).T7 | RB | 103 | 0 | Timer Normal Speed | Start time period 4 Friday normal speed |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------|-----------|----------------|---------------|--------------------|---|
| TimeDp.Posts(12).T8 | RB | 104 | 0 | Timer Normal Speed | Stop time period 4 Friday normal speed |
| TimeDp.Posts(13).T1 | RB | 105 | 0 | Timer Normal Speed | Start time period 1 Saturday normal speed |
| TimeDp.Posts(13).T2 | RB | 106 | 24 | Timer Normal Speed | Stop time period 1 Saturday normal speed |
| TimeDp.Posts(13).T3 | RB | 107 | 0 | Timer Normal Speed | Start time period 2 Saturday normal speed |
| TimeDp.Posts(13).T4 | RB | 108 | 0 | Timer Normal Speed | Stop time period 2 Saturday normal speed |
| TimeDp.Posts(13).T5 | RB | 109 | 0 | Timer Normal Speed | Start time period 3 Saturday normal speed |
| TimeDp.Posts(13).T6 | RB | 110 | 0 | Timer Normal Speed | Stop time period 3 Saturday normal speed |
| TimeDp.Posts(13).T7 | RB | 111 | 0 | Timer Normal Speed | Start time period 4 Saturday normal speed |
| TimeDp.Posts(13).T8 | RB | 112 | 0 | Timer Normal Speed | Stop time period 4 Saturday normal speed |
| TimeDp.Posts(14).T1 | RB | 113 | 0 | Timer Normal Speed | Start time period 1 Sunday normal speed |
| TimeDp.Posts(14).T2 | RB | 114 | 24 | Timer Normal Speed | Stop time period 1 Sunday normal speed |
| TimeDp.Posts(14).T3 | RB | 115 | 0 | Timer Normal Speed | Start time period 2 Sunday normal speed |
| TimeDp.Posts(14).T4 | RB | 116 | 0 | Timer Normal Speed | Stop time period 2 Sunday normal speed |
| TimeDp.Posts(14).T5 | RB | 117 | 0 | Timer Normal Speed | Start time period 3 Sunday normal speed |
| TimeDp.Posts(14).T6 | RB | 118 | 0 | Timer Normal Speed | Stop time period 3 Sunday normal speed |
| TimeDp.Posts(14).T7 | RB | 119 | 0 | Timer Normal Speed | Start time period 4 Sunday normal speed |
| TimeDp.Posts(14).T8 | RB | 120 | 0 | Timer Normal Speed | Stop time period 4 Sunday normal speed |
| TimeDp.Posts(15).T1 | RB | 121 | 0 | Timer Normal Speed | Start time period 1 Holiday normal speed |
| TimeDp.Posts(15).T2 | RB | 122 | 0 | Timer Normal Speed | Stop time period 1 Holiday normal speed |
| TimeDp.Posts(15).T3 | RB | 123 | 0 | Timer Normal Speed | Start time period 2 Holiday normal speed |
| TimeDp.Posts(15).T4 | RB | 124 | 0 | Timer Normal Speed | Stop time period 2 Holiday normal speed |
| TimeDp.Posts(15).T5 | RB | 125 | 0 | Timer Normal Speed | Start time period 3 Holiday normal speed |
| TimeDp.Posts(15).T6 | RB | 126 | 0 | Timer Normal Speed | Stop time period 3 Holiday normal speed |
| TimeDp.Posts(15).T7 | RB | 127 | 0 | Timer Normal Speed | Start time period 4 Holiday normal speed |
| TimeDp.Posts(15).T8 | RB | 128 | 0 | Timer Normal Speed | Stop time period 4 Holiday normal speed |
| TimeDp.Posts(16).T1 | RB | 129 | 0 | Timer High Speed | Start time period 1 Monday high speed (HH.MM) |
| TimeDp.Posts(16).T2 | RB | 130 | 0 | Timer High Speed | Stop time period 1 Monday high speed |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------|-----------|----------------|---------------|------------------|---|
| TimeDp.Posts(16).T3 | RB | 131 | 0 | Timer High Speed | Start time period 2 Monday high speed |
| TimeDp.Posts(16).T4 | RB | 132 | 0 | Timer High Speed | Stop time period 2 Monday high speed |
| TimeDp.Posts(16).T5 | RB | 133 | 0 | Timer High Speed | Start time period 3 Monday high speed |
| TimeDp.Posts(16).T6 | RB | 134 | 0 | Timer High Speed | Stop time period 3 Monday high speed |
| TimeDp.Posts(16).T7 | RB | 135 | 0 | Timer High Speed | Start time period 4 Monday high speed |
| TimeDp.Posts(16).T8 | RB | 136 | 0 | Timer High Speed | Stop time period 4 Monday high speed |
| TimeDp.Posts(17).T1 | RB | 137 | 0 | Timer High Speed | Start time period 1 Tuesday high speed |
| TimeDp.Posts(17).T2 | RB | 138 | 0 | Timer High Speed | Stop time period 1 Tuesday high speed |
| TimeDp.Posts(17).T3 | RB | 139 | 0 | Timer High Speed | Start time period 2 Tuesday high speed |
| TimeDp.Posts(17).T4 | RB | 140 | 0 | Timer High Speed | Stop time period 2 Tuesday high speed |
| TimeDp.Posts(17).T5 | RB | 141 | 0 | Timer High Speed | Start time period 3 Tuesday high speed |
| TimeDp.Posts(17).T6 | RB | 142 | 0 | Timer High Speed | Stop time period 3 Tuesday high speed |
| TimeDp.Posts(17).T7 | RB | 143 | 0 | Timer High Speed | Start time period 4 Tuesday high speed |
| TimeDp.Posts(17).T8 | RB | 144 | 0 | Timer High Speed | Stop time period 4 Tuesday high speed |
| TimeDp.Posts(18).T1 | RB | 145 | 0 | Timer High Speed | Start time period 1 Wedn. high speed |
| TimeDp.Posts(18).T2 | RB | 146 | 0 | Timer High Speed | Stop time period 1 Wedn. high speed |
| TimeDp.Posts(18).T3 | RB | 147 | 0 | Timer High Speed | Start time period 2 Wedn. high speed |
| TimeDp.Posts(18).T4 | RB | 148 | 0 | Timer High Speed | Stop time period 2 Wedn. high speed |
| TimeDp.Posts(18).T5 | RB | 149 | 0 | Timer High Speed | Start time period 3 Wedn. high speed |
| TimeDp.Posts(18).T6 | RB | 150 | 0 | Timer High Speed | Stop time period 3 Wedn. high speed |
| TimeDp.Posts(18).T7 | RB | 151 | 0 | Timer High Speed | Start time period 4 Wedn. high speed |
| TimeDp.Posts(18).T8 | RB | 152 | 0 | Timer High Speed | Stop time period 4 Wedn. high speed |
| TimeDp.Posts(19).T1 | RB | 153 | 0 | Timer High Speed | Start time period 1 Thursday highspeed |
| TimeDp.Posts(19).T2 | RB | 154 | 0 | Timer High Speed | Stop time period 1 Thursday high speed |
| TimeDp.Posts(19).T3 | RB | 155 | 0 | Timer High Speed | Start time period 2 Thursday high speed |
| TimeDp.Posts(19).T4 | RB | 156 | 0 | Timer High Speed | Stop time period 2 Thursday high speed |
| TimeDp.Posts(19).T5 | RB | 157 | 0 | Timer High Speed | Start time period 3 Thursday highspeed |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------|-----------|----------------|---------------|------------------|---|
| TimeDp.Posts(19).T6 | RB | 158 | 0 | Timer High Speed | Stop time period 3 Thursday high speed |
| TimeDp.Posts(19).T7 | RB | 159 | 0 | Timer High Speed | Start time period 4 Thursday high speed |
| TimeDp.Posts(19).T8 | RB | 160 | 0 | Timer High Speed | Stop time period 4 Thursday high speed |
| TimeDp.Posts(20).T1 | RB | 161 | 0 | Timer High Speed | Start time period 1 Friday high speed |
| TimeDp.Posts(20).T2 | RB | 162 | 0 | Timer High Speed | Stop time period 1 Friday high speed |
| TimeDp.Posts(20).T3 | RB | 163 | 0 | Timer High Speed | Start time period 2 Friday high speed |
| TimeDp.Posts(20).T4 | RB | 164 | 0 | Timer High Speed | Stop time period 2 Friday high speed |
| TimeDp.Posts(20).T5 | RB | 165 | 0 | Timer High Speed | Start time period 3 Friday high speed |
| TimeDp.Posts(20).T6 | RB | 166 | 0 | Timer High Speed | Stop time period 3 Friday high speed |
| TimeDp.Posts(20).T7 | RB | 167 | 0 | Timer High Speed | Start time period 4 Friday high speed |
| TimeDp.Posts(20).T8 | RB | 168 | 0 | Timer High Speed | Stop time period 4 Friday high speed |
| TimeDp.Posts(21).T1 | RB | 169 | 0 | Timer High Speed | Start time period 1 Saturday high speed |
| TimeDp.Posts(21).T2 | RB | 170 | 0 | Timer High Speed | Stop time period 1 Saturday high speed |
| TimeDp.Posts(21).T3 | RB | 171 | 0 | Timer High Speed | Start time period 2 Saturday high speed |
| TimeDp.Posts(21).T4 | RB | 172 | 0 | Timer High Speed | Stop time period 2 Saturday high speed |
| TimeDp.Posts(21).T5 | RB | 173 | 0 | Timer High Speed | Start time period 3 Saturday high speed |
| TimeDp.Posts(21).T6 | RB | 174 | 0 | Timer High Speed | Stop time period 3 Saturday high speed |
| TimeDp.Posts(21).T7 | RB | 175 | 0 | Timer High Speed | Start time period 4 Saturday high speed |
| TimeDp.Posts(21).T8 | RB | 176 | 0 | Timer High Speed | Stop time period 4 Saturday high speed |
| TimeDp.Posts(22).T1 | RB | 177 | 0 | Timer High Speed | Start time period 1 Sunday high speed |
| TimeDp.Posts(22).T2 | RB | 178 | 0 | Timer High Speed | Stop time period 1 Sunday high speed |
| TimeDp.Posts(22).T3 | RB | 179 | 0 | Timer High Speed | Start time period 2 Sunday high speed |
| TimeDp.Posts(22).T4 | RB | 180 | 0 | Timer High Speed | Stop time period 2 Sunday high speed |
| TimeDp.Posts(22).T5 | RB | 181 | 0 | Timer High Speed | Start time period 3 Sunday high speed |
| TimeDp.Posts(22).T6 | RB | 182 | 0 | Timer High Speed | Stop time period 3 Sunday high speed |
| TimeDp.Posts(22).T7 | RB | 183 | 0 | Timer High Speed | Start time period 4 Sunday high speed |
| TimeDp.Posts(22).T8 | RB | 184 | 0 | Timer High Speed | Stop time period 4 Sunday high speed |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------|-----------|----------------|---------------|------------------|---|
| TimeDp.Posts(23).T1 | RB | 185 | 0 | Timer High Speed | Start time period 1 Holiday high speed |
| TimeDp.Posts(23).T2 | RB | 186 | 0 | Timer High Speed | Stop time period 1 Holiday high speed |
| TimeDp.Posts(23).T3 | RB | 187 | 0 | Timer High Speed | Start time period 2 Holiday high speed |
| TimeDp.Posts(23).T4 | RB | 188 | 0 | Timer High Speed | Stop time period 2 Holiday high speed |
| TimeDp.Posts(23).T5 | RB | 189 | 0 | Timer High Speed | Start time period 3 Holiday high speed |
| TimeDp.Posts(23).T6 | RB | 190 | 0 | Timer High Speed | Stop time period 3 Holiday high speed |
| TimeDp.Posts(23).T7 | RB | 191 | 0 | Timer High Speed | Start time period 4 Holiday high speed |
| TimeDp.Posts(23).T8 | RB | 192 | 0 | Timer High Speed | Stop time period 4 Holiday high speed |
| TimeDp.Posts(24).T1 | RB | 193 | 0 | Timer Output 1 | Start time period 1 Monday timer output 1 (HH.MM) |
| TimeDp.Posts(24).T2 | RB | 194 | 0 | Timer Output 1 | Stop time period 1 Monday timer output 1 |
| TimeDp.Posts(24).T3 | RB | 195 | 0 | Timer Output 1 | Start time period 2 Monday timer output 1 |
| TimeDp.Posts(24).T4 | RB | 196 | 0 | Timer Output 1 | Stop time period 2 Monday timer output 1 |
| TimeDp.Posts(24).T5 | RB | 197 | 0 | Timer Output 1 | Start time period 3 Monday timer output 1 |
| TimeDp.Posts(24).T6 | RB | 198 | 0 | Timer Output 1 | Stop time period 3 Monday timer output 1 |
| TimeDp.Posts(24).T7 | RB | 199 | 0 | Timer Output 1 | Start time period 4 Monday timer output 1 |
| TimeDp.Posts(24).T8 | RB | 200 | 0 | Timer Output 1 | Stop time period 4 Monday timer output 1 |
| TimeDp.Posts(25).T1 | RB | 201 | 0 | Timer Output 1 | Start time period 1 Tuesday timer output 1 |
| TimeDp.Posts(25).T2 | RB | 202 | 0 | Timer Output 1 | Stop time period 1 Tuesday timer output 1 |
| TimeDp.Posts(25).T3 | RB | 203 | 0 | Timer Output 1 | Start time period 2 Tuesday timer output 1 |
| TimeDp.Posts(25).T4 | RB | 204 | 0 | Timer Output 1 | Stop time period 2 Tuesday timer output 1 |
| TimeDp.Posts(25).T5 | RB | 205 | 0 | Timer Output 1 | Start time period 3 Tuesday timer output 1 |
| TimeDp.Posts(25).T6 | RB | 206 | 0 | Timer Output 1 | Stop time period 3 Tuesday timer output 1 |
| TimeDp.Posts(25).T7 | RB | 207 | 0 | Timer Output 1 | Start time period 4 Tuesday timer output 1 |
| TimeDp.Posts(25).T8 | RB | 208 | 0 | Timer Output 1 | Stop time period 4 Tuesday timer output 1 |
| TimeDp.Posts(26).T1 | RB | 209 | 0 | Timer Output 1 | Start time period 1 Wednesd. timer output 1 |
| TimeDp.Posts(26).T2 | RB | 210 | 0 | Timer Output 1 | Stop time period 1 Wedn. timer output 1 |
| TimeDp.Posts(26).T3 | RB | 211 | 0 | Timer Output 1 | Start time period 2 Wedn. timer output 1 |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------|-----------|----------------|---------------|----------------|---|
| TimeDp.Posts(26).T4 | RB | 212 | 0 | Timer Output 1 | Stop time period 2 Wedn. timer output 1 |
| TimeDp.Posts(26).T5 | RB | 213 | 0 | Timer Output 1 | Start time period 3 Wednesd. timer output 1 |
| TimeDp.Posts(26).T6 | RB | 214 | 0 | Timer Output 1 | Stop time period 3 Wedn. timer output 1 |
| TimeDp.Posts(26).T7 | RB | 215 | 0 | Timer Output 1 | Start time period 4 Wedn. timer output 1 |
| TimeDp.Posts(26).T8 | RB | 216 | 0 | Timer Output 1 | Stop time period 4 Wedn. timer output 1 |
| TimeDp.Posts(27).T1 | RB | 217 | 0 | Timer Output 1 | Start time period 1 Thursday timer output 1 |
| TimeDp.Posts(27).T2 | RB | 218 | 0 | Timer Output 1 | Stop time period 1 Thursday timer output 1 |
| TimeDp.Posts(27).T3 | RB | 219 | 0 | Timer Output 1 | Start time period 2 Thursday timer output 1 |
| TimeDp.Posts(27).T4 | RB | 220 | 0 | Timer Output 1 | Stop time period 2 Thursday timer output 1 |
| TimeDp.Posts(27).T5 | RB | 221 | 0 | Timer Output 1 | Start time period 3 Thursday timer output 1 |
| TimeDp.Posts(27).T6 | RB | 222 | 0 | Timer Output 1 | Stop time period 3 Thursday timer output 1 |
| TimeDp.Posts(27).T7 | RB | 223 | 0 | Timer Output 1 | Start time period 4 Thursday timer output 1 |
| TimeDp.Posts(27).T8 | RB | 224 | 0 | Timer Output 1 | Stop time period 4 Thursday timer output 1 |
| TimeDp.Posts(28).T1 | RB | 225 | 0 | Timer Output 1 | Start time period 1 Friday timer output 1 |
| TimeDp.Posts(28).T2 | RB | 226 | 0 | Timer Output 1 | Stop time period 1 Friday timer output 1 |
| TimeDp.Posts(28).T3 | RB | 227 | 0 | Timer Output 1 | Start time period 2 Friday timer output 1 |
| TimeDp.Posts(28).T4 | RB | 228 | 0 | Timer Output 1 | Stop time period 2 Friday timer output 1 |
| TimeDp.Posts(28).T5 | RB | 229 | 0 | Timer Output 1 | Start time period 3 Friday timer output 1 |
| TimeDp.Posts(28).T6 | RB | 230 | 0 | Timer Output 1 | Stop time period 3 Friday timer output 1 |
| TimeDp.Posts(28).T7 | RB | 231 | 0 | Timer Output 1 | Start time period 4 Friday timer output 1 |
| TimeDp.Posts(28).T8 | RB | 232 | 0 | Timer Output 1 | Stop time period 4 Friday timer output 1 |
| TimeDp.Posts(29).T1 | RB | 233 | 0 | Timer Output 1 | Start time period 1 Saturday timer output 1 |
| TimeDp.Posts(29).T2 | RB | 234 | 0 | Timer Output 1 | Stop time period 1 Saturday timer output 1 |
| TimeDp.Posts(29).T3 | RB | 235 | 0 | Timer Output 1 | Start time period 2 Saturday timer output 1 |
| TimeDp.Posts(29).T4 | RB | 236 | 0 | Timer Output 1 | Stop time period 2 Saturday timer output 1 |
| TimeDp.Posts(29).T5 | RB | 237 | 0 | Timer Output 1 | Start time period 3 Saturday timer output 1 |
| TimeDp.Posts(29).T6 | RB | 238 | 0 | Timer Output 1 | Stop time period 3 Saturday timer output 1 |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------|-----------|----------------|---------------|----------------|---|
| TimeDp.Posts(29).T7 | RB | 239 | 0 | Timer Output 1 | Start time period 4 Saturday timer output 1 |
| TimeDp.Posts(29).T8 | RB | 240 | 0 | Timer Output 1 | Stop time period 4 Saturday timer output 1 |
| TimeDp.Posts(30).T1 | RB | 241 | 0 | Timer Output 1 | Start time period 1 Sunday timer output 1 |
| TimeDp.Posts(30).T2 | RB | 242 | 0 | Timer Output 1 | Stop time period 1 Sunday timer output 1 |
| TimeDp.Posts(30).T3 | RB | 243 | 0 | Timer Output 1 | Start time period 2 Sunday timer output 1 |
| TimeDp.Posts(30).T4 | RB | 244 | 0 | Timer Output 1 | Stop time period 2 Sunday timer output 1 |
| TimeDp.Posts(30).T5 | RB | 245 | 0 | Timer Output 1 | Start time period 3 Sunday timer output 1 |
| TimeDp.Posts(30).T6 | RB | 246 | 0 | Timer Output 1 | Stop time period 3 Sunday timer output 1 |
| TimeDp.Posts(30).T7 | RB | 247 | 0 | Timer Output 1 | Start time period 4 Sunday timer output 1 |
| TimeDp.Posts(30).T8 | RB | 248 | 0 | Timer Output 1 | Stop time period 4 Sunday timer output 1 |
| TimeDp.Posts(31).T1 | RB | 249 | 0 | Timer Output 1 | Start time period 1 Holiday timer output 1 |
| TimeDp.Posts(31).T2 | RB | 250 | 0 | Timer Output 1 | Stop time period 1 Holiday timer output 1 |
| TimeDp.Posts(31).T3 | RB | 251 | 0 | Timer Output 1 | Start time period 2 Holiday timer output 1 |
| TimeDp.Posts(31).T4 | RB | 252 | 0 | Timer Output 1 | Stop time period 2 Holiday timer output 1 |
| TimeDp.Posts(31).T5 | RB | 253 | 0 | Timer Output 1 | Start time period 3 Holiday timer output 1 |
| TimeDp.Posts(31).T6 | RB | 254 | 0 | Timer Output 1 | Stop time period 3 Holiday timer output 1 |
| TimeDp.Posts(31).T7 | RB | 255 | 0 | Timer Output 1 | Start time period 4 Holiday timer output 1 |
| TimeDp.Posts(31).T8 | RB | 256 | 0 | Timer Output 1 | Stop time period 4 Holiday timer output 1 |
| TimeDp.Posts(32).T1 | RB | 257 | 0 | Timer Output 2 | Start time period 1 Monday timer output 2 (HH.MM) |
| TimeDp.Posts(32).T2 | RB | 258 | 0 | Timer Output 2 | Stop time period 1 Monday timer output 2 |
| TimeDp.Posts(32).T3 | RB | 259 | 0 | Timer Output 2 | Start time period 2 Monday timer output 2 |
| TimeDp.Posts(32).T4 | RB | 260 | 0 | Timer Output 2 | Stop time period 2 Monday timer output 2 |
| TimeDp.Posts(32).T5 | RB | 261 | 0 | Timer Output 2 | Start time period 3 Monday timer output 2 |
| TimeDp.Posts(32).T6 | RB | 262 | 0 | Timer Output 2 | Stop time period 3 Monday timer output 2 |
| TimeDp.Posts(32).T7 | RB | 263 | 0 | Timer Output 2 | Start time period 4 Monday timer output 2 |
| TimeDp.Posts(32).T8 | RB | 264 | 0 | Timer Output 2 | Stop time period 4 Monday timer output 2 |
| TimeDp.Posts(33).T1 | RB | 265 | 0 | Timer Output 2 | Start time period 1 Tuesday timer output 2 |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------|-----------|----------------|---------------|----------------|---|
| TimeDp.Posts(33).T2 | RB | 266 | 0 | Timer Output 2 | Stop time period 1 Tuesday timer output 2 |
| TimeDp.Posts(33).T3 | RB | 267 | 0 | Timer Output 2 | Start time period 2 Tuesday timer output 2 |
| TimeDp.Posts(33).T4 | RB | 268 | 0 | Timer Output 2 | Stop time period 2 Tuesday timer output 2 |
| TimeDp.Posts(33).T5 | RB | 269 | 0 | Timer Output 2 | Start time period 3 Tuesday timer output 2 |
| TimeDp.Posts(33).T6 | RB | 270 | 0 | Timer Output 2 | Stop time period 3 Tuesday timer output 2 |
| TimeDp.Posts(33).T7 | RB | 271 | 0 | Timer Output 2 | Start time period 4 Tuesday timer output 2 |
| TimeDp.Posts(33).T8 | RB | 272 | 0 | Timer Output 2 | Stop time period 4 Tuesday timer output 2 |
| TimeDp.Posts(34).T1 | RB | 273 | 0 | Timer Output 2 | Start time period 1 Wedn. timer output 2 |
| TimeDp.Posts(34).T2 | RB | 274 | 0 | Timer Output 2 | Stop time period 1 Wedn. timer output 2 |
| TimeDp.Posts(34).T3 | RB | 275 | 0 | Timer Output 2 | Start time period 2 Wedn. timer output 2 |
| TimeDp.Posts(34).T4 | RB | 276 | 0 | Timer Output 2 | Stop time period 2 Wedn. timer output 2 |
| TimeDp.Posts(34).T5 | RB | 277 | 0 | Timer Output 2 | Start time period 3 Wedn. timer output 2 |
| TimeDp.Posts(34).T6 | RB | 278 | 0 | Timer Output 2 | Stop time period 3 Wedn. timer output 2 |
| TimeDp.Posts(34).T7 | RB | 279 | 0 | Timer Output 2 | Start time period 4 Wedn. timer output 2 |
| TimeDp.Posts(34).T8 | RB | 280 | 0 | Timer Output 2 | Stop time period 4 Wedn. timer output 2 |
| TimeDp.Posts(35).T1 | RB | 281 | 0 | Timer Output 2 | Start time period 1 Thursday timer output 2 |
| TimeDp.Posts(35).T2 | RB | 282 | 0 | Timer Output 2 | Stop time period 1 Thursday timer output 2 |
| TimeDp.Posts(35).T3 | RB | 283 | 0 | Timer Output 2 | Start time period 2 Thursday timer output 2 |
| TimeDp.Posts(35).T4 | RB | 284 | 0 | Timer Output 2 | Stop time period 2 Thursday timer output 2 |
| TimeDp.Posts(35).T5 | RB | 285 | 0 | Timer Output 2 | Start time period 3 Thursday timer output 2 |
| TimeDp.Posts(35).T6 | RB | 286 | 0 | Timer Output 2 | Stop time period 3 Thursday timer output 2 |
| TimeDp.Posts(35).T7 | RB | 287 | 0 | Timer Output 2 | Start time period 4 Thursday timer output 2 |
| TimeDp.Posts(35).T8 | RB | 288 | 0 | Timer Output 2 | Stop time period 4 Thursday timer output 2 |
| TimeDp.Posts(36).T1 | RB | 289 | 0 | Timer Output 2 | Start time period 1 Friday timer output 2 |
| TimeDp.Posts(36).T2 | RB | 290 | 0 | Timer Output 2 | Stop time period 1 Friday timer output 2 |
| TimeDp.Posts(36).T3 | RB | 291 | 0 | Timer Output 2 | Start time period 2 Friday timer output 2 |
| TimeDp.Posts(36).T4 | RB | 292 | 0 | Timer Output 2 | Stop time period 2 Friday timer output 2 |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------|-----------|----------------|---------------|----------------|---|
| TimeDp.Posts(36).T5 | RB | 293 | 0 | Timer Output 2 | Start time period 3 Friday timer output 2 |
| TimeDp.Posts(36).T6 | RB | 294 | 0 | Timer Output 2 | Stop time period 3 Friday timer output 2 |
| TimeDp.Posts(36).T7 | RB | 295 | 0 | Timer Output 2 | Start time period 4 Friday timer output 2 |
| TimeDp.Posts(36).T8 | RB | 296 | 0 | Timer Output 2 | Stop time period 4 Friday timer output 2 |
| TimeDp.Posts(37).T1 | RB | 297 | 0 | Timer Output 2 | Start time period 1 Saturday timer output 2 |
| TimeDp.Posts(37).T2 | RB | 298 | 0 | Timer Output 2 | Stop time period 1 Saturday timer output 2 |
| TimeDp.Posts(37).T3 | RB | 299 | 0 | Timer Output 2 | Start time period 2 Saturday timer output 2 |
| TimeDp.Posts(37).T4 | RB | 300 | 0 | Timer Output 2 | Stop time period 2 Saturday timer output 2 |
| TimeDp.Posts(37).T5 | RB | 301 | 0 | Timer Output 2 | Start time period 3 Saturday timer output 2 |
| TimeDp.Posts(37).T6 | RB | 302 | 0 | Timer Output 2 | Stop time period 3 Saturday timer output 2 |
| TimeDp.Posts(37).T7 | RB | 303 | 0 | Timer Output 2 | Start time period 4 Saturday timer output 2 |
| TimeDp.Posts(37).T8 | RB | 304 | 0 | Timer Output 2 | Stop time period 4 Saturday timer output 2 |
| TimeDp.Posts(38).T1 | RB | 305 | 0 | Timer Output 2 | Start time period 1 Sunday timer output 2 |
| TimeDp.Posts(38).T2 | RB | 306 | 0 | Timer Output 2 | Stop time period 1 Sunday timer output 2 |
| TimeDp.Posts(38).T3 | RB | 307 | 0 | Timer Output 2 | Start time period 2 Sunday timer output 2 |
| TimeDp.Posts(38).T4 | RB | 308 | 0 | Timer Output 2 | Stop time period 2 Sunday timer output 2 |
| TimeDp.Posts(38).T5 | RB | 309 | 0 | Timer Output 2 | Start time period 3 Sunday timer output 2 |
| TimeDp.Posts(38).T6 | RB | 310 | 0 | Timer Output 2 | Stop time period 3 Sunday timer output 2 |
| TimeDp.Posts(38).T7 | RB | 311 | 0 | Timer Output 2 | Start time period 4 Sunday timer output 2 |
| TimeDp.Posts(38).T8 | RB | 312 | 0 | Timer Output 2 | Stop time period 4 Sunday timer output 2 |
| TimeDp.Posts(39).T1 | RB | 313 | 0 | Timer Output 2 | Start time period 1 Holiday timer output 2 |
| TimeDp.Posts(39).T2 | RB | 314 | 0 | Timer Output 2 | Stop time period 1 Holiday timer output 2 |
| TimeDp.Posts(39).T3 | RB | 315 | 0 | Timer Output 2 | Start time period 2 Holiday timer output 2 |
| TimeDp.Posts(39).T4 | RB | 316 | 0 | Timer Output 2 | Stop time period 2 Holiday timer output 2 |
| TimeDp.Posts(39).T5 | RB | 317 | 0 | Timer Output 2 | Start time period 3 Holiday timer output 2 |
| TimeDp.Posts(39).T6 | RB | 318 | 0 | Timer Output 2 | Stop time period 3 Holiday timer output 2 |
| TimeDp.Posts(39).T7 | RB | 319 | 0 | Timer Output 2 | Start time period 4 Holiday timer output 2 |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------|-----------|----------------|---------------|----------------|---|
| TimeDp.Posts(39).T8 | RB | 320 | 0 | Timer Output 2 | Stop time period 4 Holiday timer output 2 |
| TimeDp.Posts(40).T1 | RB | 321 | 0 | Timer Output 3 | Start time period 1 Monday timer output 3 (HH.MM) |
| TimeDp.Posts(40).T2 | RB | 322 | 0 | Timer Output 3 | Stop time period 1 Monday timer output 3 |
| TimeDp.Posts(40).T3 | RB | 323 | 0 | Timer Output 3 | Start time period 2 Monday timer output 3 |
| TimeDp.Posts(40).T4 | RB | 324 | 0 | Timer Output 3 | Stop time period 2 Monday timer output 3 |
| TimeDp.Posts(40).T5 | RB | 325 | 0 | Timer Output 3 | Start time period 3 Monday timer output 3 |
| TimeDp.Posts(40).T6 | RB | 326 | 0 | Timer Output 3 | Stop time period 3 Monday timer output 3 |
| TimeDp.Posts(40).T7 | RB | 327 | 0 | Timer Output 3 | Start time period 4 Monday timer output 3 |
| TimeDp.Posts(40).T8 | RB | 328 | 0 | Timer Output 3 | Stop time period 4 Monday timer output 3 |
| TimeDp.Posts(41).T1 | RB | 329 | 0 | Timer Output 3 | Start time period 1 Tuesday timer output 3 |
| TimeDp.Posts(41).T2 | RB | 330 | 0 | Timer Output 3 | Stop time period 1 Tuesday timer output 3 |
| TimeDp.Posts(41).T3 | RB | 331 | 0 | Timer Output 3 | Start time period 2 Tuesday timer output 3 |
| TimeDp.Posts(41).T4 | RB | 332 | 0 | Timer Output 3 | Stop time period 2 Tuesday timer output 3 |
| TimeDp.Posts(41).T5 | RB | 333 | 0 | Timer Output 3 | Start time period 3 Tuesday timer output 3 |
| TimeDp.Posts(41).T6 | RB | 334 | 0 | Timer Output 3 | Stop time period 3 Tuesday timer output 3 |
| TimeDp.Posts(41).T7 | RB | 335 | 0 | Timer Output 3 | Start time period 4 Tuesday timer output 3 |
| TimeDp.Posts(41).T8 | RB | 336 | 0 | Timer Output 3 | Stop time period 4 Tuesday timer output 3 |
| TimeDp.Posts(42).T1 | RB | 337 | 0 | Timer Output 3 | Start time period 1 Wedn. timer output 3 |
| TimeDp.Posts(42).T2 | RB | 338 | 0 | Timer Output 3 | Stop time period 1 Wedn. timer output 3 |
| TimeDp.Posts(42).T3 | RB | 339 | 0 | Timer Output 3 | Start time period 2 Wedn. timer output 3 |
| TimeDp.Posts(42).T4 | RB | 340 | 0 | Timer Output 3 | Stop time period 2 Wedn. timer output 3 |
| TimeDp.Posts(42).T5 | RB | 341 | 0 | Timer Output 3 | Start time period 3 Wedn. timer output 3 |
| TimeDp.Posts(42).T6 | RB | 342 | 0 | Timer Output 3 | Stop time period 3 Wedn. timer output 3 |
| TimeDp.Posts(42).T7 | RB | 343 | 0 | Timer Output 3 | Start time period 4 Wedn. timer output 3 |
| TimeDp.Posts(42).T8 | RB | 344 | 0 | Timer Output 3 | Stop time period 4 Wedn. timer output 3 |
| TimeDp.Posts(43).T1 | RB | 345 | 0 | Timer Output 3 | Start time period 1 Thursday timer output 3 |
| TimeDp.Posts(43).T2 | RB | 346 | 0 | Timer Output 3 | Stop time period 1 Thursday timer output 3 |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------|-----------|----------------|---------------|----------------|---|
| TimeDp.Posts(43).T3 | RB | 347 | 0 | Timer Output 3 | Start time period 2 Thursday timer output 3 |
| TimeDp.Posts(43).T4 | RB | 348 | 0 | Timer Output 3 | Stop time period 2 Thursday timer output 3 |
| TimeDp.Posts(43).T5 | RB | 349 | 0 | Timer Output 3 | Start time period 3 Thursday timer output 3 |
| TimeDp.Posts(43).T6 | RB | 350 | 0 | Timer Output 3 | Stop time period 3 Thursday timer output 3 |
| TimeDp.Posts(43).T7 | RB | 351 | 0 | Timer Output 3 | Start time period 4 Thursday timer output 3 |
| TimeDp.Posts(43).T8 | RB | 352 | 0 | Timer Output 3 | Stop time period 4 Thursday timer output 3 |
| TimeDp.Posts(44).T1 | RB | 353 | 0 | Timer Output 3 | Start time period 1 Friday timer output 3 |
| TimeDp.Posts(44).T2 | RB | 354 | 0 | Timer Output 3 | Stop time period 1 Friday timer output 3 |
| TimeDp.Posts(44).T3 | RB | 355 | 0 | Timer Output 3 | Start time period 2 Friday timer output 3 |
| TimeDp.Posts(44).T4 | RB | 356 | 0 | Timer Output 3 | Stop time period 2 Friday timer output 3 |
| TimeDp.Posts(44).T5 | RB | 357 | 0 | Timer Output 3 | Start time period 3 Friday timer output 3 |
| TimeDp.Posts(44).T6 | RB | 358 | 0 | Timer Output 3 | Stop time period 3 Friday timer output 3 |
| TimeDp.Posts(44).T7 | RB | 359 | 0 | Timer Output 3 | Start time period 4 Friday timer output 3 |
| TimeDp.Posts(44).T8 | RB | 360 | 0 | Timer Output 3 | Stop time period 4 Friday timer output 3 |
| TimeDp.Posts(45).T1 | RB | 361 | 0 | Timer Output 3 | Start time period 1 Saturday timer output 3 |
| TimeDp.Posts(45).T2 | RB | 362 | 0 | Timer Output 3 | Stop time period 1 Saturday timer output 3 |
| TimeDp.Posts(45).T3 | RB | 363 | 0 | Timer Output 3 | Start time period 2 Saturday timer output 3 |
| TimeDp.Posts(45).T4 | RB | 364 | 0 | Timer Output 3 | Stop time period 2 Saturday timer output 3 |
| TimeDp.Posts(45).T5 | RB | 365 | 0 | Timer Output 3 | Start time period 3 Saturday timer output 3 |
| TimeDp.Posts(45).T6 | RB | 366 | 0 | Timer Output 3 | Stop time period 3 Saturday timer output 3 |
| TimeDp.Posts(45).T7 | RB | 367 | 0 | Timer Output 3 | Start time period 4 Saturday timer output 3 |
| TimeDp.Posts(45).T8 | RB | 368 | 0 | Timer Output 3 | Stop time period 4 Saturday timer output 3 |
| TimeDp.Posts(46).T1 | RB | 369 | 0 | Timer Output 3 | Start time period 1 Sunday timer output 3 |
| TimeDp.Posts(46).T2 | RB | 370 | 0 | Timer Output 3 | Stop time period 1 Sunday timer output 3 |
| TimeDp.Posts(46).T3 | RB | 371 | 0 | Timer Output 3 | Start time period 2 Sunday timer output 3 |
| TimeDp.Posts(46).T4 | RB | 372 | 0 | Timer Output 3 | Stop time period 2 Sunday timer output 3 |
| TimeDp.Posts(46).T5 | RB | 373 | 0 | Timer Output 3 | Start time period 3 Sunday timer output 3 |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------|-----------|----------------|---------------|----------------|---|
| TimeDp.Posts(46).T6 | RB | 374 | 0 | Timer Output 3 | Stop time period 3 Sunday timer output 3 |
| TimeDp.Posts(46).T7 | RB | 375 | 0 | Timer Output 3 | Start time period 4 Sunday timer output 3 |
| TimeDp.Posts(46).T8 | RB | 376 | 0 | Timer Output 3 | Stop time period 4 Sunday timer output 3 |
| TimeDp.Posts(47).T1 | RB | 377 | 0 | Timer Output 3 | Start time period 1 Holiday timer output 3 |
| TimeDp.Posts(47).T2 | RB | 378 | 0 | Timer Output 3 | Stop time period 1 Holiday timer output 3 |
| TimeDp.Posts(47).T3 | RB | 379 | 0 | Timer Output 3 | Start time period 2 Holiday timer output 3 |
| TimeDp.Posts(47).T4 | RB | 380 | 0 | Timer Output 3 | Stop time period 2 Holiday timer output 3 |
| TimeDp.Posts(47).T5 | RB | 381 | 0 | Timer Output 3 | Start time period 3 Holiday timer output 3 |
| TimeDp.Posts(47).T6 | RB | 382 | 0 | Timer Output 3 | Stop time period 3 Holiday timer output 3 |
| TimeDp.Posts(47).T7 | RB | 383 | 0 | Timer Output 3 | Start time period 4 Holiday timer output 3 |
| TimeDp.Posts(47).T8 | RB | 384 | 0 | Timer Output 3 | Stop time period 4 Holiday timer output 3 |
| TimeDp.Posts(48).T1 | RB | 385 | 0 | Timer Output 4 | Start time period 1 Monday timer output 4 (HH.MM) |
| TimeDp.Posts(48).T2 | RB | 386 | 0 | Timer Output 4 | Stop time period 1 Monday timer output 4 |
| TimeDp.Posts(48).T3 | RB | 387 | 0 | Timer Output 4 | Start time period 2 Monday timer output 4 |
| TimeDp.Posts(48).T4 | RB | 388 | 0 | Timer Output 4 | Stop time period 2 Monday timer output 4 |
| TimeDp.Posts(48).T5 | RB | 389 | 0 | Timer Output 4 | Start time period 3 Monday timer output 4 |
| TimeDp.Posts(48).T6 | RB | 390 | 0 | Timer Output 4 | Stop time period 3 Monday timer output 4 |
| TimeDp.Posts(48).T7 | RB | 391 | 0 | Timer Output 4 | Start time period 4 Monday timer output 4 |
| TimeDp.Posts(48).T8 | RB | 392 | 0 | Timer Output 4 | Stop time period 4 Monday timer output 4 |
| TimeDp.Posts(49).T1 | RB | 393 | 0 | Timer Output 4 | Start time period 1 Tuesday timer output 4 |
| TimeDp.Posts(49).T2 | RB | 394 | 0 | Timer Output 4 | Stop time period 1 Tuesday timer output 4 |
| TimeDp.Posts(49).T3 | RB | 395 | 0 | Timer Output 4 | Start time period 2 Tuesday timer output 4 |
| TimeDp.Posts(49).T4 | RB | 396 | 0 | Timer Output 4 | Stop time period 2 Tuesday timer output 4 |
| TimeDp.Posts(49).T5 | RB | 397 | 0 | Timer Output 4 | Start time period 3 Tuesday timer output 4 |
| TimeDp.Posts(49).T6 | RB | 398 | 0 | Timer Output 4 | Stop time period 3 Tuesday timer output 4 |
| TimeDp.Posts(49).T7 | RB | 399 | 0 | Timer Output 4 | Start time period 4 Tuesday timer output 4 |
| TimeDp.Posts(49).T8 | RB | 400 | 0 | Timer Output 4 | Stop time period 4 Tuesday timer output 4 |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------|-----------|----------------|---------------|----------------|---|
| TimeDp.Posts(50).T1 | RB | 401 | 0 | Timer Output 4 | Start time period 1 Wedn. timer output 4 |
| TimeDp.Posts(50).T2 | RB | 402 | 0 | Timer Output 4 | Stop time period 1 Wedn. timer output 4 |
| TimeDp.Posts(50).T3 | RB | 403 | 0 | Timer Output 4 | Start time period 2 Wedn. timer output 4 |
| TimeDp.Posts(50).T4 | RB | 404 | 0 | Timer Output 4 | Stop time period 2 Wedn. timer output 4 |
| TimeDp.Posts(50).T5 | RB | 405 | 0 | Timer Output 4 | Start time period 3 Wedn. timer output 4 |
| TimeDp.Posts(50).T6 | RB | 406 | 0 | Timer Output 4 | Stop time period 3 Wedn. timer output 4 |
| TimeDp.Posts(50).T7 | RB | 407 | 0 | Timer Output 4 | Start time period 4 Wedn. timer output 4 |
| TimeDp.Posts(50).T8 | RB | 408 | 0 | Timer Output 4 | Stop time period 4 Wedn. timer output 4 |
| TimeDp.Posts(51).T1 | RB | 409 | 0 | Timer Output 4 | Start time period 1 Thursday timer output 4 |
| TimeDp.Posts(51).T2 | RB | 410 | 0 | Timer Output 4 | Stop time period 1 Thursday timer output 4 |
| TimeDp.Posts(51).T3 | RB | 411 | 0 | Timer Output 4 | Start time period 2 Thursday timer output 4 |
| TimeDp.Posts(51).T4 | RB | 412 | 0 | Timer Output 4 | Stop time period 2 Thursday timer output 4 |
| TimeDp.Posts(51).T5 | RB | 413 | 0 | Timer Output 4 | Start time period 3 Thursday timer output 4 |
| TimeDp.Posts(51).T6 | RB | 414 | 0 | Timer Output 4 | Stop time period 3 Thursday timer output 4 |
| TimeDp.Posts(51).T7 | RB | 415 | 0 | Timer Output 4 | Start time period 4 Thursday timer output 4 |
| TimeDp.Posts(51).T8 | RB | 416 | 0 | Timer Output 4 | Stop time period 4 Thursday timer output 4 |
| TimeDp.Posts(52).T1 | RB | 417 | 0 | Timer Output 4 | Start time period 1 Friday timer output 4 |
| TimeDp.Posts(52).T2 | RB | 418 | 0 | Timer Output 4 | Stop time period 1 Friday timer output 4 |
| TimeDp.Posts(52).T3 | RB | 419 | 0 | Timer Output 4 | Start time period 2 Friday timer output 4 |
| TimeDp.Posts(52).T4 | RB | 420 | 0 | Timer Output 4 | Stop time period 2 Friday timer output 4 |
| TimeDp.Posts(52).T5 | RB | 421 | 0 | Timer Output 4 | Start time period 3 Friday timer output 4 |
| TimeDp.Posts(52).T6 | RB | 422 | 0 | Timer Output 4 | Stop time period 3 Friday timer output 4 |
| TimeDp.Posts(52).T7 | RB | 423 | 0 | Timer Output 4 | Start time period 4 Friday timer output 4 |
| TimeDp.Posts(52).T8 | RB | 424 | 0 | Timer Output 4 | Stop time period 4 Friday timer output 4 |
| TimeDp.Posts(53).T1 | RB | 425 | 0 | Timer Output 4 | Start time period 1 Saturday timer output 4 |
| TimeDp.Posts(53).T2 | RB | 426 | 0 | Timer Output 4 | Stop time period 1 Saturday timer output 4 |
| TimeDp.Posts(53).T3 | RB | 427 | 0 | Timer Output 4 | Start time period 2 Saturday timer output 4 |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--------------------------|-----------|----------------|---------------|----------------|---|
| TimeDp.Posts(53).T4 | RB | 428 | 0 | Timer Output 4 | Stop time period 2 Saturday timer output 4 |
| TimeDp.Posts(53).T5 | RB | 429 | 0 | Timer Output 4 | Start time period 3 Saturday timer output 4 |
| TimeDp.Posts(53).T6 | RB | 430 | 0 | Timer Output 4 | Stop time period 3 Saturday timer output 4 |
| TimeDp.Posts(53).T7 | RB | 431 | 0 | Timer Output 4 | Start time period 4 Saturday timer output 4 |
| TimeDp.Posts(53).T8 | RB | 432 | 0 | Timer Output 4 | Stop time period 4 Saturday timer output 4 |
| TimeDp.Posts(54).T1 | RB | 433 | 0 | Timer Output 4 | Start time period 1 Sunday timer output 4 |
| TimeDp.Posts(54).T2 | RB | 434 | 0 | Timer Output 4 | Stop time period 1 Sunday timer output 4 |
| TimeDp.Posts(54).T3 | RB | 435 | 0 | Timer Output 4 | Start time period 2 Sunday timer output 4 |
| TimeDp.Posts(54).T4 | RB | 436 | 0 | Timer Output 4 | Stop time period 2 Sunday timer output 4 |
| TimeDp.Posts(54).T5 | RB | 437 | 0 | Timer Output 4 | Start time period 3 Sunday timer output 4 |
| TimeDp.Posts(54).T6 | RB | 438 | 0 | Timer Output 4 | Stop time period 3 Sunday timer output 4 |
| TimeDp.Posts(54).T7 | RB | 439 | 0 | Timer Output 4 | Start time period 4 Sunday timer output 4 |
| TimeDp.Posts(54).T8 | RB | 440 | 0 | Timer Output 4 | Stop time period 4 Sunday timer output 4 |
| TimeDp.Posts(55).T1 | RB | 441 | 0 | Timer Output 4 | Start time period 1 Holiday timer output 4 |
| TimeDp.Posts(55).T2 | RB | 442 | 0 | Timer Output 4 | Stop time period 1 Holiday timer output 4 |
| TimeDp.Posts(55).T3 | RB | 443 | 0 | Timer Output 4 | Start time period 2 Holiday timer output 4 |
| TimeDp.Posts(55).T4 | RB | 444 | 0 | Timer Output 4 | Stop time period 2 Holiday timer output 4 |
| TimeDp.Posts(55).T5 | RB | 445 | 0 | Timer Output 4 | Start time period 3 Holiday timer output 4 |
| TimeDp.Posts(55).T6 | RB | 446 | 0 | Timer Output 4 | Stop time period 3 Holiday timer output 4 |
| TimeDp.Posts(55).T7 | RB | 447 | 0 | Timer Output 4 | Start time period 4 Holiday timer output 4 |
| TimeDp.Posts(55).T8 | RB | 448 | 0 | Timer Output 4 | Stop time period 4 Holiday timer output 4 |
| TimeHp.Posts(0).FromDate | RB | 449 | 01.01 | Holidays | Start date holiday period 1 (MM.DD) |
| TimeHp.Posts(0).ToDate | RB | 450 | 01.01 | Holidays | End date holiday period 1 (MM.DD) |
| TimeHp.Posts(1).FromDate | RB | 451 | 01.01 | Holidays | Start date holiday period 2 (MM.DD) |
| TimeHp.Posts(1).ToDate | RB | 452 | 01.01 | Holidays | End date holiday period 2 (MM.DD) |
| TimeHp.Posts(2).FromDate | RB | 453 | 01.01 | Holidays | Start date holiday period 3 (MM.DD) |
| TimeHp.Posts(2).ToDate | RB | 454 | 01.01 | Holidays | End date holiday period 3 (MM.DD) |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------------|-----------|----------------|---------------|----------|--------------------------------------|
| TimeHp.Posts(3).FromDate | RB | 455 | 01.01 | Holidays | Start date holiday period 4 (MM.DD) |
| TimeHp.Posts(3).ToDate | RB | 456 | 01.01 | Holidays | End date holiday period 4 (MM.DD) |
| TimeHp.Posts(4).FromDate | RB | 457 | 01.01 | Holidays | Start date holiday period 5 (MM.DD) |
| TimeHp.Posts(4).ToDate | RB | 458 | 01.01 | Holidays | End date holiday period 5 (MM.DD) |
| TimeHp.Posts(5).FromDate | RB | 459 | 01.01 | Holidays | Start date holiday period 6 (MM.DD) |
| TimeHp.Posts(5).ToDate | RB | 460 | 01.01 | Holidays | End date holiday period 6 (MM.DD) |
| TimeHp.Posts(6).FromDate | RB | 461 | 01.01 | Holidays | Start date holiday period 7 (MM.DD) |
| TimeHp.Posts(6).ToDate | RB | 462 | 01.01 | Holidays | End date holiday period 7 (MM.DD) |
| TimeHp.Posts(7).FromDate | RB | 463 | 01.01 | Holidays | Start date holiday period 8 (MM.DD) |
| TimeHp.Posts(7).ToDate | RB | 464 | 01.01 | Holidays | End date holiday period 8 (MM.DD) |
| TimeHp.Posts(8).FromDate | RB | 465 | 01.01 | Holidays | Start date holiday period 9 (MM.DD) |
| TimeHp.Posts(8).ToDate | RB | 466 | 01.01 | Holidays | End date holiday period 9 (MM.DD) |
| TimeHp.Posts(9).FromDate | RB | 467 | 01.01 | Holidays | Start date holiday period 10 (MM.DD) |
| TimeHp.Posts(9).ToDate | RB | 468 | 01.01 | Holidays | End date holiday period 10 (MM.DD) |
| TimeHp.Posts(10).FromDate | RB | 469 | 01.01 | Holidays | Start date holiday period 11 (MM.DD) |
| TimeHp.Posts(10).ToDate | RB | 470 | 01.01 | Holidays | End date holiday period 11 (MM.DD) |
| TimeHp.Posts(11).FromDate | RB | 471 | 01.01 | Holidays | Start date holiday period 12 (MM.DD) |
| TimeHp.Posts(11).ToDate | RB | 472 | 01.01 | Holidays | End date holiday period 12 (MM.DD) |
| TimeHp.Posts(12).FromDate | RB | 473 | 01.01 | Holidays | Start date holiday period 13 (MM.DD) |
| TimeHp.Posts(12).ToDate | RB | 474 | 01.01 | Holidays | End date holiday period 13 (MM.DD) |
| TimeHp.Posts(13).FromDate | RB | 475 | 01.01 | Holidays | Start date holiday period 14 (MM.DD) |
| TimeHp.Posts(13).ToDate | RB | 476 | 01.01 | Holidays | End date holiday period 14 (MM.DD) |
| TimeHp.Posts(14).FromDate | RB | 477 | 01.01 | Holidays | Start date holiday period 15 (MM.DD) |
| TimeHp.Posts(14).ToDate | RB | 478 | 01.01 | Holidays | End date holiday period 15 (MM.DD) |
| TimeHp.Posts(15).FromDate | RB | 479 | 01.01 | Holidays | Start date holiday period 16 (MM.DD) |
| TimeHp.Posts(15).ToDate | RB | 480 | 01.01 | Holidays | End date holiday period 16 (MM.DD) |
| TimeHp.Posts(16).FromDate | RB | 481 | 01.01 | Holidays | Start date holiday period 17 (MM.DD) |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|-----------------------------------|-----------|----------------|---------------|-------------|---|
| TimeHp.Posts(16).ToDate | RB | 482 | 01.01 | Holidays | End date holiday period 17 (MM.DD) |
| TimeHp.Posts(17).FromDate | RB | 483 | 01.01 | Holidays | Start date holiday period 18 (MM.DD) |
| TimeHp.Posts(17).ToDate | RB | 484 | 01.01 | Holidays | End date holiday period 18 (MM.DD) |
| TimeHp.Posts(18).FromDate | RB | 485 | 01.01 | Holidays | Start date holiday period 19 (MM.DD) |
| TimeHp.Posts(18).ToDate | RB | 486 | 01.01 | Holidays | End date holiday period 19 (MM.DD) |
| TimeHp.Posts(19).FromDate | RB | 487 | 01.01 | Holidays | Start date holiday period 20 (MM.DD) |
| TimeHp.Posts(19).ToDate | RB | 488 | 01.01 | Holidays | End date holiday period 20 (MM.DD) |
| TimeHp.Posts(20).FromDate | RB | 489 | 01.01 | Holidays | Start date holiday period 21 (MM.DD) |
| TimeHp.Posts(20).ToDate | RB | 490 | 01.01 | Holidays | End date holiday period 21 (MM.DD) |
| TimeHp.Posts(21).FromDate | RB | 491 | 01.01 | Holidays | Start date holiday period 22 (MM.DD) |
| TimeHp.Posts(21).ToDate | RB | 492 | 01.01 | Holidays | End date holiday period 22 (MM.DD) |
| TimeHp.Posts(22).FromDate | RB | 493 | 01.01 | Holidays | Start date holiday period 23 (MM.DD) |
| TimeHp.Posts(22).ToDate | RB | 494 | 01.01 | Holidays | End date holiday period 23 (MM.DD) |
| TimeHp.Posts(23).FromDate | RB | 495 | 01.01 | Holidays | Start date holiday period 24 (MM.DD) |
| TimeHp.Posts(23).ToDate | RB | 496 | 01.01 | Holidays | End date holiday period 24 (MM.DD) |
| TimePro.TC_FanLowSpeed_Status | X | 497 | 4 | Manual/Auto | Manual/Auto Low Speed time channel 0=Manual-Off 1=Manual-On 2=Forced Off 3=Forced On 4=Auto |
| TimePro.TC_FanNormal-Speed_Status | X | 498 | 4 | Manual/Auto | Manual/Auto Normal Speed time channel 0=Manual-Off 1=Manual-On 2=Forced Off 3=Forced On 4=Auto |
| TimePro.TC_FanHighSpeed_Status | X | 499 | 4 | Manual/Auto | Manual/Auto High Speed time channel 0=Manual-Off 1=Manual-On 2=Forced Off 3=Forced On 4=Auto |
| TimePro.TC_Extra1_Status | X | 500 | 4 | Manual/Auto | Manual/Auto Timer output 1 |
| TimePro.TC_Extra2_Status | X | 501 | 4 | Manual/Auto | Manual/Auto Timer output 2 |
| TimePro.TC_Extra3_Status | X | 502 | 4 | Manual/Auto | Manual/Auto Timer output 3 |
| TimePro.TC_Extra4_Status | X | 503 | 4 | Manual/Auto | Manual/Auto Timer output 4 |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--|-----------|----------------|---------------|------------------------|---|
| QSystem.Minute | X | 504 | | Real Time Clock | Real time clock: Minute 0-59 |
| QSystem.Hour | X | 505 | | Real Time Clock | Real time clock: Hour 0-23 |
| QSystem.WDay | X | 506 | | Real Time Clock | Real time clock: Day of Week 1-7, 1=Monday |
| QSystem.Week | X | 507 | | Real Time Clock | Real time clock: Week number 1-53 |
| QSystem.Date | X | 508 | | Real Time Clock | Real time clock: Day of month 1-31 |
| QSystem.Month | X | 509 | | Real Time Clock | Real time clock: Month 1-12 |
| QSystem.Year | X | 510 | | Real Time Clock | Real time clock: Year 0-99 |
| AlaData.Ala_MalfunctionSAF1_DelayValue | I | 511 | 120 sec | Settings, Alarm Delays | Malfunction SAF 1 alarm delay |
| AlaData.Ala_MalfunctionSAF2_DelayValue | I | 512 | 120 sec | Settings, Alarm Delays | Malfunction SAF 2 alarm delay |
| AlaData.Ala_MalfunctionSAF3_DelayValue | I | 513 | 120 sec | Settings, Alarm Delays | Malfunction SAF 3 alarm delay |
| AlaData.Ala_MalfunctionSAF4_DelayValue | I | 514 | 120 sec | Settings, Alarm Delays | Malfunction SAF 4 alarm delay |
| AlaData.Ala_MalfunctionSAF5_DelayValue | I | 515 | 120 sec | Settings, Alarm Delays | Malfunction SAF 5 alarm delay |
| AlaData.Ala_MalfunctionEAF1_DelayValue | I | 516 | 120 sec | Settings, Alarm Delays | Malfunction EAF 1 alarm delay |
| AlaData.Ala_MalfunctionEAF2_DelayValue | I | 517 | 120 sec | Settings, Alarm Delays | Malfunction EAF 2 alarm delay |
| AlaData.Ala_MalfunctionEAF3_DelayValue | I | 518 | 120 sec | Settings, Alarm Delays | Malfunction EAF 3 alarm delay |
| AlaData.Ala_MalfunctionEAF4_DelayValue | I | 519 | 120 sec | Settings, Alarm Delays | Malfunction EAF 4 alarm delay |
| AlaData.Ala_MalfunctionEAF5_DelayValue | I | 520 | 120 sec | Settings, Alarm Delays | Malfunction EAF 5 alarm delay |
| AlaData.Ala_AlarmSAF1_DelayValue | I | 521 | 0 | Settings, Alarm Delays | Alarm frequency converter SAF 1 alarm delay |
| AlaData.Ala_AlarmSAF2_DelayValue | I | 522 | 0 | Settings, Alarm Delays | Alarm frequency converter SAF 2 alarm delay |
| AlaData.Ala_AlarmSAF3_DelayValue | I | 523 | 0 | Settings, Alarm Delays | Alarm frequency converter SAF 3 alarm delay |
| AlaData.Ala_AlarmSAF4_DelayValue | I | 524 | 0 | Settings, Alarm Delays | Alarm frequency converter SAF 4 alarm delay |
| AlaData.Ala_AlarmSAF5_DelayValue | I | 525 | 0 | Settings, Alarm Delays | Alarm frequency converter SAF 5 alarm delay |
| AlaData.Ala_AlarmEAF1_DelayValue | I | 526 | 0 | Settings, Alarm Delays | Alarm frequency converter EAF 1 alarm delay |
| AlaData.Ala_AlarmEAF2_DelayValue | I | 527 | 0 | Settings, Alarm Delays | Alarm frequency converter EAF 2 alarm delay |
| AlaData.Ala_AlarmEAF3_DelayValue | I | 528 | 0 | Settings, Alarm Delays | Alarm frequency converter EAF 3 alarm delay |
| AlaData.Ala_AlarmEAF4_DelayValue | I | 529 | 0 | Settings, Alarm Delays | Alarm frequency converter EAF 4 alarm delay |
| AlaData.Ala_AlarmEAF5_DelayValue | I | 530 | 0 | Settings, Alarm Delays | Alarm frequency converter EAF 5 alarm delay |
| AlaData.Ala_WarningSAF1_DelayValue | I | 531 | 0 | Settings, Alarm Delays | Warning frequency converter SAF 1 alarm delay |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--|-----------|----------------|---------------|------------------------|--|
| AlaData.Ala_WarningSAF2_DelayValue | I | 532 | 0 | Settings, Alarm Delays | Warning frequency converter SAF 2 alarm delay |
| AlaData.Ala_WarningSAF3_DelayValue | I | 533 | 0 | Settings, Alarm Delays | Warning frequency converter SAF 3 alarm delay |
| AlaData.Ala_WarningSAF4_DelayValue | I | 534 | 0 | Settings, Alarm Delays | Warning frequency converter SAF 4 alarm delay |
| AlaData.Ala_WarningSAF5_DelayValue | I | 535 | 0 | Settings, Alarm Delays | Warning frequency converter SAF 5 alarm delay |
| AlaData.Ala_WarningEAF1_DelayValue | I | 536 | 0 | Settings, Alarm Delays | Warning frequency converter EAF 1 alarm delay |
| AlaData.Ala_WarningEAF2_DelayValue | I | 537 | 0 | Settings, Alarm Delays | Warning frequency converter EAF 2 alarm delay |
| AlaData.Ala_WarningEAF3_DelayValue | I | 538 | 0 | Settings, Alarm Delays | Warning frequency converter EAF 3 alarm delay |
| AlaData.Ala_WarningEAF4_DelayValue | I | 539 | 0 | Settings, Alarm Delays | Warning frequency converter EAF 4 alarm delay |
| AlaData.Ala_WarningEAF5_DelayValue | I | 540 | 0 | Settings, Alarm Delays | Warning frequency converter EAF 5 alarm delay |
| AlaData.Ala_External-RunSAF_DelayValue | I | 541 | 120 sec | Settings, Alarm Delays | External operation SAF alarm delay |
| AlaData.Ala_ExternalRunEAF_DelayValue | I | 542 | 120 sec | Settings, Alarm Delays | External operation EAF alarm delay |
| AlaData.Ala_ExternalRun-Motor1_DelayValue | I | 543 | 120 sec | Settings, Alarm Delays | Motor control 1 external operation alarm delay |
| AlaData.Ala_ExternalRun-Motor2_DelayValue | I | 544 | 120 sec | Settings, Alarm Delays | Motor control 2 external operation alarm delay |
| AlaData.Ala_MalfunctionPumpHeater_DelayValue | I | 545 | 5 sec | Settings, Alarm Delays | Malfunction pump heater alarm delay |
| AlaData.Ala_Malfunction-PumpCooler_DelayValue | I | 546 | 5 sec | Settings, Alarm Delays | Malfunction pump cooler alarm delay |
| AlaData.Ala_MalfunctionPumpExchanger_DelayValue | I | 547 | 20 sec | Settings, Alarm Delays | Malfunction pump exchanger alarm delay |
| AlaData.Ala_MalfunctionFireDamper_DelayValue | I | 548 | 5 sec | Settings, Alarm Delays | Malfunction fire damper alarm delay |
| AlaData.Ala_MalfunctionDamper_DelayValue | I | 549 | 90 sec | Settings, Alarm Delays | Malfunction damper alarm delay |
| AlaData.Ala_Malfunction-Motor1_DelayValue | I | 550 | 120 sec | Settings, Alarm Delays | Malfunction motor control 1 alarm delay |
| AlaData.Ala_Malfunction-Motor2_DelayValue | I | 551 | 120 sec | Settings, Alarm Delays | Malfunction motor control 1 alarm delay |
| AlaData.Ala_FireDamperExerciseStop_DelayValue | I | 552 | 0 | Settings, Alarm Delays | Fire damper exercise stop alarm delay |
| AlaData.Ala_Malfunction-PumpSequence1_DelayValue | I | 553 | 5 sec | Settings, Alarm Delays | Malfunction pump seq. A alarm delay |
| AlaData.Ala_Malfunction-PumpSequence2_DelayValue | I | 554 | 5 sec | Settings, Alarm Delays | Malfunction pump seq. B alarm delay |
| AlaData.Ala_Malfunction-PumpSequence3_DelayValue | I | 555 | 5 sec | Settings, Alarm Delays | Malfunction pump seq. C alarm delay |
| AlaData.Ala_Malfunction-PumpSequence4_DelayValue | I | 556 | 5 sec | Settings, Alarm Delays | Malfunction pump seq. D alarm delay |
| AlaData.Ala_Malfunction-PumpSequence5_DelayValue | I | 557 | 5 sec | Settings, Alarm Delays | Malfunction pump seq. E alarm delay |
| AlaData.Ala_Malfunction-PumpSequence6_DelayValue | I | 558 | 5 sec | Settings, Alarm Delays | Malfunction pump seq. F alarm delay |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---|-----------|----------------|---------------|------------------------|--|
| AlaData.Ala_Malfunction-PumpSequence7_DelayValue | I | 559 | 5 sec | Settings, Alarm Delays | Malfunction pump seq. G alarm delay |
| AlaData.Ala_Malfunction-PumpSequence8_DelayValue | I | 560 | 5 sec | Settings, Alarm Delays | Malfunction pump seq. H alarm delay |
| AlaData.Ala_Malfunction-PumpSequence9_DelayValue | I | 561 | 5 sec | Settings, Alarm Delays | Malfunction pump seq. I alarm delay |
| AlaData.Ala_Malfunction-PumpSequence10_DelayValue | I | 562 | 5 sec | Settings, Alarm Delays | Malfunction pump seq. J alarm delay |
| AlaData.Ala_FilterGuard1_DelayValue | I | 563 | 180 sec | Settings, Alarm Delays | Filter guard 1 alarm delay |
| AlaData.Ala_FilterGuard2_DelayValue | I | 564 | 180 sec | Settings, Alarm Delays | Filter guard 2 alarm delay |
| AlaData.Ala_FlowGuard_DelayValue | I | 565 | 5 sec | Settings, Alarm Delays | Flow guard alarm delay |
| AlaData.Ala_ExternalFrostGuard_DelayValue | I | 566 | 0 | Settings, Alarm Delays | External frost guard alarm delay |
| AlaData.Ala_DeicingGuard_DelayValue | I | 567 | 0 | Settings, Alarm Delays | Deicing pressure guard alarm delay |
| AlaData.Ala_FireAlarm_DelayValue | I | 568 | 0 | Settings, Alarm Delays | Fire alarm alarm delay |
| AlaData.Ala_SmokeAlarm_DelayValue | I | 569 | 0 | Settings, Alarm Delays | Smoke detector alarm alarm delay |
| AlaData.Ala_ExternalSwitch_DelayValue | I | 570 | 0 | Settings, Alarm Delays | External switch alarm delay |
| AlaData.Ala_ExternalAlarm_DelayValue | I | 571 | 0 | Settings, Alarm Delays | External alarm alarm delay |
| AlaData.Ala_ServiceStop_DelayValue | I | 572 | 0 | Settings, Alarm Delays | Service stop alarm delay |
| AlaData.Ala_ElectricOverheat_DelayValue | I | 573 | 0 | Settings, Alarm Delays | Electric heating is overheated alarm delay |
| AlaData.Ala_FrostRisk_DelayValue | I | 574 | 0 | Settings, Alarm Delays | Frost risk alarm delay |
| AlaData.Ala_LowEfficiency_DelayValue | I | 575 | 30 min | Settings, Alarm Delays | Low efficiency alarm delay |
| AlaData.Ala_Analogue-Deicing_DelayValue | I | 576 | 2 | Settings, Alarm Delays | Analogue deicing alarm delay |
| AlaData.Ala_RotationguardExchanger_DelayValue | I | 577 | 20 sec | Settings, Alarm Delays | Rotation guard exchanger alarm delay |
| AlaData.Ala_ExtraAlarm1_DelayValue | I | 578 | 0 | Settings, Alarm Delays | Extra alarm 1 alarm delay |
| AlaData.Ala_ExtraAlarm2_DelayValue | I | 579 | 0 | Settings, Alarm Delays | Extra alarm 2 alarm delay |
| AlaData.Ala_ExtraAlarm3_DelayValue | I | 580 | 0 | Settings, Alarm Delays | Extra alarm 3 alarm delay |
| AlaData.Ala_ExtraAlarm4_DelayValue | I | 581 | 0 | Settings, Alarm Delays | Extra alarm 4 alarm delay |
| AlaData.Ala_ExtraAlarm5_DelayValue | I | 582 | 0 | Settings, Alarm Delays | Extra alarm 5 alarm delay |
| AlaData.Ala_ExtraAlarm6_DelayValue | I | 583 | 0 | Settings, Alarm Delays | Extra alarm 6 alarm delay |
| AlaData.Ala_ExtraAlarm7_DelayValue | I | 584 | 0 | Settings, Alarm Delays | Extra alarm 7 alarm delay |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--|-----------|----------------|---------------|------------------------|--|
| AlaData.Ala_ExtraAlarm8_DelayValue | I | 585 | 0 | Settings, Alarm Delays | Extra alarm 8 alarm delay |
| AlaData.Ala_ExtraAlarm9_DelayValue | I | 586 | 0 | Settings, Alarm Delays | Extra alarm 9 alarm delay |
| AlaData.Ala_ExtraAlarm10_DelayValue | I | 587 | 0 | Settings, Alarm Delays | Extra alarm 10 alarm delay |
| AlaData.Ala_BatteryFail_DelayValue | I | 588 | 0 | Settings, Alarm Delays | Internal battery error alarm delay |
| AlaData.Ala_Service_DelayValue | I | 589 | 0 | Settings, Alarm Delays | Time for service alarm delay |
| AlaData.Ala_RestartBlocked_DelayValue | I | 590 | 0 | Settings, Alarm Delays | Restart blocked after power on alarm delay |
| AlaData.Ala_ControlErrorSupplyTemp_DelayValue | I | 591 | 30 min | Settings, Alarm Delays | Supply air temp control error alarm delay |
| AlaData.Ala_ControlErrorSAF_DelayValue | I | 592 | 30 min | Settings, Alarm Delays | SAF control error alarm delay |
| AlaData.Ala_ControlErrorEAF_DelayValue | I | 593 | 30 min | Settings, Alarm Delays | EAF control error alarm delay |
| AlaData.Ala_ControlErrorHumidity_DelayValue | I | 594 | 30 min | Settings, Alarm Delays | Humidity control error alarm delay |
| AlaData.Ala_ControlErrorExtraController_DelayValue | I | 595 | 30 min | Settings, Alarm Delays | Extra controller control error alarm delay |
| AlaData.Ala_HighTempSupply_DelayValue | I | 596 | 5 sec | Settings, Alarm Delays | High supply air temp alarm delay |
| AlaData.Ala_LowTempSupply_DelayValue | I | 597 | 5 sec | Settings, Alarm Delays | Low supply air temp alarm delay |
| AlaData.Ala_MaxLimitTempSupply_DelayValue | I | 598 | 0 | Settings, Alarm Delays | Supply air temp max limit alarm delay |
| AlaData.Ala_MinLimitTempSupply_DelayValue | I | 599 | 0 | Settings, Alarm Delays | Supply air temp min limit alarm delay |
| AlaData.Ala_HighTempRoom_DelayValue | I | 600 | 30 min | Settings, Alarm Delays | High room temp alarm delay |
| AlaData.Ala_LowTempRoom_DelayValue | I | 601 | 30 min | Settings, Alarm Delays | Low room temp alarm delay |
| AlaData.Ala_HighTempExtract_DelayValue | I | 602 | 30 min | Settings, Alarm Delays | High extract air temp alarm delay |
| AlaData.Ala_LowTempExtract_DelayValue | I | 603 | 30 min | Settings, Alarm Delays | Low extract air temp alarm delay |
| AlaData.Ala_HighTempOutdoor_DelayValue | I | 604 | 0 | Settings, Alarm Delays | High outdoor air temp alarm delay |
| AlaData.Ala_LowTempOutdoor_DelayValue | I | 605 | 0 | Settings, Alarm Delays | Low outdoor air temp alarm delay |
| AlaData.Ala_LowTempFrostGuard1_DelayValue | I | 606 | 0 | Settings, Alarm Delays | Low frost guard temp 1 alarm delay |
| AlaData.Ala_LowTempFrostGuard2_DelayValue | I | 607 | 0 | Settings, Alarm Delays | Low frost guard temp 2 alarm delay |
| AlaData.Ala_LowTempFrostGuard3_DelayValue | I | 608 | 0 | Settings, Alarm Delays | Low frost guard temp 3 alarm delay |
| AlaData.Ala_HighTempExtraSensor1_DelayValue | I | 609 | 0 | Settings, Alarm Delays | High temp extra sensor 1 alarm delay |
| AlaData.Ala_LowTempExtraSensor1_DelayValue | I | 610 | 0 | Settings, Alarm Delays | Low temp extra sensor 1 alarm delay |
| AlaData.Ala_HighTempExtraSensor2_DelayValue | I | 611 | 0 | Settings, Alarm Delays | High temp extra sensor 2 alarm delay |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---|-----------|----------------|---------------|------------------------|---|
| AlaData.Ala_LowTempExtra-Sensor2_DelayValue | I | 612 | 0 | Settings, Alarm Delays | Low temp extra sensor 2 alarm delay |
| AlaData.Ala_HighTempExtra-Sensor3_DelayValue | I | 613 | 0 | Settings, Alarm Delays | High temp extra sensor 3 alarm delay |
| AlaData.Ala_LowTempExtra-Sensor3_DelayValue | I | 614 | 0 | Settings, Alarm Delays | Low temp extra sensor 3 alarm delay |
| AlaData.Ala_HighTempExtra-Sensor4_DelayValue | I | 615 | 0 | Settings, Alarm Delays | High temp extra sensor 4 alarm delay |
| AlaData.Ala_LowTempExtra-Sensor4_DelayValue | I | 616 | 0 | Settings, Alarm Delays | Low temp extra sensor 4 alarm delay |
| AlaData.Ala_HighTempExtra-Sensor5_DelayValue | I | 617 | 0 | Settings, Alarm Delays | High temp extra sensor 5 alarm delay |
| AlaData.Ala_LowTempExtra-Sensor5_DelayValue | I | 618 | 0 | Settings, Alarm Delays | Low temp extra sensor 5 alarm delay |
| AlaData.Ala_HighTempSelectedSensor1_DelayValue | I | 619 | 0 | Settings, Alarm Delays | High temp selected sensor 1 alarm delay |
| AlaData.Ala_LowTempSelectedSensor1_DelayValue | I | 620 | 0 | Settings, Alarm Delays | Low temp selected sensor 1 alarm delay |
| AlaData.Ala_HighTempSelectedSensor2_DelayValue | I | 621 | 0 | Settings, Alarm Delays | High temp selected sensor 2 alarm delay |
| AlaData.Ala_LowTempSelectedSensor2_DelayValue | I | 622 | 0 | Settings, Alarm Delays | Low temp selected sensor 2 alarm delay |
| AlaData.Ala_ManualControlUnit_DelayValue | I | 623 | 0 | Settings, Alarm Delays | Manual control air unit alarm delay |
| AlaData.Ala_ManualControlSupply_DelayValue | I | 624 | 0 | Settings, Alarm Delays | Manual control supply air alarm delay |
| AlaData.Ala_ManualControlSAF_DelayValue | I | 625 | 0 | Settings, Alarm Delays | Manual control SAF alarm delay |
| AlaData.Ala_ManualControlIEAF_DelayValue | I | 626 | 0 | Settings, Alarm Delays | Manual control EAF alarm delay |
| AlaData.Ala_ManualControlHeater_DelayValue | I | 627 | 0 | Settings, Alarm Delays | Manual control heater alarm delay |
| AlaData.Ala_ManualControlExchanger_DelayValue | I | 628 | 0 | Settings, Alarm Delays | Manual control exchanger alarm delay |
| AlaData.Ala_ManualControlCooler_DelayValue | I | 629 | 0 | Settings, Alarm Delays | Manual control cooler alarm delay |
| AlaData.Ala_ManualControlDamper_DelayValue | I | 630 | 0 | Settings, Alarm Delays | Manual control damper alarm delay |
| AlaData.Ala_ManualControlPumpHeater_DelayValue | I | 631 | 0 | Settings, Alarm Delays | Manual control heater pump alarm delay |
| AlaData.Ala_ManualControlPumpExchanger_DelayValue | I | 632 | 0 | Settings, Alarm Delays | Manual control exchanger pump alarm delay |
| AlaData.Ala_ManualControlPumpCooler_DelayValue | I | 633 | 0 | Settings, Alarm Delays | Manual control cooler pump alarm delay |
| AlaData.Ala_ManualControlDamperRecirculation_DelayValue | I | 634 | 0 | Settings, Alarm Delays | Manual control recirculation air damper alarm delay |
| AlaData.Ala_ManualControlDamperOutdoor_DelayValue | I | 635 | 0 | Settings, Alarm Delays | Manual control fresh air damper alarm delay |
| AlaData.Ala_ManualControlDamperExhaust_DelayValue | I | 636 | 0 | Settings, Alarm Delays | Manual control exhaust air damper alarm delay |
| AlaData.Ala_ManualControlDamperFire_DelayValue | I | 637 | 0 | Settings, Alarm Delays | Manual control fire damper alarm delay |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--|-----------|----------------|---------------|------------------------|---|
| AlaData.Ala_ManualControl-Sequence1_DelayValue | I | 638 | 0 | Settings, Alarm Delays | Manual control seq. A alarm delay |
| AlaData.Ala_ManualControl-Sequence2_DelayValue | I | 639 | 0 | Settings, Alarm Delays | Manual control seq. B alarm delay |
| AlaData.Ala_ManualControl-Sequence3_DelayValue | I | 640 | 0 | Settings, Alarm Delays | Manual control seq. C alarm delay |
| AlaData.Ala_ManualControl-Sequence4_DelayValue | I | 641 | 0 | Settings, Alarm Delays | Manual control seq. D alarm delay |
| AlaData.Ala_ManualControl-Sequence5_DelayValue | I | 642 | 0 | Settings, Alarm Delays | Manual control seq. E alarm delay |
| AlaData.Ala_ManualControl-Sequence6_DelayValue | I | 643 | 0 | Settings, Alarm Delays | Manual control seq. F alarm delay |
| AlaData.Ala_ManualControl-Sequence7_DelayValue | I | 644 | 0 | Settings, Alarm Delays | Manual control seq. G alarm delay |
| AlaData.Ala_ManualControl-Sequence8_DelayValue | I | 645 | 0 | Settings, Alarm Delays | Manual control seq. H alarm delay |
| AlaData.Ala_ManualControl-Sequence9_DelayValue | I | 646 | 0 | Settings, Alarm Delays | Manual control seq. I alarm delay |
| AlaData.Ala_ManualControl-Sequence10_DelayValue | I | 647 | 0 | Settings, Alarm Delays | Manual control seq. J alarm delay |
| AlaData.Ala_ManualControl-IOOutput_DelayValue | I | 648 | 0 | Settings, Alarm Delays | Output in manual control alarm delay |
| AlaData.Ala_ManualControl-IInput_DelayValue | I | 649 | 0 | Settings, Alarm Delays | Input in manual control alarm delay |
| AlaData.Ala_ManualControl-IEExtraController_DelayValue | I | 650 | 0 | Settings, Alarm Delays | Manual control extra controller alarm delay |
| AlaData.Ala_ManualControl-Motor1_DelayValue | I | 651 | 0 | Settings, Alarm Delays | Manual control motor control 1 alarm delay |
| AlaData.Ala_ManualControl-Motor2_DelayValue | I | 652 | 0 | Settings, Alarm Delays | Manual control motor control 2 alarm delay |
| AlaData.Ala_ManualControl-Pretreatment_DelayValue | I | 653 | 0 | Settings, Alarm Delays | Manual control pretreatment alarm delay |
| AlaData.Ala_SensorErrorTempOutdoor_DelayValue | I | 654 | 5 sec | Settings, Alarm Delays | Sensor error outdoor air temp alarm delay |
| AlaData.Ala_SensorErrorTempIntake_DelayValue | I | 655 | 5 sec | Settings, Alarm Delays | Sensor error intake air temp alarm delay |
| AlaData.Ala_SensorError-TempSupply_DelayValue | I | 656 | 5 sec | Settings, Alarm Delays | Sensor error supply air temp alarm delay |
| AlaData.Ala_SensorErrorTempExhaust_DelayValue | I | 657 | 5 sec | Settings, Alarm Delays | Sensor error exhaust air temp alarm delay |
| AlaData.Ala_SensorErrorTempExtract_DelayValue | I | 658 | 5 sec | Settings, Alarm Delays | Sensor error extract air temp alarm delay |
| AlaData.Ala_SensorError-TempRoom1_DelayValue | I | 659 | 5 sec | Settings, Alarm Delays | Sensor error room temp 1 alarm delay |
| AlaData.Ala_SensorError-TempRoom2_DelayValue | I | 660 | 5 sec | Settings, Alarm Delays | Sensor error room temp 2 alarm delay |
| AlaData.Ala_SensorError-TempRoom3_DelayValue | I | 661 | 5 sec | Settings, Alarm Delays | Sensor error room temp 3 alarm delay |
| AlaData.Ala_SensorError-TempRoom4_DelayValue | I | 662 | 5 sec | Settings, Alarm Delays | Sensor error room temp 4 alarm delay |
| AlaData.Ala_SensorError-TempRoom5_DelayValue | I | 663 | 5 sec | Settings, Alarm Delays | Sensor error room temp 5 alarm delay |
| AlaData.Ala_SensorError-TempRoom6_DelayValue | I | 664 | 5 sec | Settings, Alarm Delays | Sensor error room temp 6 alarm delay |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---|-----------|----------------|---------------|------------------------|---|
| AlaData.Ala_SensorError-TempRoom7_DelayValue | I | 665 | 5 sec | Settings, Alarm Delays | Sensor error room temp 7 alarm delay |
| AlaData.Ala_SensorError-TempRoom8_DelayValue | I | 666 | 5 sec | Settings, Alarm Delays | Sensor error room temp 8 alarm delay |
| AlaData.Ala_SensorError-TempRoom9_DelayValue | I | 667 | 5 sec | Settings, Alarm Delays | Sensor error room temp 9 alarm delay |
| AlaData.Ala_SensorError-TempRoom10_DelayValue | I | 668 | 5 sec | Settings, Alarm Delays | Sensor error room temp 10 alarm delay |
| AlaData.Ala_SensorError-TempRoom11_DelayValue | I | 669 | 5 sec | Settings, Alarm Delays | Sensor error room temp 11 alarm delay |
| AlaData.Ala_SensorError-TempRoom12_DelayValue | I | 670 | 5 sec | Settings, Alarm Delays | Sensor error room temp 12 alarm delay |
| AlaData.Ala_SensorError-TempRoom13_DelayValue | I | 671 | 5 sec | Settings, Alarm Delays | Sensor error room temp 13 alarm delay |
| AlaData.Ala_SensorError-TempRoom14_DelayValue | I | 672 | 5 sec | Settings, Alarm Delays | Sensor error room temp 14 alarm delay |
| AlaData.Ala_SensorError-TempRoom15_DelayValue | I | 673 | 5 sec | Settings, Alarm Delays | Sensor error room temp 15 alarm delay |
| AlaData.Ala_SensorError-TempRoom16_DelayValue | I | 674 | 5 sec | Settings, Alarm Delays | Sensor error room temp 16 alarm delay |
| AlaData.Ala_SensorError-PressureSAF_DelayValue | I | 675 | 5 sec | Settings, Alarm Delays | Sensor error SAF pressure alarm delay |
| AlaData.Ala_SensorError-PressureEAF_DelayValue | I | 676 | 5 sec | Settings, Alarm Delays | Sensor error EAF pressure alarm delay |
| AlaData.Ala_SensorError-FlowSAF_DelayValue | I | 677 | 5 sec | Settings, Alarm Delays | Sensor error SAF flow alarm delay |
| AlaData.Ala_SensorErrorFlowEAF_DelayValue | I | 678 | 5 sec | Settings, Alarm Delays | Sensor error EAF flow alarm delay |
| AlaData.Ala_SensorPressureExchangerSAF_DelayValue | I | 679 | 5 sec | Settings, Alarm Delays | Sensor error exchanger pressure SAF alarm delay |
| AlaData.Ala_SensorPressureExchangerEAF_DelayValue | I | 680 | 5 sec | Settings, Alarm Delays | Sensor error exchanger pressure EAF alarm delay |
| AlaData.Ala_SensorError-TempDeicing_DelayValue | I | 681 | 5 sec | Settings, Alarm Delays | Sensor error deicing temp alarm delay |
| AlaData.Ala_SensorError-TempFrost1_DelayValue | I | 682 | 5 sec | Settings, Alarm Delays | Sensor error frost protection 1 alarm delay |
| AlaData.Ala_SensorError-TempFrost2_DelayValue | I | 683 | 5 sec | Settings, Alarm Delays | Sensor error frost protection 2 alarm delay |
| AlaData.Ala_SensorError-TempFrost3_DelayValue | I | 684 | 5 sec | Settings, Alarm Delays | Sensor error frost protection 3 alarm delay |
| AlaData.Ala_SensorErrorCO2_DelayValue | I | 685 | 5 sec | Settings, Alarm Delays | Sensor error CO2 alarm delay |
| AlaData.Ala_SensorErrorHumidityRoom_DelayValue | I | 686 | 5 sec | Settings, Alarm Delays | Sensor error humidity room alarm delay |
| AlaData.Ala_SensorErrorHumidityDuct_DelayValue | I | 687 | 5 sec | Settings, Alarm Delays | Sensor error humidity duct alarm delay |
| AlaData.Ala_SensorErrorTempExtraController_DelayValue | I | 688 | 5 sec | Settings, Alarm Delays | Sensor error extra controller alarm delay |
| AlaData.Ala_SensorError-ExtCtrlSAF_DelayValue | I | 689 | 5 sec | Settings, Alarm Delays | Sensor error external control SAF alarm delay |
| AlaData.Ala_SensorError-ExtCtrlEAF_DelayValue | I | 690 | 5 sec | Settings, Alarm Delays | Sensor error external control EAF alarm delay |
| AlaData.Ala_SensorErrorHumidityOutdoor_DelayValue | I | 691 | 5 sec | Settings, Alarm Delays | Sensor error outdoor humidity alarm delay |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--|-----------|----------------|---------------|---------------------------|---|
| AlaData.Ala_SensorErrorTempExtraSensor1_DelayValue | I | 692 | 5 sec | Settings, Alarm Delays | Sensor error extra sensor 1 alarm delay |
| AlaData.Ala_SensorErrorTempExtraSensor2_DelayValue | I | 693 | 5 sec | Settings, Alarm Delays | Sensor error extra sensor 2 alarm delay |
| AlaData.Ala_SensorErrorTempExtraSensor3_DelayValue | I | 694 | 5 sec | Settings, Alarm Delays | Sensor error extra sensor 3 alarm delay |
| AlaData.Ala_SensorErrorTempExtraSensor4_DelayValue | I | 695 | 5 sec | Settings, Alarm Delays | Sensor error extra sensor 4 alarm delay |
| AlaData.Ala_SensorErrorTempExtraSensor5_DelayValue | I | 696 | 5 sec | Settings, Alarm Delays | Sensor error extra sensor 5 alarm delay |
| AlaData.Ala_SensorErrorExt-SupplySetp_DelayValue | I | 697 | 5 sec | Settings, Alarm Delays | Sensor error external supply setpoint alarm delay |
| AlaData.Ala_SensorErrorExt-FlowSetpoint_DelayValue | I | 698 | 5 sec | Settings, Alarm Delays | Sensor error external flow setpoint alarm delay |
| AlaData.Ala_SensorErrorFilterGuard1_DelayValue | I | 699 | 5 sec | Settings, Alarm Delays | Sensor error filter guard 1 alarm delay |
| AlaData.Ala_SensorErrorFilterGuard2_DelayValue | I | 700 | 5 sec | Settings, Alarm Delays | Sensor error filter guard 2 alarm delay |
| AlaData.Ala_SensorErrorTempEfficiency_DelayValue | I | 701 | 5 sec | Settings, Alarm Delays | Sensor error efficiency temp alarm delay |
| AlaData.Ala_CommErrorDevice_DelayValue | I | 702 | 0 sec | Settings, Alarm Delays | Fault communication device |
| AlaData.Ala_MalfunctionExtraController_DelayValue | I | 703 | 5 sec | Settings, Alarm Delays | Malfunction Extra Controller |
| AlaData.Ala_InternalError_DelayValue | I | 704 | 60 sec | Settings, Alarm Delays | Internal error |
| VentSettings.S_AirFlowK(22) | R | 761 | 100 | SAF/EAF Pressure and Flow | K-constant for counting air flow: SAF pressure airflow = $S_AirFlowK * A_AI_SAFPressure^S_AirFlowx$ |
| VentSettings.S_AirFlowX(22) | R | 762 | 0.5 | SAF/EAF Pressure and Flow | X-constant for counting air flow: SAF pressure |
| VentSettings.S_AirFlowK(23) | R | 763 | 100 | SAF/EAF Pressure and Flow | K-constant for counting air flow: EAF pressure |
| VentSettings.S_AirFlowX(23) | R | 764 | 0.5 | SAF/EAF Pressure and Flow | X-constant for counting air flow: EAF pressure |
| VentSettings.S_AirFlowK(24) | R | 765 | 100 | SAF/EAF Pressure and Flow | K-constant for counting air flow: SAF flow |
| VentSettings.S_AirFlowX(24) | R | 766 | 0.5 | SAF/EAF Pressure and Flow | X-constant for counting air flow: SAF flow |
| VentSettings.S_AirFlowK(25) | R | 767 | 100 | SAF/EAF Pressure and Flow | K-constant for counting air flow: EAF flow |
| VentSettings.S_AirFlowX(25) | R | 768 | 0.5 | SAF/EAF Pressure and Flow | X-constant for counting air flow: EAF flow |
| VentSettings.S_AirFlowK(26) | R | 769 | 100 | SAF/EAF Pressure and Flow | K-constant for counting air flow: Exch SAF pressure |
| VentSettings.S_AirFlowX(26) | R | 770 | 0.5 | SAF/EAF Pressure and Flow | X-constant for counting air flow: Exch SAF pressure |
| VentSettings.S_AirFlowK(27) | R | 771 | 100 | SAF/EAF Pressure and Flow | K-constant for counting air flow: Exch EAF pressure |
| VentSettings.S_AirFlowX(27) | R | 772 | 0.5 | SAF/EAF Pressure and Flow | X-constant for counting air flow: Exch EAF pressure |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--|-----------|----------------|---------------|-------------|---|
| VentSettings.S_DOSelect_SeqPumpY1(0) | X | 773 | 2 | Manual/Auto | Running mode pump sequence A 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_DOSelect_SeqPumpY2 | X | 774 | 2 | Manual/Auto | Running mode pump sequence B 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_DOSelect_SeqPumpY3 | X | 775 | 2 | Manual/Auto | Running mode pump sequence C 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_DOSelect_SeqPumpY4 | X | 776 | 2 | Manual/Auto | Running mode pump sequence D 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_DOSelect_SeqPumpY5 | X | 777 | 2 | Manual/Auto | Running mode pump sequence E 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_DOSelect_SeqPumpY6 | X | 778 | 2 | Manual/Auto | Running mode pump sequence F 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_DOSelect_SeqPumpY7 | X | 779 | 2 | Manual/Auto | Running mode pump sequence G 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_DOSelect_SeqPumpY8 | X | 780 | 2 | Manual/Auto | Running mode pump sequence H 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_DOSelect_SeqPumpY9 | X | 781 | 2 | Manual/Auto | Running mode pump sequence I 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_DOSelect_SeqPumpY10 | X | 782 | 2 | Manual/Auto | Running mode pump sequence J 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_DOSelect_RecirculationAirDamper | X | 783 | 2 | Manual/Auto | Running mode recirculation damper: 0=Close 1=Open 2=Auto |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--|-----------|----------------|---------------|-------------------|---|
| VentSettings.S_DOSelect_OutdoorAirDamper | X | 784 | 2 | Manual/Auto | Running mode fresh air damper: 0=Close 1=Open 2=Auto |
| VentSettings.S_DOSelect_ExhaustAirDamper | X | 785 | 2 | Manual/Auto | Running mode exhaust air damper: 0=Close 1=Open 2=Auto |
| VentSettings.S_DOSelect_HumidityStart | X | 786 | 2 | Manual/Auto | Running mode humidity start signal 0=Off 1=On 2=Auto |
| VentSettings.S_DOSelect_ChangeOver1 | X | 787 | 2 | Settings, General | Select changeOver 1 External 0=Heating 1=Cooling 2=Auto |
| VentSettings.S_DOSelect_ChangeOver2 | X | 788 | 2 | Settings, General | Select changeOver 2 External 0=Heating 1=Cooling 2=Auto |
| VentSettings.S_AirUnitAutoMode | X | 789 | 2 | Manual/Auto | Running mode air unit: 0=Off 1=Manual 2=Auto 3=Low speed 4=Normal speed 5=High speed |
| VentSettings.S_AirUnitManual | X | 790 | 0 | Manual/Auto | Manual setting for Air unit in manual mode 0=Stop 1=Starting up 2=Low speed run 3=Normal speed run 4=High speed run 5=Heating support run 6=Cooling support run 7=CO2 Run 8=Free cool run 9=Fan stop run 10=Fire run 11=Smoke run 12=Recirculation run 13=Delcing run |
| VentSettings.S_SAFAutoMode | X | 791 | 2 | Manual/Auto | Running mode SAF: 0=Off 1=Manual output 2=Auto 3=Manual setpoint 4=Low speed 5=Normal speed 6=High speed |
| VentSettings.S_SAFManualSetpoint | R | 792 | 0 | Manual/Auto | Manual setpoint SAF if manual mode (pressure/flow) Scale factor = 1 |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--|-----------|----------------|---------------|-----------------|---|
| VentSettings.S_SAFManualOutput | R | 793 | 0 | Manual/Auto | Manual output SAF if manual mode |
| VentSettings.S_EAFAutoMode | X | 794 | 2 | Manual/Auto | Running mode EAF: 0=Off 1=Manual output 2=Auto 3=Manual setpoint 4=Low speed 5=Normal speed 6=High speed |
| VentSettings.S_EAFManualSetpoint | R | 795 | 0 | Manual/Auto | Manual setpoint EAF if manual mode (pressure/flow) Scale factor = 1 |
| VentSettings.S_EAFManualOutput | R | 796 | 0 | Manual/Auto | Manual output EAF if manual mode |
| VentSettings.S_ExternalControl | X | 797 | 0 | Manual/Auto | External control: 0=No External control 1=Extended run speed 1 2=Extended run speed 2 3=Extended run speed 3 4=External stop 5=External stop with support control 6=Start Free cooling 7= Recirculation |
| VentSettings.S_AirUnitServiceStop | X | 798 | 0 | Manual/Auto | Stop the air unit with No 1 prio. 0= no 1= yes |
| VentSettings.S_SeqPumpOut-dLimitYx(1) | R | 799 | 10°C | Actual/Setpoint | Pump outdoor temperature limit sequence A |
| VentSettings.S_SeqPumpOut-dLimitYx(2) | R | 800 | 10°C | Actual/Setpoint | Pump outdoor temperature limit sequence B |
| VentSettings.S_SeqPumpOut-dLimitYx(3) | R | 801 | 10°C | Actual/Setpoint | Pump outdoor temperature limit sequence C |
| VentSettings.S_SeqPumpOut-dLimitYx(4) | R | 802 | 10°C | Actual/Setpoint | Pump outdoor temperature limit sequence D |
| VentSettings.S_SeqPumpOut-dLimitYx(5) | R | 803 | 10°C | Actual/Setpoint | Pump outdoor temperature limit sequence E |
| VentSettings.S_SeqPumpOut-dLimitYx(6) | R | 804 | 10°C | Actual/Setpoint | Pump outdoor temperature limit sequence F |
| VentSettings.S_SeqPumpOut-dLimitYx(7) | R | 805 | 10°C | Actual/Setpoint | Pump outdoor temperature limit sequence G |
| VentSettings.S_SeqPumpOut-dLimitYx(8) | R | 806 | 10°C | Actual/Setpoint | Pump outdoor temperature limit sequence H |
| VentSettings.S_SeqPumpOut-dLimitYx(9) | R | 807 | 10°C | Actual/Setpoint | Pump outdoor temperature limit sequence I |
| VentSettings.S_SeqPumpOut-dLimitYx(10) | R | 808 | 10°C | Actual/Setpoint | Pump outdoor temperature limit sequence J |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|-------------------------------------|-----------|----------------|---------------|--------------------------------------|---|
| VentSettings.S_VentControl | X | 809 | 0 | Settings, General | Select temperature control mode: 0=Const.supply air 1=Outdoor compensated supply air 2=Cascade room temp control 3=Extract temp control 4=Outdoor dependent supply or room temp 5=Outdoor dependent supply or extract temp 6=Cascade outdoor compensated room temp control 7=Cascade outdoor compensated extract temp control 8=Extract air depending supply air temperature |
| VentSettings.S_FanType | X | 810 | 0 | Settings, General | Select fan control mode: 0=Frequency control pressure 1=Frequency control air flow 2=Frequency control manually 3=Direct Frequency control 4=Frequency control with slave controlled EAF 5=Frequency control with slave controlled EAF air flow depending 6=Frequency control with slave controlled SAF 7=Frequency control with slave controlled SAF air flow depending |
| VentSettings.S_FuncReserved(0) | X | 811 | 0 | Settings, General | Reserved, not used |
| VentSettings.S_SupplySetpoint | R | 812 | 18°C | Supply,Extract and Room temperatures | Setpoint supply air temperature when constant supply air temperature function |
| VentSettings.S_ExtractSetpoint | R | 813 | 21°C | Supply,Extract and Room temperatures | Setpoint Extract air temp if Extract air temp control function |
| VentSettings.S_SupplySetpointMax | R | 814 | 30 °C | Supply,Extract and Room temperatures | Max limit of supply setpoint when cascade control |
| VentSettings.S_SupplySetpointMin | R | 815 | 12 °C | Supply,Extract and Room temperatures | Min limit of supply setpoint when cascade control |
| VentSettings.S_SupplySetpOffsetLow | R | 816 | 0 | Actual/Setpoint | Temperature Setpoint Offset in low speed |
| VentSettings.S_SupplySetpOffsetHigh | R | 817 | 0 | Actual/Setpoint | Temperature Setpoint Offset in high speed |
| VentSettings.S_Curve1_X1 | R | 818 | -20°C | Supply,Extract and Room temperatures | Outdoor temp for first curvepoint for outdoor compensated setpoint |
| VentSettings.S_Curve1_X2 | R | 819 | -15°C | Supply,Extract and Room temperatures | Outdoor temp for second curvepoint for outdoor compensated setpoint |
| VentSettings.S_Curve1_X3 | R | 820 | -10°C | Supply,Extract and Room temperatures | Outdoor temp for third curvepoint for outdoor compensated setpoint |
| VentSettings.S_Curve1_X4 | R | 821 | -5°C | Supply,Extract and Room temperatures | Outdoor temp for fourth curvepoint for outdoor compensated setpoint |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------------------------|-----------|----------------|---------------|--------------------------------------|--|
| VentSettings.S_Curve1_X5 | R | 822 | 0°C | Supply,Extract and Room temperatures | Outdoor temp for fifth curvepoint for outdoor compensated setpoint |
| VentSettings.S_Curve1_X6 | R | 823 | 5°C | Supply,Extract and Room temperatures | Outdoor temp for sixth curvepoint for outdoor compensated setpoint |
| VentSettings.S_Curve1_X7 | R | 824 | 10°C | Supply,Extract and Room temperatures | Outdoor temp for seventh curvepoint for outdoor compensated setpoint |
| VentSettings.S_Curve1_X8 | R | 825 | 15°C | Supply,Extract and Room temperatures | Outdoor temp for eighth curvepoint for outdoor compensated setpoint |
| VentSettings.S_Curve1_Y1 | R | 826 | 25°C | Supply,Extract and Room temperatures | Setpoint for first curvepoint for outdoor compensated setpoint |
| VentSettings.S_Curve1_Y2 | R | 827 | 24°C | Supply,Extract and Room temperatures | Setpoint for second curvepoint for outdoor compensated setpoint |
| VentSettings.S_Curve1_Y3 | R | 828 | 23°C | Supply,Extract and Room temperatures | Setpoint for third curvepoint for outdoor compensated setpoint |
| VentSettings.S_Curve1_Y4 | R | 829 | 23°C | Supply,Extract and Room temperatures | Setpoint for fourth curvepoint for outdoor compensated setpoint |
| VentSettings.S_Curve1_Y5 | R | 830 | 22°C | Supply,Extract and Room temperatures | Setpoint for fifth curvepoint for outdoor compensated setpoint |
| VentSettings.S_Curve1_Y6 | R | 831 | 20°C | Supply,Extract and Room temperatures | Setpoint for sixth curvepoint for outdoor compensated setpoint |
| VentSettings.S_Curve1_Y7 | R | 832 | 18°C | Supply,Extract and Room temperatures | Setpoint for seventh curvepoint for outdoor compensated setpoint |
| VentSettings.S_Curve1_Y8 | R | 833 | 18°C | Supply,Extract and Room temperatures | Setpoint for eighth curvepoint for outdoor compensated setpoint |
| VentSettings.S_SAFSetpointSelect | X | 834 | 0 | Settings | SAF setpoint select: 0=Constant setpoints 1= offset of normal speed setpoint |
| VentSettings.S_EAFSetpointSelect | X | 835 | 0 | Settings | EAF setpoint select: 0=Constant setpoints 1= offset of normal speed setpoint |
| VentSettings.S_SAFLowSpeedPressure(0) | R | 836 | 250Pa | SAF/EAF Pressure and Flow | Setpoint low speed supply air fan pressure. Scale factor = 1 |
| VentSettings.S_SAFNormalSpeedPressure | R | 837 | 500Pa | SAF/EAF Pressure and Flow | Setpoint normal speed supply air fan pressure. Scale factor = 1 |
| VentSettings.S_SAFHighSpeedPressure | R | 838 | 750Pa | SAF/EAF Pressure and Flow | Setpoint high speed supply air fan pressure. Scale factor = 1 |
| VentSettings.S_EAFLowSpeedPressure(0) | R | 839 | 250Pa | SAF/EAF Pressure and Flow | Setpoint low speed Extract air fan pressure. Scale factor = 1 |
| VentSettings.S_EAFNormalSpeedPressure | R | 840 | 500Pa | SAF/EAF Pressure and Flow | Setpoint normal speed Extract air fan pressure. Scale factor = 1 |
| VentSettings.S_EAFHighSpeedPressure | R | 841 | 750Pa | SAF/EAF Pressure and Flow | Setpoint high speed Extract air fan pressure. Scale factor = 1 |
| VentSettings.S_SAFLowSpeedAirFlow(0) | R | 842 | 1000 m3/h | SAF/EAF Pressure and Flow | Setpoint low speed supply air fan flow. Scale factor = 0.1 |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--------------------------------------|-----------|----------------|---------------|---------------------------|---|
| VentSettings.S_SAFNormalspeedAirFlow | R | 843 | 2000 m3/h | SAF/EAF Pressure and Flow | Setpoint normal speed supply air fan flow. Scale factor = 0.1 |
| VentSettings.S_SAFHighspeedAirFlow | R | 844 | 3000 m3/h | SAF/EAF Pressure and Flow | Setpoint high speed supply air fan flow. Scale factor = 0.1 |
| VentSettings.S_EAFLowSpeedAirFlow(0) | R | 845 | 1000 m3/h | SAF/EAF Pressure and Flow | Setpoint low speed supply air fan flow. Scale factor = 0.1 |
| VentSettings.S_EAFNormalspeedAirFlow | R | 846 | 2000 m3/h | SAF/EAF Pressure and Flow | Setpoint normal speed Extract air fan flow. Scale factor = 0.1 |
| VentSettings.S_EAFHighspeedAirFlow | R | 847 | 3000 m3/h | SAF/EAF Pressure and Flow | Setpoint high speed Extract air fan flow. Scale factor = 0.1 |
| VentSettings.S_SAFLowSpeedOutput(0) | R | 848 | 25% | SAF/EAF Pressure and Flow | Output signal low speed SAF if Frequency control manually |
| VentSettings.S_SAFNormalSpeedOutput | R | 849 | 50% | SAF/EAF Pressure and Flow | Output signal normal speed SAF if Frequency control manually |
| VentSettings.S_SAFHighspeedOutput | R | 850 | 75% | SAF/EAF Pressure and Flow | Output signal high speed SAF if Frequency control manually |
| VentSettings.S_EAFLowSpeedOutput(0) | R | 851 | 25% | SAF/EAF Pressure and Flow | Output signal low speed EAF if Frequency control manually |
| VentSettings.S_EAFNormalSpeedOutput | R | 852 | 50% | SAF/EAF Pressure and Flow | Output signal normal speed EAF if Frequency control manually |
| VentSettings.S_EAFHighspeedOutput | R | 853 | 75% | SAF/EAF Pressure and Flow | Output signal high speed EAF if Frequency control manually |
| VentSettings.S_SAFModeFreeCool | X | 866 | 0 | Settings, Free cooling | SAF speed in freecool mode: 0=Off/Auto, normal setpoint, 1=Manual setpoint 2=Manual output 3=Low speed setpoint 4=Normal speed setpoint 5=High speed setpoint |
| VentSettings.S_SAFManSetpFreeCool | R | 867 | 0 | Settings, Free cooling | SAF setpoint in freecool mode |
| VentSettings.S_SAFManOutFreeCool | R | 868 | 0 | Settings, Free cooling | SAF manual output in freecool mode (%) |
| VentSettings.S_SAFModeFire | X | 869 | 0 | Settings, Fire mode | SAF speed in fire mode: 0=Off/Auto, normal setpoint, 1=Manual setpoint 2=Manual output 3=Low speed setpoint 4=Normal speed setpoint 5=High speed setpoint |
| VentSettings.S_SAFManSetpFire | R | 870 | 0 | Settings, Fire mode | SAF setpoint in fire mode Scale factor = 1 |
| VentSettings.S_SAFManOutFire | R | 871 | 0 | Settings, Fire mode | SAF manual output in fire mode (%) |
| VentSettings.S_SAFModeSmoke | X | 872 | 0 | Settings, Fire mode | SAF speed in smoke mode: 0=Off/Auto, normal setpoint, 1=Manual setpoint 2=Manual output 3=Low speed setpoint 4=Normal speed setpoint 5=High speed setpoint |
| VentSettings.S_SAFManSetpSmoke | R | 873 | 0 | Settings, Fire mode | SAF setpoint in smoke mode Scale factor = 1 |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--|-----------|----------------|---------------|------------------------|--|
| VentSettings.S_SAFManOutSmoke | R | 874 | 0 | Settings, Fire mode | SAF manual output in smoke mode (%) |
| VentSettings.S_SAFModeRecirculation | X | 875 | 0 | Settings, Fire mode | SAF speed in recirculation mode: 0=Off/Auto, normal setpoint, 1=Manual setpoint 2=Manual output 3=Low speed setpoint 4=Normal speed setpoint 5=High speed setpoint |
| VentSettings.S_SAFManSetpRecirculation | R | 876 | 0 | Settings, Fire mode | SAF setpoint in recirculation mode |
| VentSettings.S_SAFManOutRecirculation | R | 877 | 0 | Settings, Fire mode | SAF manual output in recirculation mode (%) |
| VentSettings.S_EAFModeFreeCool | X | 878 | 0 | Settings, Free cooling | EAF speed in freecool mode: 0=Off/Auto, normal setpoint, 1=Manual setpoint 2=Manual output 3=Low speed setpoint 4=Normal speed setpoint 5=High speed setpoint |
| VentSettings.S_EAFManSetpFreeCool | R | 879 | 0 | Settings, Fire mode | SAF setpoint in freecool mode |
| VentSettings.S_EAFManOutFreeCool | R | 880 | 0 | Settings, Fire mode | EAF manual output in freecool mode (%) |
| VentSettings.S_EAFModeFire | X | 881 | 0 | Settings, Fire mode | EAF speed in fire mode: 0=Off/Auto, normal setpoint, 1=Manual setpoint 2=Manual output 3=Low speed setpoint 4=Normal speed setpoint 5=High speed setpoint |
| VentSettings.S_EAFManSetpFire | R | 882 | 0 | Settings, Fire mode | EAF setpoint in fire mode Scale factor = 1 |
| VentSettings.S_EAFManOutFire | R | 883 | 0 | Settings, Fire mode | EAF manual output in fire mode (%) |
| VentSettings.S_EAFModeSmoke | X | 884 | 0 | Settings, Fire mode | EAF speed in smoke mode: 0=Off/Auto, normal setpoint, 1=Manual setpoint 2=Manual output 3=Low speed setpoint 4=Normal speed setpoint 5=High speed setpoint |
| VentSettings.S_EAFManSetpSmoke | R | 885 | 0 | Settings, Fire mode | EAF setpoint in smoke mode Scale factor = 1 |
| VentSettings.S_EAFManOutSmoke | R | 886 | 0 | Settings, Fire mode | EAF manual output in smoke mode (%) |
| VentSettings.S_EAFModeRecirculation | X | 887 | 0 | Settings, Fire mode | EAF speed in recirculation mode: 0=Off/Auto, normal setpoint, 1=Manual setpoint 2=Manual output 3=Low speed setpoint 4=Normal speed setpoint 5=High speed setpoint |
| VentSettings.S_EAFManSetpRecirculation | R | 888 | 0 | Settings, Fire mode | EAF setpoint in recirculation mode |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------------------------|-----------|----------------|---------------|----------------------------|---|
| VentSettings.S_EAFManOutRecirculation | R | 889 | 0 | Settings, Fire mode | EAF manual output in recirculation mode (%) |
| VentSettings.S_EAFFrequencyFact | R | 890 | 1 | SAF/EAF Pressure and Flow | Factor for controlling EAF if CAV fan control is configured (EAF is controlled by SAF with this factor) |
| VentSettings.S_ExtractPID_Pband | R | 891 | 100 °C | Settings, Control Temp | P-band Extract air control |
| VentSettings.S_ExtractPID_Itime | R | 892 | 300 sec | Settings, Control Temp | I-time Extract air control |
| VentSettings.S_SAFPID_Pband | R | 893 | 500 Pa | Settings, Control Pressure | P-band pressure control SAF |
| VentSettings.S_SAFAir-FlowPID_Pband | R | 894 | 1000 m3/h | Settings, Control Flow | P-band flow control SAF. Scale factor = 0.1 |
| VentSettings.S_SAFPID_Itime | R | 895 | 60 sec | Settings, Control Pressure | I-time pressure control SAF |
| VentSettings.S_EAFPID_Pband | R | 896 | 500 Pa | Settings, Control Pressure | P-band pressure control EAF |
| VentSettings.S_EAFAir-FlowPID_Pband | R | 897 | 1000 m3/h | Settings, Control Flow | P-band flow control EAF. Scale factor = 0.1 |
| VentSettings.S_EAFPID_Itime | R | 898 | 60 sec | Settings, Control Pressure | I-time pressure control EAF |
| VentSettings.S_FrostPID1_PBand(0) | R | 899 | 100 °C | Settings, Control Temp | P-band frost mode |
| VentSettings.S_FrostPID1_ITime(0) | R | 900 | 100 sec | Settings, Control Temp | I-time frost mode |
| VentSettings.S_FrostPID2_Pband | R | 901 | 100 °C | Settings, Control Temp | P-band frost mode |
| VentSettings.S_FrostPID2_ITime | R | 902 | 100 sec | Settings, Control Temp | I-time frost mode |
| VentSettings.S_FrostPID3_Pband | R | 903 | 100 °C | Settings, Control Temp | P-band frost mode |
| VentSettings.S_FrostPID3_ITime | R | 904 | 100 sec | Settings, Control Temp | I-time frost mode |
| VentSettings.S_CO2PID_Pband | R | 905 | 100 °C | Settings, Control Temp | P-band CO2 mode |
| VentSettings.S_CO2PID_Itime | R | 906 | 100 sec | Settings, Control Temp | I-time CO2 mode |
| VentSettings.S_RoomPID_Pband | R | 907 | 100 °C | Settings, Control Temp | P-band room air control |
| VentSettings.S_RoomPID_Itime | R | 908 | 300 sec | Settings, Control Temp | I-time room air control |
| VentSettings.S_DelcePID_Pband | R | 909 | 100 °C | Settings, Control Temp | P-band de-icing |
| VentSettings.S_DelcePID_Itime | R | 910 | 100 sec | Settings, Control Temp | I-time de-icing |
| VentSettings.S_HumidityPID_Pband | R | 911 | 100 %RH | Settings, Control Humidity | P-band humidity control |
| VentSettings.S_HumidityPID_Itime | R | 912 | 300 sec | Settings, Control Humidity | I-time humidity control |
| VentSettings.S_ExtraPID_Pband | R | 913 | 33 °C | Settings, Control Humidity | P-band extra pid control |
| VentSettings.S_ExtraPID_Itime | R | 914 | 100 sec | Settings, Control Humidity | I-time extra pid control |
| VentSettings.S_SeqY1PID_Pband | R | 915 | 10 °C | Settings, Control Temp | P-band Seq A air control |
| VentSettings.S_SeqY1PID_ITime | R | 916 | 100 sec | Settings, Control Temp | I-time Seq A air control |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---|-----------|----------------|---------------|------------------------|--|
| VentSettings.S_SeqY2PID_Pband | R | 917 | 10 °C | Settings, Control Temp | P-band Seq B air control |
| VentSettings.S_SeqY2PID_ITime | R | 918 | 100 sec | Settings, Control Temp | I-time Seq B air control |
| VentSettings.S_SeqY3PID_Pband | R | 919 | 10 °C | Settings, Control Temp | P-band Seq C air control |
| VentSettings.S_SeqY3PID_ITime | R | 920 | 100 sec | Settings, Control Temp | I-time Seq C air control |
| VentSettings.S_SeqY4PID_Pband | R | 921 | 10 °C | Settings, Control Temp | P-band Seq D air control |
| VentSettings.S_SeqY4PID_ITime | R | 922 | 100 sec | Settings, Control Temp | I-time Seq D air control |
| VentSettings.S_SeqY5PID_Pband | R | 923 | 10 °C | Settings, Control Temp | P-band Seq E air control |
| VentSettings.S_SeqY5PID_ITime | R | 924 | 100 sec | Settings, Control Temp | I-time Seq E air control |
| VentSettings.S_SeqY6PID_Pband | R | 925 | 10 °C | Settings, Control Temp | P-band Seq F air control |
| VentSettings.S_SeqY6PID_ITime | R | 926 | 100 sec | Settings, Control Temp | I-time Seq F air control |
| VentSettings.S_SeqY7PID_Pband | R | 927 | 10 °C | Settings, Control Temp | P-band Seq G air control |
| VentSettings.S_SeqY7PID_ITime | R | 928 | 100 sec | Settings, Control Temp | I-time Seq G air control |
| VentSettings.S_SeqY8PID_Pband | R | 929 | 10 °C | Settings, Control Temp | P-band Seq H air control |
| VentSettings.S_SeqY8PID_ITime | R | 930 | 100 sec | Settings, Control Temp | I-time Seq H air control |
| VentSettings.S_SeqY9PID_Pband | R | 931 | 10 °C | Settings, Control Temp | P-band Seq I air control |
| VentSettings.S_SeqY9PID_ITime | R | 932 | 100 sec | Settings, Control Temp | I-time Seq I air control |
| VentSettings.S_SeqY10PID_Pband | R | 933 | 10 °C | Settings, Control Temp | P-band Seq J air control |
| VentSettings.S_SeqY10PID_ITime | R | 934 | 100 sec | Settings, Control Temp | I-time Seq J air control |
| VentSettings.S_AOSelect_Humidity | X | 935 | 2 | Manual/Auto | Running mode Humidification/Dehumidification: 0=Off 1=Manual 2=Auto |
| VentSettings.S_AOManual_Humidity | R | 936 | 0 | Manual/Auto | Humidification/Dehumidification controller output if manual mode |
| VentSettings.S_AOSelect_ExtraController | X | 937 | 2 | Manual/Auto | Manual/Auto Extra Controller 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_AOManual_ExtraController | R | 938 | 0 | Manual/Auto | Extra Controller output if manual mode |
| VentSettings.S_AOSelect_SequenceY1 | X | 939 | 2 | Manual/Auto | Sequence A mode: 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_AOManual_SequenceY1 | R | 940 | 0% | Manual/Auto | Sequence A output if manual on mode |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|-------------------------------------|-----------|----------------|---------------|-------------|---|
| VentSettings.S_AOSelect_SequenceY2 | X | 941 | 2 | Manual/Auto | Sequence B mode: 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_AOManual_SequenceY2 | R | 942 | 0% | Manual/Auto | Sequence B output if manual on mode |
| VentSettings.S_AOSelect_SequenceY3 | X | 943 | 2 | Manual/Auto | Sequence C mode: 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_AOManual_SequenceY3 | R | 944 | 0% | Manual/Auto | Sequence C output if manual on mode |
| VentSettings.S_AOSelect_SequenceY4 | X | 945 | 2 | Manual/Auto | Sequence D mode: 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_AOManual_SequenceY4 | R | 946 | 0% | Manual/Auto | Sequence D output if manual on mode |
| VentSettings.S_AOSelect_SequenceY5 | X | 947 | 2 | Manual/Auto | Sequence E mode: 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_AOManual_SequenceY5 | R | 948 | 0% | Manual/Auto | Sequence E output if manual on mode |
| VentSettings.S_AOSelect_SequenceY6 | X | 949 | 2 | Manual/Auto | Sequence F mode: 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_AOManual_SequenceY6 | R | 950 | 0% | Manual/Auto | Sequence F output if manual on mode |
| VentSettings.S_AOSelect_SequenceY7 | X | 951 | 2 | Manual/Auto | Sequence G mode: 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_AOManual_SequenceY7 | R | 952 | 0% | Manual/Auto | Sequence G output if manual on mode |
| VentSettings.S_AOSelect_SequenceY8 | X | 953 | 2 | Manual/Auto | Sequence H mode: 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_AOManual_SequenceY8 | R | 954 | 0% | Manual/Auto | Sequence H output if manual on mode |
| VentSettings.S_AOSelect_SequenceY9 | X | 955 | 2 | Manual/Auto | Sequence I mode: 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_AOManual_SequenceY9 | R | 956 | 0% | Manual/Auto | Sequence I output if manual on mode |
| VentSettings.S_AOSelect_SequenceY10 | X | 957 | 2 | Manual/Auto | Sequence J mode: 0=Manual off 1=Manual on 2=Auto |
| VentSettings.S_AOManual_SequenceY10 | R | 958 | 0% | Manual/Auto | Sequence J output if manual on mode |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--------------------------------------|-----------|----------------|---------------|--------------------------------------|--|
| VentSettings.S_FreeCoolHighLimit | R | 960 | 18 | Settings, Free cooling | If outdoor temp is higher at night the free cooling is stopped |
| VentSettings.S_FreeCoolLowLimit | R | 961 | 10 | Settings, Free cooling | If outdoor temp is lower at night the free cooling is stopped |
| VentSettings.S_FreeCoolRoomLimit | R | 962 | 18 | Settings, Free cooling | If room temp is lower at night the free cooling is stopped |
| VentSettings.S_FreeCoolStartTime | X | 963 | 0 | Settings, Free cooling | Start time free cool function |
| VentSettings.S_FreeCoolStopTime | X | 964 | 7 | Settings, Free cooling | Stop time free cool function |
| VentSettings.S_FreeCoolHeatBlockTime | I | 965 | 60 | Settings, Free cooling | Time in minute to block heat output when start after free cool run |
| VentSettings.S_CO2StartLimit | R | 966 | 800 | CO2 | Level to activate CO2 control (ppm) |
| VentSettings.S_CO2DemandDiff | R | 967 | 160 | CO2 | Difference for stop of demand controlled ventilation (ppm) |
| VentSettings.S_CO2Setpoint | R | 968 | 1000 | CO2 | Setpoint CO2 (ppm) |
| VentSettings.S_CO2MinTime | I | 969 | 20 | CO2 | Minimum time (min) for CO2 control |
| VentSettings.S_NeedControl | X | 970 | 0 | Settings, General | Enable support control if the unit is shut down |
| VentSettings.S_NeedHeatStart | R | 971 | 15°C | Supply,Extract and Room temperatures | Room temp for start the unit if intermittent heating control is active |
| VentSettings.S_NeedHeatStop | R | 972 | 21°C | Supply,Extract and Room temperatures | Room temp for stop the unit if intermittent heating control is active |
| VentSettings.S_NeedCoolStart | R | 973 | 30°C | Supply,Extract and Room temperatures | Room temp for start the unit if intermittent cooling control is active |
| VentSettings.S_NeedCoolStop | R | 974 | 28°C | Supply,Extract and Room temperatures | Room temp for stop the unit if intermittent cooling control is active |
| VentSettings.S_NeedMinTime | I | 975 | 20 | Supply,Extract and Room temperatures | Minimum time (min) for intermittent control and demand control |
| VentSettings.S_FireDampersAutoMode | X | 976 | 2 | Manual/Auto | Running mode fire damper: 0=Close 1=Open 2=Auto |
| VentSettings.S_DelcingSetpoint | R | 977 | -3° | Extract air temp/De-icing exchanger | Setpoint de-icing temp |
| VentSettings.S_DelcingHyst | R | 978 | 1°C | Extract air temp/De-icing exchanger | Hysteresis for stop of de-icing |
| VentSettings.S_DelcingMinTime | X | 979 | 20 | Extract air temp/De-icing exchanger | Min time for de-icing |
| VentSettings.S_DelcingSAFTempStop | R | 980 | -10°C | Extract air temp/De-icing exchanger | If lower outdoor temp the SAF will be stoped at de-icing |
| VentSettings.S_HumiditySetpoint | R | 981 | 50%RH | Humidity | Setpoint humidity room |
| VentSettings.S_HumidityMaxDuct | R | 982 | 80%RH | Humidity | Max limit humidity duct |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|------------------------------------|-----------|----------------|---------------|--------------------------------------|--|
| VentSettings.S_HumidityHyst | R | 983 | 20%RH | Humidity | Hysteresis to start humidity control after stop max limitation |
| VentSettings.S_HumidityMaxDiff | R | 984 | 10 %RH | Humidity | Max allowed difference between setpoint and humidity in room before alarm |
| VentSettings.S_HumidityStartLimit | R | 985 | 15 %RH | Humidity | Start limit in % to start digital output signal |
| VentSettings.S_HumidityStopLimit | R | 986 | 5 %RH | Humidity | Stop limit in % to stop digital output signal |
| VentSettings.S_RoomSetP | R | 987 | 21°C | Supply,Extract and Room temperatures | Room setpoint if room temp control function |
| VentSettings.S_FrostProtSPRun(0) | R | 988 | 7 °C | Settings, Alarm Limits | Alarm limit frost protection |
| VentSettings.S_FrostProtSPStop(0) | R | 989 | 25°C | Frost protection | Setpoint frost protection if the ventilation unit is stopped |
| VentSettings.S_FrostProtPGain(0) | R | 990 | 5° | Frost protection | P-Gain frost protection when running (alarm limit+PGain) |
| VentSettings.S_FrostProtSPRun(1) | R | 991 | 7 °C | Settings, Alarm Limits | Alarm limit frost protection |
| VentSettings.S_FrostProtSPStop(1) | R | 992 | 25°C | Frost protection | Setpoint frost protection if the ventilation unit is stopped |
| VentSettings.S_FrostProtPGain(1) | R | 993 | 5° | Frost protection | P-Gain frost protection when running (alarm limit+PGain) |
| VentSettings.S_FrostProtSPRun(2) | R | 994 | 7 °C | Settings, Alarm Limits | Alarm limit frost protection |
| VentSettings.S_FrostProtSPStop(2) | R | 995 | 25°C | Frost protection | Setpoint frost protection if the ventilation unit is stopped |
| VentSettings.S_FrostProtPGain(2) | R | 996 | 5° | Frost protection | P-Gain frost protection when running (alarm limit+PGain) |
| VentSettings.S_ExtraControllerSetP | R | 997 | 18 °C | Extra Controller | Setpoint Extra Controller |
| VentSettings.S_ExtraControllerMode | X | 998 | 0 | Extra Controller | Control mode Extra Controller 0=Heating Controller 1=Cooling Controller |
| VentSettings.S_SumAlarm1 (0) | X | 999 | 1 | Settings, Alarm | Sum alarm 1 configuration, defines which alarms that should be on the DO signal: 0=off 1=A+B+C 2=A+B 3=B+C 4=A+C 5=A 6=B 7=C |
| VentSettings.S_SumAlarm2 | X | 1000 | 5 | Settings, Alarm | Sum alarm 2 configuration, defines which alarms that should be on the DO signal |
| VentSettings.S_AlarmOutput | X | 1001 | 0 | Settings, Alarm | Alarm output of configured alarm number. Status > 0=off 1=Alapt1/Ala_MalfunctionSAF1, ... |
| VentSettings.S_SupplyMaxDiff | R | 1002 | 10 °C | Settings, Alarm Limits | Max control deviation supply air temp |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---|-----------|----------------|---------------|------------------------|--|
| VentSettings.S_SupplyHighAlarmLimit | R | 1003 | 30 °C | Settings, Alarm Limits | High alarm limit supply air temp |
| VentSettings.S_SupplyLowAlarmLimit | R | 1004 | 10 °C | Settings, Alarm Limits | Low alarm limit supply air temp |
| VentSettings.S_EfficiencyLowLimit | R | 1005 | 50% | Settings, Alarm Limits | Low efficiency |
| VentSettings.S_RoomHighLimit | R | 1006 | 30 °C | Settings, Alarm Limits | High alarm limit room air temp |
| VentSettings.S_RoomLowLimit | R | 1007 | 10 °C | Settings, Alarm Limits | Low alarm limit room air temp |
| VentSettings.S_ExtractAirTempHigh | R | 1008 | 30 °C | Settings, Alarm Limits | High alarm limit Extract air temp |
| VentSettings.S_ExtractAirTempLow | R | 1009 | 10 °C | Settings, Alarm Limits | Low alarm limit Extract air temp |
| VentSettings.S_SAFMaxDiffPressure | R | 1010 | 50 Pa | Settings, Alarm Limits | Max control deviation pressure SAF |
| VentSettings.S_EAFMaxDiffPressure | R | 1011 | 50 Pa | Settings, Alarm Limits | Max control deviation pressure EAF |
| VentSettings.S_RecircSetP | R | 1012 | 18 °C | Recirculation | Recirculation setpoint |
| VentSettings.S_RecircTempControl | X | 1013 | 0 | Recirculation | Enable supply air temp control when recirculation run: 0=No temp control 1=heating/cooling 2=only heating 3=only cooling |
| VentSettings.S_RecircMaxRoomTemp | R | 1014 | 25 °C | Recirculation | If higher room temp when Recirculation run recirculation damper is closed and fresh air damper is open |
| VentSettings.S_RecircFreeCool | X | 1015 | 0 | Recirculation | Enable the free cool func. when recirc. run |
| VentSettings.S_RecircSAFOffset | R | 1016 | 0 | Recirculation | Setpoint offset if pressure/flow controlled SAF. Scale factor = 1 |
| VentSettings.S_RecircEAFOffset | R | 1017 | 0 | Recirculation | Setpoint offset if pressure/flow controlled EAF (this is not used) Scale factor = 1 |
| VentSettings.S_RecircSetPOffset | R | 1018 | 0 | Recirculation | Offset for recirculation setpoint |
| VentSettings.S_FilterAlarmTime | I | 1019 | 0 | Settings, Alarm Delays | Time in month between filter exchange (Service Alarm) |
| VentSettings.S_ExtraSensor1HighLimit(0) | R | 1020 | 30 | Settings, Alarm limits | Alarm limit high temp Extra sensor 1 |
| VentSettings.S_ExtraSensor2HighLimit | R | 1021 | 30 | Settings, Alarm limits | Alarm limit high temp Extra sensor 2 |
| VentSettings.S_ExtraSensor3HighLimit | R | 1022 | 30 | Settings, Alarm limits | Alarm limit high temp Extra sensor 3 |
| VentSettings.S_ExtraSensor4HighLimit | R | 1023 | 30 | Settings, Alarm limits | Alarm limit high temp Extra sensor 4 |
| VentSettings.S_ExtraSensor5HighLimit | R | 1024 | 30 | Settings, Alarm limits | Alarm limit high temp Extra sensor 5 |
| VentSettings.S_ExtraSensor1-LowLimit(0) | R | 1025 | 10 | Settings, Alarm limits | Alarm limit low temp Extra sensor 1 |
| VentSettings.S_ExtraSensor2LowLimit | R | 1026 | 10 | Settings, Alarm limits | Alarm limit low temp Extra sensor 2 |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--|-----------|----------------|---------------|---------------------------|--|
| VentSettings.S_ExtraSensor3LowLimit | R | 1027 | 10 | Settings, Alarm limits | Alarm limit low temp Extra sensor 3 |
| VentSettings.S_ExtraSensor4LowLimit | R | 1028 | 10 | Settings, Alarm limits | Alarm limit low temp Extra sensor 4 |
| VentSettings.S_ExtraSensor5LowLimit | R | 1029 | 10 | Settings, Alarm limits | Alarm limit low temp Extra sensor 5 |
| VentSettings.S_Selected-Sensor1(0) | X | 1030 | 0 | Settings, Alarm | Select sensor 1 for high low alarm, 0 = not active, 1 = A_AI_OutDoorTemp, |
| VentSettings.S_SelectedSensor1HighLimit(0) | R | 1031 | 0 | Settings, Alarm limits | Alarm limit high temp Selected sensor 1 |
| VentSettings.S_SelectedSensor1LowLimit(0) | R | 1032 | 0 | Settings, Alarm limits | Alarm limit low temp Selected sensor 1 |
| VentSettings.S_SelectedSensor2 | X | 1033 | 0 | Settings, Alarm | Select sensor 2 for high low alarm |
| VentSettings.S_SelectedSensor2HighLimit | R | 1034 | 0 | Settings, Alarm limits | Alarm limit high temp Selected sensor 1 |
| VentSettings.S_SelectedSensor2LowLimit | R | 1035 | 0 | Settings, Alarm limits | Alarm limit low temp Selected sensor 1 |
| VentSettings.S_SupplyPIDFreeze | X | 1036 | 0 | Settings, Control Temp | Freeze supply PID control |
| VentSettings.S_FanComp1X1(0) | R | 1037 | 15 | SAF/EAF Pressure and Flow | Breakpoint 1 (must be lower than breakpoint 2 temp). Scale factor = 1 |
| VentSettings.S_FanComp1Y1(0) | R | 1038 | 0 | SAF/EAF Pressure and Flow | Compensation breakpoint 1 Scale factor = 1 |
| VentSettings.S_FanComp1X2(0) | R | 1039 | 20 | SAF/EAF Pressure and Flow | Breakpoint 2 (must be higher than breakpoint 1 temp) Scale factor = 1 |
| VentSettings.S_FanComp1Y2(0) | R | 1040 | 0 | SAF/EAF Pressure and Flow | Compensation breakpoint 2 Scale factor = 1 |
| VentSettings.S_FanComp1X3(0) | R | 1041 | 25 | SAF/EAF Pressure and Flow | Breakpoint 3 (must be higher than breakpoint 2 temp), Scale factor = 1 |
| VentSettings.S_FanComp1Y3(0) | R | 1042 | 0 | SAF/EAF Pressure and Flow | Compensation breakpoint 3 Scale factor = 1 |
| VentSettings.S_FanComp2X1 | R | 1043 | 15 | SAF/EAF Pressure and Flow | Breakpoint 1 (must be lower than breakpoint 2 temp). Scale factor = 1 |
| VentSettings.S_FanComp2Y1 | R | 1044 | 0 | SAF/EAF Pressure and Flow | Compensation breakpoint 1 Scale factor = 1 |
| VentSettings.S_FanComp2X2 | R | 1045 | 20 | SAF/EAF Pressure and Flow | Breakpoint 2 (must be higher than breakpoint 1 temp). Scale factor = 1 |
| VentSettings.S_FanComp2Y2 | R | 1046 | 0 | SAF/EAF Pressure and Flow | Compensation breakpoint 2 Scale factor =1 |
| VentSettings.S_FanComp2X3 | R | 1047 | 25 | SAF/EAF Pressure and Flow | Breakpoint 3 (must be higher than breakpoint 2 temp). Scale factor = 1 |
| VentSettings.S_FanComp2Y3 | R | 1048 | 0 | SAF/EAF Pressure and Flow | Compensation breakpoint 3 Scale factor = 1 |
| VentSettings.S_FanComp3X1 | R | 1049 | 15 | SAF/EAF Pressure and Flow | Breakpoint 1 (must be lower than breakpoint 2 temp). Scale factor = 1 |
| VentSettings.S_FanComp3Y1 | R | 1050 | 0 | SAF/EAF Pressure and Flow | Compensation breakpoint 1 Scale factor = 1 |

Holding register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---|-----------|----------------|---------------|----------------------------|--|
| VentSettings.S_FanComp3X2 | R | 1051 | 20 | SAF/EAF Pressure and Flow | Breakpoint 2 (must be higher than breakpoint 1 temp). Scale factor = 1 |
| VentSettings.S_FanComp3Y2 | R | 1052 | 0 | SAF/EAF Pressure and Flow | Compensation breakpoint 2 Scale factor = 1 |
| VentSettings.S_FanComp3X3 | R | 1053 | 25 | SAF/EAF Pressure and Flow | Breakpoint 3 (must be higher than breakpoint 2 temp). Scale factor = 1 |
| VentSettings.S_FanComp3Y3 | R | 1054 | 0 | SAF/EAF Pressure and Flow | Compensation breakpoint 3 Scale factor = 1 |
| VentSettings.S_NeutralZone | R | 1055 | 0 | Settings, General | Neutral zone around supply setpoint before heating and cooling. |
| VentSettings.S_FreeCoolSAFOffset | R | 1056 | 0 | Settings, Free cooling | SAF setpoint offset if pressure/flow controlled SAF when free cool active. Scale factor = 1 |
| VentSettings.S_FreeCoolEAFOffset | R | 1057 | 0 | Settings, Free cooling | EAF setpoint offset if pressure/flow controlled EAF when free cool active. Scale factor = 1 |
| VentSettings.S_FilterGuard1Limit_X1(0) | R | 1058 | 1000 | Settings, Alarm limits | Alarm limit filter guard 1 X1 Scale factor = 0.1 |
| VentSettings.S_FilterGuard1Limit_Y1 | R | 1059 | 50 | Settings, Alarm limits | Alarm limit filter guard 1 Y1 |
| VentSettings.S_FilterGuard1Limit_X2 | R | 1060 | 2000 | Settings, Alarm limits | Alarm limit filter guard 1 X2 Scale factor = 0.1 |
| VentSettings.S_FilterGuard1Limit_Y2 | R | 1061 | 150 | Settings, Alarm limits | Alarm limit filter guard 1 Y2 |
| VentSettings.S_FilterGuard2Limit_X1(0) | R | 1062 | 1000 | Settings, Alarm limits | Alarm limit filter guard 2 X1 Scale factor = 0.1 |
| VentSettings.S_FilterGuard2Limit_Y1 | R | 1063 | 50 | Settings, Alarm limits | Alarm limit filter guard 2 Y1 |
| VentSettings.S_FilterGuard2Limit_X2 | R | 1064 | 2000 | Settings, Alarm limits | Alarm limit filter guard 2 X2 Scale factor = 0.1 |
| VentSettings.S_FilterGuard2Limit_Y2 | R | 1065 | 150 | Settings, Alarm limits | Alarm limit filter guard 2 Y2 |
| VentSettings.S_SummerModeSupplySetpoint | R | 1066 | 24°C | Settings, Summer mode | Supply air temp setpoint at summer time |
| VentSettings.S_SummerModeOutdoorTemp | R | 1067 | 13°C | Settings, Summer mode | Outdoor temp for switching between summer and winter mode |
| VentSettings.S_SummerModeStartDate | X | 1068 | 1 | Settings, Summer mode | Date for start of summer period |
| VentSettings.S_SummerModeStartMonth | X | 1069 | 4 | Settings, Summer mode | Month for start of summer period |
| VentSettings.S_SummerModeStopDate | X | 1070 | 1 | Settings, Summer mode | Date for stop of summer period |
| VentSettings.S_SummerModeStopMonth | X | 1071 | 10 | Settings, Summer mode | Month for stop of summer period |
| VentSettings.S_EnergySAFPwrFact | R | 1072 | 1 | Settings, SAF Power factor | Power factor supply air fan. Scale factor = 1 |
| VentSettings.S_EnergyEAFPwrFact | R | 1073 | 1 | Settings, EAF Power factor | Power factor extract air fan. Scale factor = 1 |
| VentSettings.S_OutdoorAirTempHigh | R | 1074 | 40 | Settings, Alarm Limits | Alarm limit high outdoor air temp. Scale factor = 10 |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|--------------------------------------|-----------|----------------|---------------|---------------------------|---|
| VentSettings.S_OutdoorAir-TempLow 95 | R | 1075 | -30 | Settings, Alarm Limits | Alarm limit low outdoor air temp. Scale factor = 10 |
| VentSettings.S_SAFManualSetpoint | R | 1076 | 0 | Manual/Auto | Man. setp. SAF if Man. mode. Scale factor = 0.1 |
| VentSettings.S_EAFManualSetpoint | R | 1077 | 0 | Manual/Auto | Man. setp. EAF if Man. mode. Scale factor = 0.1 |
| VentSettings.S_SAFManSetpFire | R | 1078 | 0 | Settings, Fire mode | SAF setp. in fire mode. Scale factor = 0.1 |
| VentSettings.S_SAFManSetpSmoke | R | 1079 | 0 | Settings, Fire mode | SAF setp. in smoke mode. Scale factor = 0.1 |
| VentSettings.S_EAFManSetpFire | R | 1080 | 0 | Settings, Fire mode | EAF setp. in fire mode. Scale factor = 0.1 |
| VentSettings.S_EAFManSetpSmoke | R | 1081 | 0 | Settings, Fire mode | EAF setp. in smoke mode. Scale factor = 0.1 |
| VentSettings.S_FanComp1Y1 (0) | R | 1082 | 0 | SAF/EAF Pressure and Flow | Comp. breakp. 1. Scale factor = 0.1 |
| VentSettings.S_FanComp1Y2 (0) | R | 1083 | 0 | SAF/EAF Pressure and Flow | Comp. breakp. 2. Scale factor = 0.1 |
| VentSettings.S_FanComp1Y3 (0) | R | 1084 | 0 | SAF/EAF Pressure and Flow | Comp. breakp. 3. Scale factor = 0.1 |
| VentSettings.S_FanComp2Y1 | R | 1085 | 0 | SAF/EAF Pressure and Flow | Comp. breakp. 1. Scale factor = 0.1 |
| VentSettings.S_FanComp2Y2 | R | 1086 | 0 | SAF/EAF Pressure and Flow | Comp. breakp. 2. Scale factor = 0.1 |
| VentSettings.S_FanComp2Y3 | R | 1087 | 0 | SAF/EAF Pressure and Flow | Comp. breakp. 3. Scale factor = 0.1 |
| VentSettings.S_FanComp3Y1 | R | 1088 | 0 | SAF/EAF Pressure and Flow | Comp. breakp. 1. Scale factor = 0.1 |
| VentSettings.S_FanComp3Y2 | R | 1089 | 0 | SAF/EAF Pressure and Flow | Comp. breakp. 2. Scale factor = 0.1 |
| VentSettings.S_FanComp3Y3 | R | 1090 | 0 | SAF/EAF Pressure and Flow | Comp. breakp. 3. Scale factor = 0.1 |

6 Input status register

The EXOL type of the signals:

R = Real (-3.3E38 - 3.3E38)

I = Integer (-32768 - 32767)

X = Index (0 - 255)

L = Logic (0/1)

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|---------------------------|-----------|----------------|---------------|-----------------|--|
| TimePro.TC_FanLowSpeed | L | 1 | | Actual/Setpoint | Is set if timechannel low speed is active |
| TimePro.TC_FanNormalSpeed | L | 2 | | Actual/Setpoint | Is set if timechannel normal speed is active |
| TimePro.TC_FanHighSpeed | L | 3 | | Actual/Setpoint | Is set if timechannel high speed is active |
| TimePro.TC_Extra1 | L | 4 | | Actual/Setpoint | Is set if timer output 1 is active |
| TimePro.TC_Extra2 | L | 5 | | Actual/Setpoint | Is set if timer output 2 is active |
| TimePro.TC_Extra3 | L | 6 | | Actual/Setpoint | Is set if timer output 3 is active |
| TimePro.TC_Extra4 | L | 7 | | Actual/Setpoint | Is set if timer output 4 is active |
| VentActual.A_SumAlarm | L | 8 | | Alarm Status | Sumalarm, is set if any A, B or C alarm |
| VentActual.A_SumAlarmA(0) | L | 9 | | Alarm Status | A-alarm, is set if any A-alarm in controller |
| VentActual.A_SumAlarmB | L | 10 | | Alarm Status | B-alarm, is set if any B alarm in controller |
| VentActual.A_SumAlarmC | L | 11 | | Alarm Status | C-alarm, is set if any C alarm in controller |
| VentActual.A_AlaPt(1) | L | 12 | | Alarm Points | Malfunction SAF 1 |
| VentActual.A_AlaPt(2) | L | 13 | | Alarm Points | Malfunction SAF 2 |
| VentActual.A_AlaPt(3) | L | 14 | | Alarm Points | Malfunction SAF 3 |
| VentActual.A_AlaPt(4) | L | 15 | | Alarm Points | Malfunction SAF 4 |
| VentActual.A_AlaPt(5) | L | 16 | | Alarm Points | Malfunction SAF 5 |
| VentActual.A_AlaPt(6) | L | 17 | | Alarm Points | Malfunction EAF 1 |
| VentActual.A_AlaPt(7) | L | 18 | | Alarm Points | Malfunction EAF 2 |
| VentActual.A_AlaPt(8) | L | 19 | | Alarm Points | Malfunction EAF 3 |
| VentActual.A_AlaPt(9) | L | 20 | | Alarm Points | Malfunction EAF 4 |
| VentActual.A_AlaPt(10) | L | 21 | | Alarm Points | Malfunction EAF 5 |
| VentActual.A_AlaPt(11) | L | 22 | | Alarm Points | Alarm frequency converter SAF 1 |
| VentActual.A_AlaPt(12) | L | 23 | | Alarm Points | Alarm frequency converter SAF 2 |
| VentActual.A_AlaPt(13) | L | 24 | | Alarm Points | Alarm frequency converter SAF 3 |
| VentActual.A_AlaPt(14) | L | 25 | | Alarm Points | Alarm frequency converter SAF 4 |
| VentActual.A_AlaPt(15) | L | 26 | | Alarm Points | Alarm frequency converter SAF 5 |
| VentActual.A_AlaPt(16) | L | 27 | | Alarm Points | Alarm frequency converter EAF 1 |
| VentActual.A_AlaPt(17) | L | 28 | | Alarm Points | Alarm frequency converter EAF 2 |
| VentActual.A_AlaPt(18) | L | 29 | | Alarm Points | Alarm frequency converter EAF 3 |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|------------------------|-----------|----------------|---------------|--------------|------------------------------------|
| VentActual.A_AlaPt(19) | L | 30 | | Alarm Points | Alarm frequency converter EAF 4 |
| VentActual.A_AlaPt(20) | L | 31 | | Alarm Points | Alarm frequency converter EAF 5 |
| VentActual.A_AlaPt(21) | L | 32 | | Alarm Points | Warning frequency converter SAF 1 |
| VentActual.A_AlaPt(22) | L | 33 | | Alarm Points | Warning frequency converter SAF 2 |
| VentActual.A_AlaPt(23) | L | 34 | | Alarm Points | Warning frequency converter SAF 3 |
| VentActual.A_AlaPt(24) | L | 35 | | Alarm Points | Warning frequency converter SAF 4 |
| VentActual.A_AlaPt(25) | L | 36 | | Alarm Points | Warning frequency converter SAF 5 |
| VentActual.A_AlaPt(26) | L | 37 | | Alarm Points | Warning frequency converter EAF 1 |
| VentActual.A_AlaPt(27) | L | 38 | | Alarm Points | Warning frequency converter EAF 2 |
| VentActual.A_AlaPt(28) | L | 39 | | Alarm Points | Warning frequency converter EAF 3 |
| VentActual.A_AlaPt(29) | L | 40 | | Alarm Points | Warning frequency converter EAF 4 |
| VentActual.A_AlaPt(30) | L | 41 | | Alarm Points | Warning frequency converter EAF 5 |
| VentActual.A_AlaPt(31) | L | 42 | | Alarm Points | External operation SAF |
| VentActual.A_AlaPt(32) | L | 43 | | Alarm Points | External operation EAF |
| VentActual.A_AlaPt(33) | L | 44 | | Alarm Points | Motor control 1 external operation |
| VentActual.A_AlaPt(34) | L | 45 | | Alarm Points | Motor control 2 external operation |
| VentActual.A_AlaPt(35) | L | 46 | | Alarm Points | Malfunction pump heater |
| VentActual.A_AlaPt(36) | L | 47 | | Alarm Points | Malfunction pump cooler |
| VentActual.A_AlaPt(37) | L | 48 | | Alarm Points | Malfunction pump exchanger |
| VentActual.A_AlaPt(38) | L | 49 | | Alarm Points | Malfunction fire damper |
| VentActual.A_AlaPt(39) | L | 50 | | Alarm Points | Malfunction damper |
| VentActual.A_AlaPt(40) | L | 51 | | Alarm Points | Malfunction motor control 1 |
| VentActual.A_AlaPt(41) | L | 52 | | Alarm Points | Malfunction motor control 2 |
| VentActual.A_AlaPt(42) | L | 53 | | Alarm Points | Fire damper exercise stop |
| VentActual.A_AlaPt(43) | L | 54 | | Alarm Points | Malfunction pump seq. A |
| VentActual.A_AlaPt(44) | L | 55 | | Alarm Points | Malfunction pump seq. B |
| VentActual.A_AlaPt(45) | L | 56 | | Alarm Points | Malfunction pump seq. C |
| VentActual.A_AlaPt(46) | L | 57 | | Alarm Points | Malfunction pump seq. D |
| VentActual.A_AlaPt(47) | L | 58 | | Alarm Points | Malfunction pump seq. E |
| VentActual.A_AlaPt(48) | L | 59 | | Alarm Points | Malfunction pump seq. F |
| VentActual.A_AlaPt(49) | L | 60 | | Alarm Points | Malfunction pump seq. G |
| VentActual.A_AlaPt(50) | L | 61 | | Alarm Points | Malfunction pump seq. H |
| VentActual.A_AlaPt(51) | L | 62 | | Alarm Points | Malfunction pump seq. I |
| VentActual.A_AlaPt(52) | L | 63 | | Alarm Points | Malfunction pump seq. J |
| VentActual.A_AlaPt(53) | L | 64 | | Alarm Points | Filter guard 1 |
| VentActual.A_AlaPt(54) | L | 65 | | Alarm Points | Filter guard 2 |

Input status register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|------------------------|-----------|----------------|---------------|--------------|--------------------------------|
| VentActual.A_AlaPt(55) | L | 66 | | Alarm Points | Flow guard |
| VentActual.A_AlaPt(56) | L | 67 | | Alarm Points | External frost guard |
| VentActual.A_AlaPt(57) | L | 68 | | Alarm Points | Deicing pressure guard |
| VentActual.A_AlaPt(58) | L | 69 | | Alarm Points | Fire alarm |
| VentActual.A_AlaPt(59) | L | 70 | | Alarm Points | Smoke detector alarm |
| VentActual.A_AlaPt(60) | L | 71 | | Alarm Points | External switch |
| VentActual.A_AlaPt(61) | L | 72 | | Alarm Points | External alarm |
| VentActual.A_AlaPt(62) | L | 73 | | Alarm Points | Service stop |
| VentActual.A_AlaPt(63) | L | 74 | | Alarm Points | Electric heating is overheated |
| VentActual.A_AlaPt(64) | L | 75 | | Alarm Points | Frost risk |
| VentActual.A_AlaPt(65) | L | 76 | | Alarm Points | Low efficiency |
| VentActual.A_AlaPt(66) | L | 77 | | Alarm Points | Analogue deicing |
| VentActual.A_AlaPt(67) | L | 78 | | Alarm Points | Rotation guard exchanger |
| VentActual.A_AlaPt(68) | L | 79 | | Alarm Points | Extra alarm 1 |
| VentActual.A_AlaPt(69) | L | 80 | | Alarm Points | Extra alarm 2 |
| VentActual.A_AlaPt(70) | L | 81 | | Alarm Points | Extra alarm 3 |
| VentActual.A_AlaPt(71) | L | 82 | | Alarm Points | Extra alarm 4 |
| VentActual.A_AlaPt(72) | L | 83 | | Alarm Points | Extra alarm 5 |
| VentActual.A_AlaPt(73) | L | 84 | | Alarm Points | Extra alarm 6 |
| VentActual.A_AlaPt(74) | L | 85 | | Alarm Points | Extra alarm 7 |
| VentActual.A_AlaPt(75) | L | 86 | | Alarm Points | Extra alarm 8 |
| VentActual.A_AlaPt(76) | L | 87 | | Alarm Points | Extra alarm 9 |
| VentActual.A_AlaPt(77) | L | 88 | | Alarm Points | Extra alarm 10 |
| VentActual.A_AlaPt(78) | L | 89 | | Alarm Points | Internal battery error |
| VentActual.A_AlaPt(79) | L | 90 | | Alarm Points | Time for service |
| VentActual.A_AlaPt(80) | L | 91 | | Alarm Points | Restart blocked after power on |
| VentActual.A_AlaPt(81) | L | 92 | | Alarm Points | Supply air temp control error |
| VentActual.A_AlaPt(82) | L | 93 | | Alarm Points | SAF control error |
| VentActual.A_AlaPt(83) | L | 94 | | Alarm Points | EAF control error |
| VentActual.A_AlaPt(84) | L | 95 | | Alarm Points | Humidity control error |
| VentActual.A_AlaPt(85) | L | 96 | | Alarm Points | Extra controller control error |
| VentActual.A_AlaPt(86) | L | 97 | | Alarm Points | High supply air temp |
| VentActual.A_AlaPt(87) | L | 98 | | Alarm Points | Low supply air temp |
| VentActual.A_AlaPt(88) | L | 99 | | Alarm Points | Supply air temp max limit |
| VentActual.A_AlaPt(89) | L | 100 | | Alarm Points | Supply air temp min limit |
| VentActual.A_AlaPt(90) | L | 101 | | Alarm Points | High room temp |
| VentActual.A_AlaPt(91) | L | 102 | | Alarm Points | Low room temp |
| VentActual.A_AlaPt(92) | L | 103 | | Alarm Points | High extract air temp |
| VentActual.A_AlaPt(93) | L | 104 | | Alarm Points | Low extract air temp |
| VentActual.A_AlaPt(94) | L | 105 | | Alarm Points | High outdoor air temp |
| VentActual.A_AlaPt(95) | L | 106 | | Alarm Points | Low outdoor air temp |
| VentActual.A_AlaPt(96) | L | 107 | | Alarm Points | Low frost guard temp 1 |
| VentActual.A_AlaPt(97) | L | 108 | | Alarm Points | Low frost guard temp 2 |
| VentActual.A_AlaPt(98) | L | 109 | | Alarm Points | Low frost guard temp 3 |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|-------------------------|-----------|----------------|---------------|--------------|---|
| VentActual.A_AlaPt(99) | L | 110 | | Alarm Points | High temp extra sensor 1 |
| VentActual.A_AlaPt(100) | L | 111 | | Alarm Points | Low temp extra sensor 1 |
| VentActual.A_AlaPt(101) | L | 112 | | Alarm Points | High temp extra sensor 2 |
| VentActual.A_AlaPt(102) | L | 113 | | Alarm Points | Low temp extra sensor 2 |
| VentActual.A_AlaPt(103) | L | 114 | | Alarm Points | High temp extra sensor 3 |
| VentActual.A_AlaPt(104) | L | 115 | | Alarm Points | Low temp extra sensor 3 |
| VentActual.A_AlaPt(105) | L | 116 | | Alarm Points | High temp extra sensor 4 |
| VentActual.A_AlaPt(106) | L | 117 | | Alarm Points | Low temp extra sensor 4 |
| VentActual.A_AlaPt(107) | L | 118 | | Alarm Points | High temp extra sensor 5 |
| VentActual.A_AlaPt(108) | L | 119 | | Alarm Points | Low temp extra sensor 5 |
| VentActual.A_AlaPt(109) | L | 120 | | Alarm Points | High temp selected sensor 1 |
| VentActual.A_AlaPt(110) | L | 121 | | Alarm Points | Low temp selected sensor 1 |
| VentActual.A_AlaPt(111) | L | 122 | | Alarm Points | High temp selected sensor 2 |
| VentActual.A_AlaPt(112) | L | 123 | | Alarm Points | Low temp selected sensor 2 |
| VentActual.A_AlaPt(113) | L | 124 | | Alarm Points | Manual control air unit |
| VentActual.A_AlaPt(114) | L | 125 | | Alarm Points | Manual control supply air |
| VentActual.A_AlaPt(115) | L | 126 | | Alarm Points | Manual control SAF |
| VentActual.A_AlaPt(116) | L | 127 | | Alarm Points | Manual control EAF |
| VentActual.A_AlaPt(117) | L | 128 | | Alarm Points | Manual control heater |
| VentActual.A_AlaPt(118) | L | 129 | | Alarm Points | Manual control exchanger |
| VentActual.A_AlaPt(119) | L | 130 | | Alarm Points | Manual control cooler |
| VentActual.A_AlaPt(120) | L | 131 | | Alarm Points | Manual control damper |
| VentActual.A_AlaPt(121) | L | 132 | | Alarm Points | Manual control heater pump |
| VentActual.A_AlaPt(122) | L | 133 | | Alarm Points | Manual control exchanger pump |
| VentActual.A_AlaPt(123) | L | 134 | | Alarm Points | Manual control cooler pump |
| VentActual.A_AlaPt(124) | L | 135 | | Alarm Points | Manual control recirculation air damper |
| VentActual.A_AlaPt(125) | L | 136 | | Alarm Points | Manual control fresh air damper |
| VentActual.A_AlaPt(126) | L | 137 | | Alarm Points | Manual control exhaust air damper |
| VentActual.A_AlaPt(127) | L | 138 | | Alarm Points | Manual control fire damper |
| VentActual.A_AlaPt(128) | L | 139 | | Alarm Points | Manual control seq. A |
| VentActual.A_AlaPt(129) | L | 140 | | Alarm Points | Manual control seq. B |
| VentActual.A_AlaPt(130) | L | 141 | | Alarm Points | Manual control seq. C |
| VentActual.A_AlaPt(131) | L | 142 | | Alarm Points | Manual control seq. D |
| VentActual.A_AlaPt(132) | L | 143 | | Alarm Points | Manual control seq. E |
| VentActual.A_AlaPt(133) | L | 144 | | Alarm Points | Manual control seq. F |
| VentActual.A_AlaPt(134) | L | 145 | | Alarm Points | Manual control seq. G |
| VentActual.A_AlaPt(135) | L | 146 | | Alarm Points | Manual control seq. H |
| VentActual.A_AlaPt(136) | L | 147 | | Alarm Points | Manual control seq. I |
| VentActual.A_AlaPt(137) | L | 148 | | Alarm Points | Manual control seq. J |
| VentActual.A_AlaPt(138) | L | 149 | | Alarm Points | Output in manual control |
| VentActual.A_AlaPt(139) | L | 150 | | Alarm Points | Input in manual control |

Input status register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|-------------------------|-----------|----------------|---------------|--------------|-------------------------------------|
| VentActual.A_AlaPt(140) | L | 151 | | Alarm Points | Manual control extra controller |
| VentActual.A_AlaPt(141) | L | 152 | | Alarm Points | Manual control motor control 1 |
| VentActual.A_AlaPt(142) | L | 153 | | Alarm Points | Manual control motor control 2 |
| VentActual.A_AlaPt(143) | L | 154 | | Alarm Points | Manual control pretreatment |
| VentActual.A_AlaPt(144) | L | 155 | | Alarm Points | Sensor error outdoor air temp |
| VentActual.A_AlaPt(145) | L | 156 | | Alarm Points | Sensor error intake air temp |
| VentActual.A_AlaPt(146) | L | 157 | | Alarm Points | Sensor error supply air temp |
| VentActual.A_AlaPt(147) | L | 158 | | Alarm Points | Sensor error exhaust air temp |
| VentActual.A_AlaPt(148) | L | 159 | | Alarm Points | Sensor error extract air temp |
| VentActual.A_AlaPt(149) | L | 160 | | Alarm Points | Sensor error room temp 1 |
| VentActual.A_AlaPt(150) | L | 161 | | Alarm Points | Sensor error room temp 2 |
| VentActual.A_AlaPt(151) | L | 162 | | Alarm Points | Sensor error room temp 3 |
| VentActual.A_AlaPt(152) | L | 163 | | Alarm Points | Sensor error room temp 4 |
| VentActual.A_AlaPt(153) | L | 164 | | Alarm Points | Sensor error room temp 5 |
| VentActual.A_AlaPt(154) | L | 165 | | Alarm Points | Sensor error room temp 6 |
| VentActual.A_AlaPt(155) | L | 166 | | Alarm Points | Sensor error room temp 7 |
| VentActual.A_AlaPt(156) | L | 167 | | Alarm Points | Sensor error room temp 8 |
| VentActual.A_AlaPt(157) | L | 168 | | Alarm Points | Sensor error room temp 9 |
| VentActual.A_AlaPt(158) | L | 169 | | Alarm Points | Sensor error room temp 10 |
| VentActual.A_AlaPt(159) | L | 170 | | Alarm Points | Sensor error room temp 11 |
| VentActual.A_AlaPt(160) | L | 171 | | Alarm Points | Sensor error room temp 12 |
| VentActual.A_AlaPt(161) | L | 172 | | Alarm Points | Sensor error room temp 13 |
| VentActual.A_AlaPt(162) | L | 173 | | Alarm Points | Sensor error room temp 14 |
| VentActual.A_AlaPt(163) | L | 174 | | Alarm Points | Sensor error room temp 15 |
| VentActual.A_AlaPt(164) | L | 175 | | Alarm Points | Sensor error room temp 16 |
| VentActual.A_AlaPt(165) | L | 176 | | Alarm Points | Sensor error SAF pressure |
| VentActual.A_AlaPt(166) | L | 177 | | Alarm Points | Sensor error EAF pressure |
| VentActual.A_AlaPt(167) | L | 178 | | Alarm Points | Sensor error SAF flow |
| VentActual.A_AlaPt(168) | L | 179 | | Alarm Points | Sensor error EAF flow |
| VentActual.A_AlaPt(169) | L | 180 | | Alarm Points | Sensor error exchanger pressure SAF |
| VentActual.A_AlaPt(170) | L | 181 | | Alarm Points | Sensor error exchanger pressure EAF |
| VentActual.A_AlaPt(171) | L | 182 | | Alarm Points | Sensor error deicing temp |
| VentActual.A_AlaPt(172) | L | 183 | | Alarm Points | Sensor error frost protection 1 |
| VentActual.A_AlaPt(173) | L | 184 | | Alarm Points | Sensor error frost protection 2 |
| VentActual.A_AlaPt(174) | L | 185 | | Alarm Points | Sensor error frost protection 3 |
| VentActual.A_AlaPt(175) | L | 186 | | Alarm Points | Sensor error CO2 |
| VentActual.A_AlaPt(176) | L | 187 | | Alarm Points | Sensor error humidity room |
| VentActual.A_AlaPt(177) | L | 188 | | Alarm Points | Sensor error humidity duct |
| VentActual.A_AlaPt(178) | L | 189 | | Alarm Points | Sensor error outdoor humidity |
| VentActual.A_AlaPt(179) | L | 190 | | Alarm Points | Sensor error external control SAF |
| VentActual.A_AlaPt(180) | L | 191 | | Alarm Points | Sensor error external control EAF |
| VentActual.A_AlaPt(181) | L | 192 | | Alarm Points | Sensor error extra controller |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|-----------------------------------|-----------|----------------|---------------|------------------|---------------------------------------|
| VentActual.A_AlaPt(182) | L | 193 | | Alarm Points | Sensor error extra sensor 1 |
| VentActual.A_AlaPt(183) | L | 194 | | Alarm Points | Sensor error extra sensor 2 |
| VentActual.A_AlaPt(184) | L | 195 | | Alarm Points | Sensor error extra sensor 3 |
| VentActual.A_AlaPt(185) | L | 196 | | Alarm Points | Sensor error extra sensor 4 |
| VentActual.A_AlaPt(186) | L | 197 | | Alarm Points | Sensor error extra sensor 5 |
| VentActual.A_AlaPt(187) | L | 198 | | Alarm Points | Sensor error external supply setpoint |
| VentActual.A_AlaPt(188) | L | 199 | | Alarm Points | Sensor error external flow setpoint |
| VentActual.A_AlaPt(189) | L | 200 | | Alarm Points | Sensor error filter guard 1 |
| VentActual.A_AlaPt(190) | L | 201 | | Alarm Points | Sensor error filter guard 2 |
| VentActual.A_AlaPt(191) | L | 202 | | Alarm Points | Sensor error efficiency temp |
| VentActual.A_AlaPt(192) | L | 203 | | Alarm Points | Fault communication device |
| VentActual.A_AlaPt(193) | L | 204 | | Alarm Points | Malfunction Extra Controller |
| VentActual.A_AlaPt(194) | L | 205 | | Alarm Points | Internal error |
| VentActual.A_DigitalInput(1) | L | 262 | | Digital inputs | Value of DI1 |
| VentActual.A_DigitalInput(2) | L | 263 | | Digital inputs | Value of DI2 |
| VentActual.A_DigitalInput(3) | L | 264 | | Digital inputs | Value of DI3 |
| VentActual.A_DigitalInput(4) | L | 265 | | Digital inputs | Value of DI4 |
| VentActual.A_DigitalInput(5) | L | 266 | | Digital inputs | Value of DI5 |
| VentActual.A_DigitalInput(6) | L | 267 | | Digital inputs | Value of DI6 |
| VentActual.A_DigitalInput(7) | L | 268 | | Digital inputs | Value of DI7 |
| VentActual.A_DigitalInput(8) | L | 269 | | Digital inputs | Value of DI8 |
| VentActual.A_DigitalInput(9) | L | 270 | | Universal inputs | Value of UDI1 |
| VentActual.A_DigitalInput(10) | L | 271 | | Universal inputs | Value of UDI2 |
| VentActual.A_DigitalInput(11) | L | 272 | | Universal inputs | Value of UDI3 |
| VentActual.A_DigitalInputExp1(1) | L | 274 | | Digital inputs | Value of DI1 Expansion unit 1 |
| VentActual.A_DigitalInputExp1(2) | L | 275 | | Digital inputs | Value of DI2 Expansion unit 1 |
| VentActual.A_DigitalInputExp1(3) | L | 276 | | Digital inputs | Value of DI3 Expansion unit 1 |
| VentActual.A_DigitalInputExp1(4) | L | 277 | | Digital inputs | Value of DI4 Expansion unit 1 |
| VentActual.A_DigitalInputExp1(5) | L | 278 | | Digital inputs | Value of DI5 Expansion unit 1 |
| VentActual.A_DigitalInputExp1(6) | L | 279 | | Digital inputs | Value of DI6 Expansion unit 1 |
| VentActual.A_DigitalInputExp1(7) | L | 280 | | Digital inputs | Value of DI7 Expansion unit 1 |
| VentActual.A_DigitalInputExp1(8) | L | 281 | | Digital inputs | Value of DI8 Expansion unit 1 |
| VentActual.A_DigitalInputExp1(9) | L | 282 | | Universal inputs | Value of UDI1 Expansion unit 1 |
| VentActual.A_DigitalInputExp1(10) | L | 283 | | Universal inputs | Value of UDI2 Expansion unit 1 |
| VentActual.A_DigitalInputExp1(11) | L | 284 | | Universal inputs | Value of UDI3 Expansion unit 1 |

Input status register

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|-----------------------------------|-----------|----------------|---------------|---------------------------|--------------------------------|
| VentActual.A_DigitalInputExp1(12) | L | 285 | | Universal inputs | Value of UDI4 Expansion unit 1 |
| VentActual.A_DigitalInputExp2(1) | L | 286 | | Digital inputs | Value of DI1 Expansion unit 2 |
| VentActual.A_DigitalInputExp2(2) | L | 287 | | Digital inputs | Value of DI2 Expansion unit 2 |
| VentActual.A_DigitalInputExp2(3) | L | 288 | | Digital inputs | Value of DI3 Expansion unit 2 |
| VentActual.A_DigitalInputExp2(4) | L | 289 | | Digital inputs | Value of DI4 Expansion unit 2 |
| VentActual.A_DigitalInputExp2(5) | L | 290 | | Digital inputs | Value of DI5 Expansion unit 2 |
| VentActual.A_DigitalInputExp2(6) | L | 291 | | Digital inputs | Value of DI6 Expansion unit 2 |
| VentActual.A_DigitalInputExp2(7) | L | 292 | | Digital inputs | Value of DI7 Expansion unit 2 |
| VentActual.A_DigitalInputExp2(8) | L | 293 | | Digital inputs | Value of DI8 Expansion unit 2 |
| VentActual.A_DigitalInputExp2(9) | L | 294 | | Universal inputs | Value of UDI1 Expansion unit 2 |
| VentActual.A_DigitalInputExp2(10) | L | 295 | | Universal inputs | Value of UDI2 Expansion unit 2 |
| VentActual.A_DigitalInputExp2(11) | L | 296 | | Universal inputs | Value of UDI3 Expansion unit 2 |
| VentActual.A_DigitalInputExp2(12) | L | 297 | | Universal inputs | Value of UDI4 Expansion unit 2 |
| VentActual.A_DO_SeqPumpY1(0) | L | 322 | | Actual/Setpoint | Start signal pump sequence A |
| VentActual.A_DO_SeqPumpY2 | L | 323 | | Actual/Setpoint | Start signal pump sequence B |
| VentActual.A_DO_SeqPumpY3 | L | 324 | | Actual/Setpoint | Start signal pump sequence C |
| VentActual.A_DO_SeqPumpY4 | L | 325 | | Actual/Setpoint | Start signal pump sequence D |
| VentActual.A_DO_SeqPumpY5 | L | 326 | | Actual/Setpoint | Start signal pump sequence E |
| VentActual.A_DO_SeqPumpY6 | L | 327 | | Actual/Setpoint | Start signal pump sequence F |
| VentActual.A_DO_SeqPumpY7 | L | 328 | | Actual/Setpoint | Start signal pump sequence G |
| VentActual.A_DO_SeqPumpY8 | L | 329 | | Actual/Setpoint | Start signal pump sequence H |
| VentActual.A_DO_SeqPumpY9 | L | 330 | | Actual/Setpoint | Start signal pump sequence I |
| VentActual.A_DO_SeqPumpY10 | L | 331 | | Actual/Setpoint | Start signal pump sequence J |
| VentActual.A_DO_SAFStart(0) | L | 332 | | SAF/EAF Pressure and Flow | Start signal Supply air fan |
| VentActual.A_DO_EAFStart | L | 333 | | SAF/EAF Pressure and Flow | Start signal Extract air fan |
| VentActual.A_DigitalOutput(1) | L | 334 | | Digital outputs | Value of DO1 |
| VentActual.A_DigitalOutput(2) | L | 335 | | Digital outputs | Value of DO2 |
| VentActual.A_DigitalOutput(3) | L | 336 | | Digital outputs | Value of DO3 |
| VentActual.A_DigitalOutput(4) | L | 337 | | Digital outputs | Value of DO4 |

| Signal name | EXOL type | Modbus address | Default value | Function | Description |
|-------------------------------------|-----------|----------------|---------------|--------------------------------------|-----------------------------------|
| VentActual.A_DigitalOutput(5) | L | 338 | | Digital outputs | Value of DO5 |
| VentActual.A_DigitalOutput(6) | L | 339 | | Digital outputs | Value of DO6 |
| VentActual.A_DigitalOutput(7) | L | 340 | | Digital outputs | Value of DO7 |
| VentActual.A_DigitalOutputExp1(1) | L | 341 | | Digital outputs | Value of DO1 Expansion unit 1 |
| VentActual.A_DigitalOutputExp1(2) | L | 342 | | Digital outputs | Value of DO2 Expansion unit 1 |
| VentActual.A_DigitalOutputExp1(3) | L | 343 | | Digital outputs | Value of DO3 Expansion unit 1 |
| VentActual.A_DigitalOutputExp1(4) | L | 344 | | Digital outputs | Value of DO4 Expansion unit 1 |
| VentActual.A_DigitalOutputExp1(5) | L | 345 | | Digital outputs | Value of DO5 Expansion unit 1 |
| VentActual.A_DigitalOutputExp1(6) | L | 346 | | Digital outputs | Value of DO6 Expansion unit 1 |
| VentActual.A_DigitalOutputExp1(7) | L | 347 | | Digital outputs | Value of DO7 Expansion unit 1 |
| VentActual.A_DigitalOutputExp2(1) | L | 348 | | Digital outputs | Value of DO1 Expansion unit 2 |
| VentActual.A_DigitalOutputExp2(2) | L | 349 | | Digital outputs | Value of DO2 Expansion unit 2 |
| VentActual.A_DigitalOutputExp2(3) | L | 350 | | Digital outputs | Value of DO3 Expansion unit 2 |
| VentActual.A_DigitalOutputExp2(4) | L | 351 | | Digital outputs | Value of DO4 Expansion unit 2 |
| VentActual.A_DigitalOutputExp2(5) | L | 352 | | Digital outputs | Value of DO5 Expansion unit 2 |
| VentActual.A_DigitalOutputExp2(6) | L | 353 | | Digital outputs | Value of DO6 Expansion unit 2 |
| VentActual.A_DigitalOutputExp2(7) | L | 354 | | Digital outputs | Value of DO7 Expansion unit 2 |
| VentActual.A_NeedHeatActive | L | 369 | | Supply,Extract and Room temperatures | Is set if ongoing support heating |
| VentActual.A_NeedCoolActive | L | 370 | | Supply,Extract and Room temperatures | Is set if ongoing support cooling |
| VentActual.A_DemandCO2Active | L | 371 | | CO2 | Is set if ongoing support CO2 |
| VentActual.A_RecirculationRunActive | L | 372 | | Actual/Setpoint | Is set if ongoing recycle run |
| VentActual.A_DelcingActive | L | 373 | | Extract air temp/De-icing exchanger | Is set if ongoing de-icing |



HEAD OFFICE AB Regin, Box 116, SE-428 22 Källered • Visiting address: Bangårdsvägen 35, SE-428 36 Källered
Phone: +46 (0)31 720 02 00 • Fax: +46 (0)31 720 02 50 • info@regincontrols.com • www.regincontrols.com